

Smart Tablet Oscilloscope GPS-1000D Series

	RUN 17.5M 250MSa/s Ops	A / 00V	T.	5EO 🚟
			1V 50x	Quick Manu
3.00 <mark>1)</mark> -				<u>, </u>
			17 = r 10x	+ subst Outors
1.0032-				Zoom Qunot
1.033-			·	Claures Curre
			= 19 10x F	Menu Chi Nesset Chi
-3.00 E-				t sth os
			1V = 10x	***** O4
9	(Fee) []] []] 2ms		ित्त 1070	Mark Ref



www.gpslimited.com

Version Info

Version	Date	Remarks
V1.0	2022.04	
V1.1	2024.03	Update Oscilloscope Interface Display, added FFT persist, measure setting etc.

Preface

Dear cu1000Dmers,

Congratulations! Thank you for buying GPS Ltd instrument. Please read this manual carefully before use and particularly pay attention to the "Safety Precautions".

If you have read this manual, please keep it properly for future reference.

The information contained herein are furnished in an "as-is" state, and may be subject to change in future versions without notice.

The standard applicable for this product: GB/T15289-2013.

Features

Parameters:

• Channels: 4 x Analog Channel, 1 x Auxout Channel (1104D)

2 x Analog Channel, 1 x Auxout Channel (1202D)

- Analog Channel Bandwidth: 100MHz (1104D) & 200MHz (1202D)
- Max. Real Time Sampling Rate: 1GSa/s
- Memory Depth: 70Mpts
- Max. Waveform Capture Rate: 130,000 wfms/s
- Vertical Sensitivity Range: 1mV/div~10V/div
- Timebase Range: 2ns/div~1000s/div
- 8-inch seamless touch screen, 800*600 resolution

- 32GB Large 1000Drage
- ABS+TPU shell protection, TPE handle, Compact Size at 265*192*50mm
- Portable and Benchtop, built-in 7500mAh lithium battery, only 1.9kg, support 5-hour outdoor work

Functions:

- Equipped with SigtestTM multitasking system, stable and reliable operation
- Built-in User Manual, large screen for easy reading
- Support channel label rename, quick setting of channel parameters
- Built-in App1000Dre, rich Android Apps: Electronic Tools, WPS, Browsers, etc.
- ES File Explorer support file management and FTP wireless transfer
- Waveform data saved in 3 formats (WAV, BIN, CSV)

- Support Screenshot, Timestamp and Color Inversion
- Support quick video recording
- Support wireless waveform screenshot printing
- Support 256-level grayscale digital fluorescent display and color temperature display
- Support persistence display
- Support open 4 reference waveforms at the same time, support fixed selection of current channel
- 10 cu1000Dm oscilloscope settings can be saved
- 50% key, support one-key centering of time base, trigger level, cursor, and channel position
- Support 4 sampling methods: normal, average, envelope, peak-to-peak
- Support AutoSetting & AutoRange, AUTO complete in 1 second
- Up to 31 measurements, one-press to display all on screen, Support 6-bit frequency meter

- Rich trigger functions: edge, pulse width, logic, N edge, runt, slope, timeout, video, UART, I2C, SPI, CAN, CAN FD, LIN, 429, 1553B
- Rich serial bus decoding function (optional): UART, I2C, SPI, CAN, CAN FD, LIN, 429, 1553B, support 2 decoding channels, support decoding text mode
- Supports advanced mathematical functions: square root Sqrt(), absolute value Abs(), degree Deg(), radian Rad(), exponent Exp(), differential Diff(), logarithm ln(), sine Sine(), cosine Cos(), Tangent Tan(), Integral Intg(), Logarithmic Log(), arcsin(), arccos(), arctan(), built-in ZOOM and FFT functions
- Support High/Low pass hardware filtering (low to 30KHz), rule out insignificant frequencies to eliminate interference
- Support power off lock for safe travel
- Complete interfaces: Wi-Fi, USB 3.0/2.0 Host, USB type-C, Grounding, HDMI, Trigger out
- Support PC software and mobile phone App remote control, support FTP file wireless transfer

- Support English, Chinese, German, French, Czech, Korean, Spanish, Italian and other languages
- Support mouse operation
- Support anti-theft Kensington lock
- Support online firmware upgrade function
- Optional current probe, differential probe, optical isolated probe, special suitcase, handbag and other oscilloscope accessories

Table of Contents

Table of Contents

TABLE OF CONTENTS	I
TABLE OF CONTENTS	1
1.1 SAFETY PRECAUTIONS 1.2 SAFETY TERMS AND SYMBOLS	1
1.2 SAFETY TERMS AND SYMBOLS	5
CHAPTER 2. QUICK START GUIDE OF OSCILLOSCOPE	8
2.1 INSPECT PACKAGE CONTENTS	9
2.2 USE THE BRACKET	
2.3 Side Panel	
2.4 Rear Panel	
2.5 TOP PANEL	
2.6 FRONT PANEL	
 2.5 TOP PANEL 2.6 FRONT PANEL 2.7 POWER ON/OFF THE OSCILLOSCOPE 	
2.8 UNDERSTAND THE OSCILLOSCOPE DISPLAY INTERFACE	
2.9 INTRODUCTION BASIC OPERATIONS OF TOUCH SCREEN	
2.10 Mouse Operation	
2.11 CONNECT PROBE TO THE OSCILLOSCOPE	
2.12 Use Auto	
2.13 LOAD FACTORY SETTINGS	
2.14 USE AUTO-CALIBRATION	

2.15 PASSIVE PROBE COMPENSATION	
2.16 Modify the Language	
CHAPTER 3 OPERATE THE OSCILLOSCOPE WITH BUTTONS	
3.1 FUNCTION BUTTONS	40
3.2 MENU NAVIGATION SWITCH	
3.3 CURSOR	
3.4 HORIZONTAL SYSTEM	
3.5 VERTICAL SYSTEM	
3.6 TRIGGER SYSTEM	
3.7 HOMEPAGE, SCREEN LOCK	
CHAPTER 4 HORIZONTAL SYSTEM	
4.1 MOVE THE WAVEFORM HORIZONTALLY	
4.2 Adjust the Horizontal Time Base (time/div)	51
 4.3 Pan and Zoom Single or 1000Dpped Acquisitions	
4.4 Roll, XY	
4.5 ZOOM MODE CHAPTER 5 VERTICAL SYSTEM	63 6 7
5.1 OPEN/CLOSE WAVEFORM (CHANNEL, MATH, REFERENCE WAVEFORMS)	
5.2 Adjust Vertical Sensitivity	74
5.3 Adjust Vertical Position	
5.4 Open Channel Menu	
5.4.1 Set Channel Coupling	
5.4.2 Set Bandwidth Limit	

Table of Contents

5.4.3 Waveform Inversion	
5.4.4 Set Probe Type	
5.4.5 Set Probe Attenuation Coefficient	
5.4.6 Vertical Expansion Reference	
5.4.7 Labels	
CHAPTER 6 TRIGGER SYSTEM	
6.1 Trigger and Trigger Adjustment	
6.2 Edge Trigger	
6.3 Pulse Width Trigger	
6.4 Logic Trigger	114
6.5 NTH EDGE TRIGGER	
6.6 Runt Trigger	
6.7 Slope Trigger	
6.8 TIMEOUT TRIGGER	
6.9 Video Trigger	
6.10 Serial Bus Trigger	
CHAPTER 7 ANALYSIS SYSTEM	
7.1 AUTOMATIC MEASUREMENT	140
7.2 FREQUENCY METER MEASUREMENT	
7.3 CURSOR	
CHAPTER 8 SCREEN CAPTURE, MEMORY DEPTH AND WAVEFORM 1000DRAGE	
8.1 Screen Capture Function	

8.2 VIDEO RECORDING
8.3 WAVEFORM 1000DRAGE 174
8.4 OSCILLOSCOPE SETTING SAVE
9.1 DUAL WAVEFORM CALCULATION
9.2 FFT MEASUREMENT
9.3 Advanced Math
9.4 Reference Waveform Call
CHAPTER 10 DISPLAY SETTINGS
10.1 WAVEFORM SETTINGS
10.2 GRATICULE SETTING
10.3 Persistence Setting
10.4 Horizontal Expansion Center
10.5 Color Temperature Setting
10.6 TIME BASE MODE SELECTION
CHAPTER 11 SAMPLING SYSTEM
11.1 SAMPLING OVERVIEW
11.2 Run/1000Dp Key and Single SEQ Key
11.3 SELECT SAMPLING MODE
11.4 Record Length and Sampling Rate
12.1 UART (RS232/RS422/RS485) BUS TRIGGER AND DECODE

Table of Contents

12.2 LIN Bus Trigger and Decode	
12.3 CAN (FD) Bus Trigger and Decode	
12.4 SPI Bus Trigger and Decode	
12.5 I2C Bus Trigger and Decode	
12.6 ARINC429 Bus Trigger and Decode	
12.7 1553B Bus Trigger and Decode	
CHAPTER 13 HOMEPAGE FUNCTIONS	292
13.1 OSCILLOSCOPE (SEE CHAPTERS 2~12)	
13.2 App 1000Dre 294	
13.3 Settings	
13.4 File Manager	
13.5 CALCULATOR	
13.6 Browser	
13.7 GALLERY	
13.8 CALENDAR	
13.9 Electronic Tools	
13.10 CLOCK	
13.11 Power Off	
13.12 ES FILE EXPLORER	
14.1 Host Computer	
14.1.1 Installation of Host Computer Software	
14.1.2 Connection of Host Computer	

14.1.3 Main Interface Introduction 14.1.4 Operation Interface Introduction	
14.1.4 Operation Interface Introduction	
14.1.5 1000Drage and View of Pictures and Videos	
14.2 Mobile Remote Control	
14.3 SCPI CHAPTER 15 UPDATE AND UPGRADE FUNCTIONS	
CHAPTER 15 UPDATE AND UPGRADE FUNCTIONS	
15.1 Software Update	
15.2 ADD OPTIONAL FUNCTIONS	
CHAPTER 16 REFERENCE	338
16.1 Measurement Category	
16.2 Pollution Degree	
CHAPTER 17 TROUBLESHOOTING	
CHAPTER 18 SERVICES AND SUPPORT	
ANNEX	
ANNEX A:MAINTENANCE AND CARE OF OSCILLOSCOPE	
ANNEX B: ACCESSORIES	

Chapter 1. Safety Precautions

Chapter 1. Safety Precautions

1.1 Safety Precautions

The following safety precautions must be under1000Dod to avoid personal injury and prevent damage to this product or

any products connected to it. To avoid possible safety hazards, it is essential to follow these precautions while using this product.

- Only professionally trained personnel can operate the maintenance procedure.
- Avoid fire and personal injury.
- Use proper power cord. Use only the power cord specified for this product and certified for the country/region of use.
- Connect and disconnect probes properly. Connect the instrument probe correctly, and its ground terminal is ground phase. Do not connect or disconnect probes or test leads while they are connected to a voltage source.

Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement product.

- Ground the product. To avoid electric shock, the instrument grounding conductor must be connected to earth ground.
- Observe all terminal ratings. To avoid fire or shock hazard, observe all rating and markings on the product. Consult the product manual for further information of ratings before making connections to the product.
- User correct probes. To avoid excessive electric shock, use only correct rated probes for any measurement.
- **Disconnect AC power**. The adapter can be disconnected from AC power and the user must be able to access the adapter at any time.
- **Do not operate without covers**. Do not operate the product with covers or panels removed.
- **Do not operate with suspected failures**. If you suspect that there is damage to this product, have it inspected by service personnel designated by GPS Ltd.

Chapter 1. Safety Precautions

- Use adapter correctly. Supply power or charge the equipment by power adapter designated by GPS Ltd, and charge the battery according to the recommended charging cycle.
- Avoid exposed circuitry. Do not touch exposed connections and components when power is present.
- Provide proper ventilation.
- Do not operate in wet/damp conditions.
- Do not operate in a flammable and explosive atmosphere.
- Keep product surfaces clean and dry.
- The disturbance test of all models complies with Class A standards, based on EN61326:1997+A1+A2+A3, but do not meet Class B standards.

Measurement Category

The 1000D Series oscilloscope is intended to be used for measurements in Measurement Category I.

Measurement Category Definition

Measurement category I is for measurements performed on circuits not directly connected to the MAINS. Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the user must understand the transient withstand capability of the equipment.

Warning

IEC Measurement Category. Under IEC Category I mounting conditions, the input terminal can be connected to the circuit terminal with a maximum line voltage of 300Vrms. To avoid the risk of electric shock, the input terminal should not be connected to the circuit with a line voltage greater than 300Vrms. Instantaneous overvoltage is present in circuits that are isolated from the mains supply. The 1000D Series digital oscilloscope is designed to safely withstand sporadic transient overvoltage up to 1000Vpk. Do not use this equipment for any measurements in

circuits where the instantaneous overvoltage exceeds this value.

Chapter 1. Safety Precautions

1.2 Safety Terms and Symbols

Terms in the manual

These terms may appear in this manual:

▲ Warning. Warning statements indicate conditions or practices that could result in injury or loss of life.
▲ Caution. Caution statements indicate conditions or practices that could result in damage to this product or other property.

Terms on the product

These terms may appear on the product:

Danger indicates an injury hazard immediately accessible as you read the marking.

Warning indicates an injury hazard not immediately accessible as you read the marking.

Caution indicates a hazard to this product or other properties.

Symbols on the product

The following symbols may appear on the product:





Hazardous Voltage

Caution Refer to Manual



Protective Ground Terminal

H

Chassis Ground

Measurement Ground Terminal

Please read the following safety precautions to avoid personal injury and prevent damage to this product or any products connected to it. To avoid possible hazards, this product can only be used within the specified scope.

Warning

If the instrument input port is connected to a circuit with the peak voltage higher than 42V or the power exceeding 4800VA, to avoid electric shock or fire:

Chapter 1. Safety Precautions

- User only insulated voltage probes supplied with the instrument, or the equivalent product indicated in the schedule.
- Before use, inspect voltage probes, test leads, and accessories for mechanical damage and replace when damaged.
- *Remove voltage probes and accessories not in use.*
- *Plug the battery charger into the AC outlet before connecting it to the instrument.*

This chapter contains checks and operations of the oscilloscope. You are recommended to read them carefully to

understand appearance, power on/off, settings and related calibration requirements of the 1000D Series oscilloscope.

- Inspect package contents
- Use bracket
- Side panel & rear panel
- Front panel
- Power on/off the oscilloscope
- Understand the oscilloscope display interface
- Introduction to basic operations of oscilloscope

- Mouse operation
- Connect probe to the oscilloscope
- Use automatic
- Use factory settings
- Use auto-calibration
- Passive probe compensation
- Modify the language

2.1 Inspect Package Contents

When you open package after receipt, please check the instrument according to the following steps.

1) Inspect if there is any damage caused by transportation

If the package or foam is found to be severely damaged, please retain it until the instrument and accessories pass the electrical and mechanical properties test.

2) Inspect the accessories

A detailed description is given in "<u>Annex B</u>" of this manual. You can refer it to check if the accessories are complete. If the accessories are missing or damaged, please contact GPS Ltd's agent or local office.

3) Inspect the instrument

If any damage to oscilloscope is found by the appearance inspection or it fails to pass the performance test,

please contact GPS Ltd's agent or local office. If the instrument is damaged due to transportation, please retain

the package and contact the transportation company or GPS Ltd's agent, and GPS Ltd will make arrangement.

2.2 Use the Bracket

Put the front panel of the oscilloscope flatly on the table. Use your two index fingers to hold the underside of the


bracket and open the bracket by slightly upwards force, as shown in Figure 2-1.



Figure 2-1 Open Bracket

 2.3 Side Panel





There are various interfaces on the side of the oscilloscope, from left to right: Power-on button, Grounding, Probe compensation signal output, USB Host, HDMI, USB Device, Power-off lock, and Power port.

2.4 Rear Panel

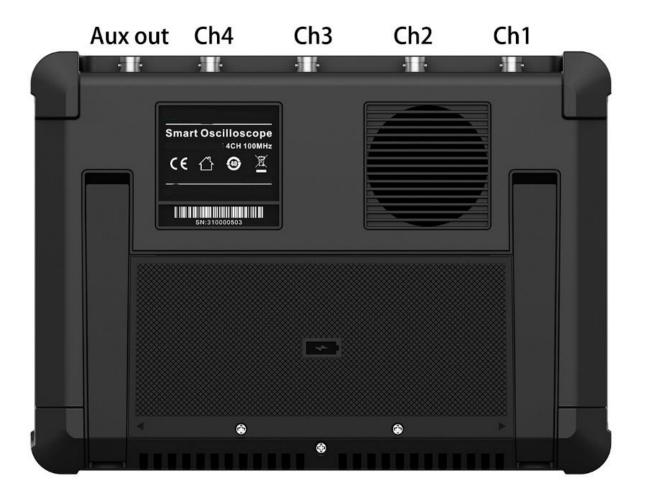


Figure 2-3 Rear Panel

- a) Ch1 Ch4 are signal measurement channels
- b) Aux out is an auxiliary channel, which is mainly used to measure the waveform refresh rate of the oscilloscope and cascade the current oscilloscope signal to other oscilloscopes.

2.5 Top Panel



Figure 2-4 Top Panel of Tablet Oscilloscope

On top of the oscilloscope is the BNC interface for probe connection.

2.6 Front Panel

		Smart series 1 GSa/s
		SEQ
RUN 17.5M 250MSa/s 0ps A _ 0v	Д	
	= 1V 10X F	Quick Menu
3.00 D		
		+ + A + Select
1.00 E		Zoom
	• Level	<source/>
-1.00 V3>		<source/>
		Position
-3.00 I		★ → ★ → ★ To 50%
		Scale Л
		~~~
CHx Fine II II 2ms JL	(;; ⊑ 10:07 €	Math
Tablet Oscilloscope		Screen Lock

Figure 2-5 Front Panel of Tablet Oscilloscope

# 2.7 Power on/off the Oscilloscope

### **Power on/off the oscilloscope**

### First time start

- Connect power adapter to the oscilloscope, and the oscilloscope should not be pressed on the adapter cable.
- Press the power button to start the instrument.

### Power on

• Press the power button to start the instrument while ensuring it is connected to a power supply.

### Power off

- Press the power button 0, go to power-off interface, and click to turn off the instrument.
- Long press the power button 0 for forced power-off of the instrument.

### **Power-off lock**

16

• Turn the power-off lock switch to OFF, the oscilloscope cannot be turned on.

Caution: Forced power-off may result in loss of unsaved data, please use with caution.

# 2.8 Understand the Oscilloscope Display Interface

This section provides a brief introduction and description of the 1000D Series oscilloscope user's interface. After reading this section, you can be familiar with the oscilloscope display interface content within the shortest possible time. The specific settings and adjustments will be detailed in subsequent chapters and sections. The following items may appear on the screen at a given time but not all items are visible. The oscilloscope interface is shown in Figure 2-6.

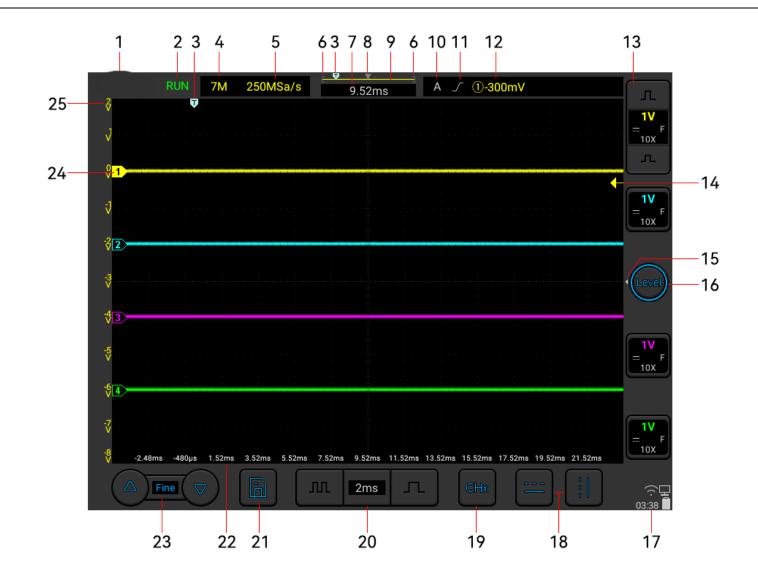


Figure 2-6 Oscilloscope Interface Display

No.	Description
1	GPS Ltd logo
2	Oscilloscope status, including RUN, 1000DP, WAIT, Auto
3	Trigger position
4	Sampling rate indication
5	Memory depth indication
6	The area in "[]" indicates the position of waveform displayed on the screen throughout the memory
	depth
7	Delay time, the time at which the center line of the waveform display area is relative to the trigger
	point
8	Center line of waveform display area
9	Memory depth indicate line
10	Trigger Mode: A(auto), N(Normal).

No.	Description
11	Current trigger type indication
12	Current trigger source, trigger level
13	CH1、CH2、CH3、CH4 channel icons and vertical sensitivity icon. Tap the channel icons to open channels; Click $\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
14	trigger level indication
15	Trigger quick start menu indicator: swipe left to open trigger quick start menu
16	Trigger level adjustment, press on the button to modify the trigger level through upward and downward movements.
17	Display areas of USB-PC connection, USB connection, battery level, time etc.
18	Horizontal and vertical cursors open and close.

No.	Description
19	Current channel selection. Click to pop up the current channel switching menu to switch the current
	channel.
20	Horizontal time base control icon. Tap the left/right time base buttons to adjust the horizontal time
	base of the waveform. Tap the time base to open the time base table. Tap to select the desired time
	base.
21	Quick save. Tap to quickly save the waveform as a reference waveform.
22	The horizontal position value of the trigger position indicator.
23	Fine adjustment button. Tap the button to finely adjust the last operation, including waveform
	position, trigger level position, trigger point and cursor position.
24	Channel indicator can indicate the zero-level position of the open channel.
25	The vertical position value of the channel indicator.

Table 2-1 Description of Oscilloscope Display Interface

### 2.9 Introduction Basic Operations of Touch Screen

The 1000D Series oscilloscope operates mainly by tap, swipe, single-finger drag.



Tap button on the touch screen to activate the corresponding menu and function. Tap any blank space on the screen to exit the menu.

# **Swipe**

Single-finger swipe: to open/close menus, including main menu, shortcut menu button and other channel menu operations. For example, the main menu is opened as shown in Figure 2-7. The closing method is the opposite of the opening method.

	R	UN 14	M 500N	/ISa/s	E	. <b>⊽</b> Ops	A	J (1)	0V 🕓			
Measure		Save	Sample	Di	splay	Trigger	A	uto	Use		6	
Common	C	ounter										
●CH4												
	f f Freq.	RiseTime	FallTime	Delay	ft_ +Duty	J] -Duty	 +Width	-Width	ffff BurstW.	ROV	FOV	
Phase I	РК-РК	Amp.	f Tigh	Low	Max	ſſ Min	RMS	CRMS	Mean	CMean		Lev
										C	Clear	
												3
00 <mark>4</mark>												Гл
												1V 
СНх		Fine			i سر	2ms	л					10 г
CHIX	) \	The				21115						10:3

Figure 2-7 Slide out of Main Menu

Tap the options in the main menu to enter the corresponding submenu.

# **1** Single-finger drag

For coarse adjustments of vertical position, trigger point, trigger level, cursor, etc. of the waveform. Refer to "<u>4.1</u> Horizontal Move Waveform" and "5.3 Adjust Vertical Position" for details.

## **2.10 Mouse Operation**

Connect the mouse to the "USB Host" interface, then operate the oscilloscope with the mouse. The left button, right button and scroll wheel of the mouse have the same functions as the finger touch function. Figure 2-8 is a schematic

diagram of the mouse single click to select "Run/1000Dp" function under the "Menu" option in the "Short-cut Menus".



Figure 2-8 Mouse Cursor

#### **2.11 Connect Probe to the Oscilloscope**

- 1) Connect the probe to the oscilloscope channel BNC connector.
- 2) Connect the retractable tip on the probe to the circuit point or measured equipment. Be sure to connect the probe ground wire to the ground point of the circuit.

## ⚠ Maximum input voltage of the analog input

Category I 300Vrms, 400Vpk.

### 2.12 Use Auto

Once the oscilloscope is properly connected and a valid signal is input, tap the Auto Set button to quickly configure the oscilloscope to be the best display effects for the input signal. While the oscilloscope in auto state, the Auto Set button will light up Auto.

Auto is divided into Auto Set and Auto Range. It is defaulted as Auto Set.

Auto Set — Single-time auto, and each time press "Auto", the screen displays "Auto" in the upper left corner. The oscilloscope can automatically adjust the vertical scale, horizontal scale and trigger setting according to the amplitude and frequency of signals, adjust the waveform to the appropriate size and display the input signal. After adjustments, exit from the auto set, the "Auto" in the upper left corner disappears.

Channels may be automatically opened. Any channel greater or less than the threshold level can be opened or closed automatically according to the set threshold level. The threshold level can be settable.

Source can be automatically triggered, and the triggered source channel can be automatically set to select priority to the current signal or to the maximum signal.

Open the main menu. Tap "Auto" to open the auto set menu, including channel open/close setting, threshold voltage setting and trigger source setting.

Measure	Save	Sample	Display	Trigger	Auto	Userset	
AutoSet	AutoRange						
Auto Chan detecti			Threshold level	10			
Auto trigo source setti		Max					

Figure 2-9 Open Auto Set

Automatic configuration includes: single channel and multiple channels; automatic adjustment of the horizontal time base, vertical sensitivity and trigger level of signal; the oscilloscope waveform is inverted off, the bandwidth

limit sets to full bandwidth, it sets as DC coupling mode, the sampling mode is normal; the trigger type is set to edge trigger and the trigger mode is automatic.

**Note:** The application of Auto Set requires that the frequency of measured signal is no less than 20Hz, the duty ratio is greater than 1% and the amplitude is at least 2mVpp. If these parameter ranges are exceeded, Auto Set will fail.

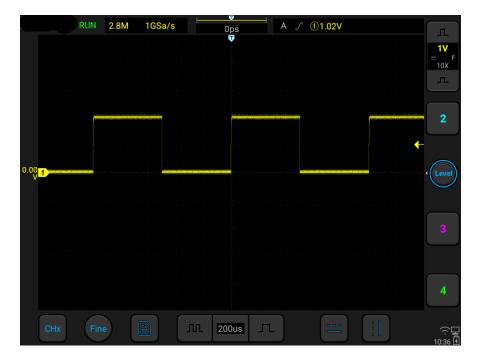


Figure 2-10 Auto Set Waveform

**Auto Range** - Continuously automatic, the oscilloscope continuously adjusts the vertical scale, horizontal time base and trigger level in a real-time manner according to the magnitude and frequency of signal. It is defaulted as off and needs to be opened in the menu. This function is mutually exclusive with "Auto Set".

Open the main menu and tap "Auto" to open the auto range menu for the corresponding settings. When the oscilloscope auto range function is turned on, the oscilloscope will automatically set various parameters, including: vertical scale, horizontal time base, trigger level, etc. When the signal is connected, these parameters will automatically change, and the signal does not need to be operated again after the change. The oscilloscope will automatically recognize and make the appropriate changes.

- Auto range: Turn the auto range function on or off
- Vertical scale: Turn on the vertical scale automatic adjustment function;
- Horizontal time base: Turn on the horizontal time base automatic adjustment function;
- Trigger level: Turns on the auto-adjust trigger level function.

Measure	Save	Sample	Display	Trigger	Auto	Userset
AutoSet	AutoRange					
Auto R	ange 💶					
Ve	ertical	Horizor	ntal 💶	Le	evel 💶	

Figure 2-11 Open Auto Range

Auto Range is usually more useful than Auto Set under the following situations:

- 1) It can analyze signals subject to dynamic changes.
- 2) It can quickly view several continuous signals without adjusting the oscilloscope. This function is very useful if you need to use two probes at the same time, or if you can only use the probe with one hand because the other hand is full.
- 3) Control the automatic adjustment setting of the oscilloscope.

## **2.13 Load Factory Settings**

Open the main menu, tap "User Settings" to enter the user setting page. Tap "Factory Settings" and the dialog box for loading factory settings will pop-up. Press "OK" and load the factory settings. The dialog box for loading factory settings is shown in Figure 2-12.

Measure	Save	Sample	Display	Trigger	Auto	Userset	
Factory Reset	Self Adjust						
Please make	e sure to reset fact	ory config!		ок			



## 2.14 Use Auto-calibration

Open the main menu, tap "User Settings" to enter the user setting page. Tap "Auto Calibration" to enter the autocalibration mode. When the auto-calibration function is active, the upper left corner of the screen displays "Calibrating" in red, and after calibrating is finished, the word in red disappears. When the temperature changes largely, the auto-calibration function can make the oscilloscope maintain the highest accuracy of measurement.

- Auto-calibration should be done without probe.
- Auto-calibration process takes about two minutes.
- If the temperature changes above  $10^{\circ}$ C, we recommended users perform the auto-calibration.

### **2.15 Passive Probe Compensation**

Before connecting to any channels, users should make a probe compensation to ensure the probe match the input channel. The probe without compensation will lead to larger measurement errors or mistakes. Probe compensation can optimize the signal path and make measurement more accurate. If the temperature changes  $10^{\circ}$ C or above, this program must run to ensure the measurement accuracy.

#### Probe compensation may be conducted in the following steps:

 First, connect the oscilloscope probe to CH1. If a hook head is used, make sure that it is in good connection with the probe.

2) Connect the probe to the calibration output signal terminal and connect the probe ground to the ground

terminal. As shown in Figure 2-13.



Figure 2-13 Probe Connection

3) Open the channel (if the channel is closed).

- 4) Adjust the oscilloscope channel attenuation coefficient to match the probe attenuation ratio.
- 5) Tap Auto button or manually adjust the waveform vertical sensitivity and horizontal time base. Observe the shape of the waveform, see Figure 2-14.

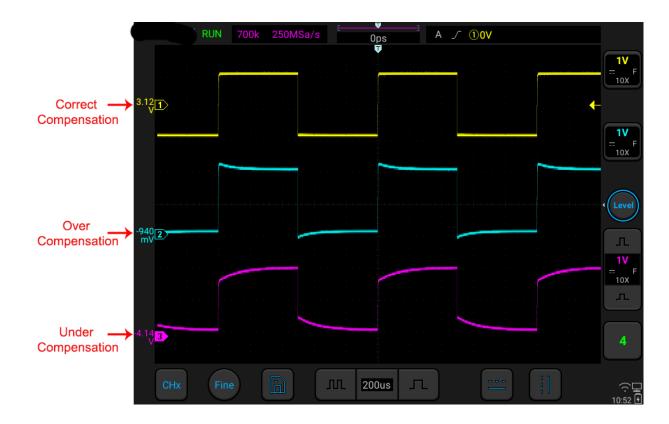


Figure 2-14 Probe Compensation

If the waveform on the screen is shown as "under-compensation" or "over-compensation", please adjust the trimmer capacitor until the waveform shown on the screen as "correct-compensation". The probe adjustment is shown in Figure 2-15.



Figure 2-15 Probe Adjustment

The safety ring on the probe provides a safe operating range. Fingers should not exceed the safety ring when using the probe, so as to avoid electric shock.

- 6) Connect the probe to all other oscilloscope channels (Ch2 of a 2-channel oscilloscope, or Ch 2, 3 and 4 of a 4channel oscilloscope).
- 7) Repeat this step for each channel.

# **Warning**

- Ensure the wire insulation is in good condition to avoid probe electric shock while measuring high voltage.
- *Keep your fingers behind the probe safety ring to prevent electric shock.*
- When the probe is connected a voltage source, do not touch metal parts of the probe-head to prevent electric shock.
- *Before any measurement, please correctly connect the probe ground end.*

## 2.16 Modify the Language

To modify the display language, please refer to "13.3 Settings - Language and Input Method".

# **Chapter 3 Operate the Oscilloscope with Buttons**

This chapter contains operating details of the oscilloscope with buttons. The button areas can be used to either operate oscilloscope without touch screen, or used with the touch screen. You are recommended to read this chapter carefully to understand the operation of buttons of the 1000D Series oscilloscope.

- Function buttons
- Multi-function area
- Cursor
- Vertical system
- Horizontal system
- Trigger system
- Home page, screen lock

#### Chapter 3 Operate the Oscilloscope with Buttons



Figure 3-1 Button Areas

#### **3.1 Function Buttons**

#### Auto

Use Auto on the right function button area to turn on the Auto Set function. Each time you press "Auto", the oscilloscope can recognize the type of input signal and adjust the control mode. It automatically adjusts the vertical scale, horizontal scale and trigger settings. Adjust to the waveform to the best display state.

For details, please refer to "2.11 Use Auto" in Chapter 2.

#### **Run/1000Dp and Single SEQ**

Press to quickly freeze and capture the current signal waveform, and click again, the waveform continues to run;

Press for single acquisition. The oscilloscope displays the waveform acquired in a single acquisition. In the roll mode and large time base mode, the acquisition will 1000Dp at full screen.

For details, please refer to "<u>11.2 Run/1000Dp and Single SEQ Butt</u>ons" in Chapter 11.

Chapter 3 Operate the Oscilloscope with Buttons

Screen capture: Press to enable the on-screen screen capture function of the oscilloscope. Click the screen capture option for other applications.

Note: Auto, Run/1000Dp, Single SEQ button functions and Screen capture can also be accessed by simply clicking on the menu options in the pull-up menu.

### 3.2 Menu Navigation Switch

#### Menu opening and closing

Press Quick Menu to open or close the bottom menu.

Press top Menu to open or close the main menu.

#### Menu switching

After opening the menu, use the menu navigation switch to shuttle through the menu. This navigation

switch is an intuitive way to add 5 button's worth of interfacing with a single component. Inside is 5 switches: left,

right, up, down, and 'select' (pressing down). Press to select the menu and automatically enter the next menu. Press



to return to the previous menu.

## 3.3 Cursor

Cursor on and off: Press ^{Cursor=} button to turn on the horizontal cursor, press ^{CursorII} button to turn on the vertical cursor.



Cursor linkage: Press the select to enter the cursor linkage.



Cursor movement: Left & right switch to adjust the X1 or X2 cursor, up & down switch



adjust the Y1 or Y2 cursor;

www.gpslimited.com


Chapter 3 Operate the Oscilloscope with Buttons

### **3.4 Horizontal System**

Adjust the horizontal time base: In the horizontal adjustment area, Left & right scale navigation switch adjust the horizontal time base of all analog channels (current channels).

Adjust the horizontal position: In the horizontal adjustment area, Left & right position navigation switch to

move the waveform horizontal position of all analog channels. Press the position navigation switch to move the trigger position of all analog channels (current) to the center of the horizontal direction.

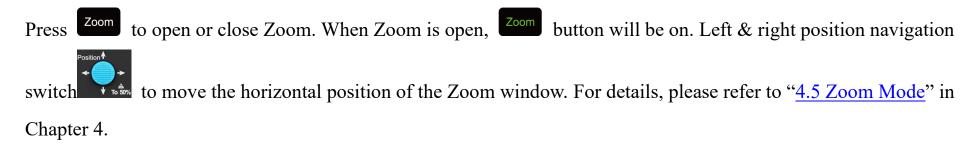

# **3.5 Vertical System Analog Channel Open/close**: Press the analog channel button ^{Ch1}, ^{Ch2}, ^{Ch3}, ^{Ch4}, ^{Ref}, ^{Math}, to cyclically realize the functions: open the channel, switch the current channel, and close the channel. When channel is open, Ch2 Ch4 Ref Math button will be on. Adjust the vertical sensitivity: Up & down scale navigation switch to adjust the vertical sensitivity of the current channel so that the waveform is displayed on the screen at an appropriate size. Adjust the vertical position: Up & down position navigation switch to adjust the vertical position of the current channel. Press the position navigation switch to move the current channel waveform to the vertical center of the screen.

Chapter 3 Operate the Oscilloscope with Buttons

#### Serial bus channel

Long press the ^{Math} to open S1 channel, press the bottom ^{Menu} to open S1 channel menu, long press the ^{Math} buttons again to close the S1 channel.

Long press the to open S2 channel, press the bottom ^{Menu} to open S1 channel menu, long press the ^{Ref} buttons again to close the S2 channel.

**Note:** The vertical system function can also be realized by simply selecting the 50% button from the menu option in the pull-up menu.

# 3.6 Trigger System

Adjust the trigger level: Up & down trigger navigation switch to adjust the current trigger level;




 
**Trigger source switching**: Left & right trigger navigation switch to switch the trigger source;

Adjust the trigger hold-off time: Open the trigger hold-off time adjustment frame, as shown in the figure below.



Left & right menu navigation switch for coarse adjustment, up & down menu navigation switch for fine adjustment.

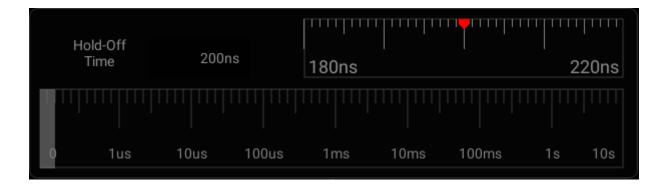



Bus threshold level adjustment and switching: After opening the serial bus channel, long press trigger navigation

switch between bus threshold level and trigger level.

For details, please refer to "Chapter 6 Trigger System".

Trigge

Chapter 3 Operate the Oscilloscope with Buttons

### 3.7 Homepage, Screen Lock

Home: Press , switch to the oscilloscope homepage. For details, please refer to "<u>Chapter 13 Homepage</u> <u>Functions</u>".

Screen lock: Press Touch off make touch screen function of the oscilloscope fails, and the button light is on

Note: The Home button function can also be accessed by simply clicking on the menu option in the pull-up menu.

# **Chapter 4 Horizontal System**

This chapter contains the detailed information of the horizontal system of the oscilloscope. You are recommended

to read this chapter carefully to understand the set functions and operation of the horizontal system of the 1000D Series oscilloscope.

- Move the waveform horizontally
- Adjust the horizontal time base (time/div)
- Pan and zoom single or 1000Dpped acquisitions
- Roll, XY
- Zoom mode

#### Chapter 4 Horizontal System

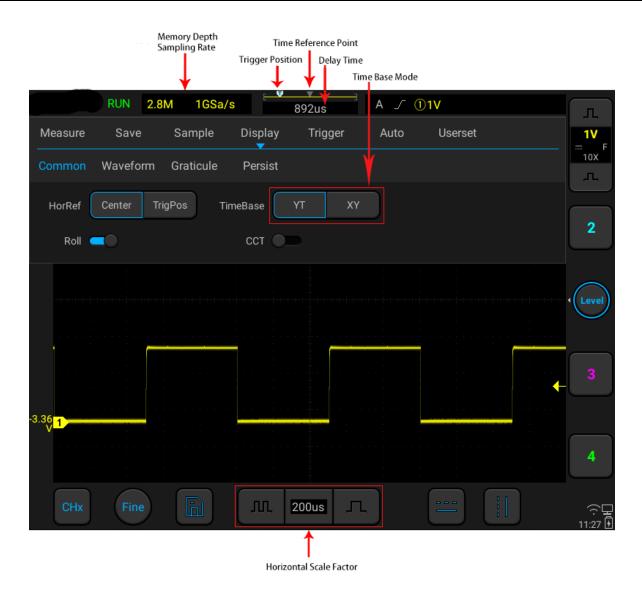


Figure 4-1 Horizontal system

## 4.1 Move the Waveform Horizontally

Put one finger on the waveform display area to swipe left and right, for the coarse adjustment of the waveform position horizontally of all analog channels; after moving the waveform, tap the fine adjustment button in the lower left corner of the screen for fine adjustment.

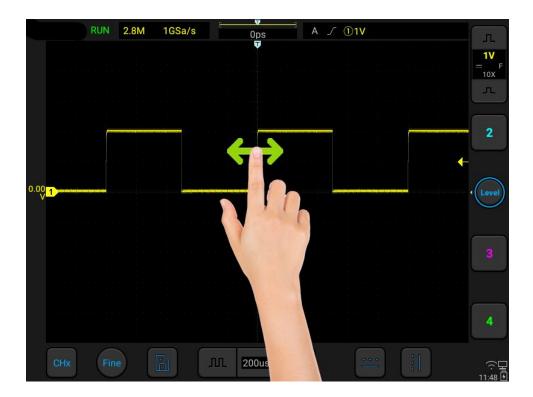


Figure 4-2 Move the Waveform Horizontally on the Screen

Chapter 4 Horizontal System

### 4.2 Adjust the Horizontal Time Base (time/div)

#### Method 1: Soft Keys

Tap  $\square$ ,  $\square$  buttons to adjust the horizontal time base of all analog channels (current channels). Tap  $\square$  button to increase the horizontal time base; tap  $\square$  button to zoom out the horizontal time base (see Figure 4-3 Adjust the Horizontal Time Base). The horizontal time base is stepped in 1-2-5, while the waveform changes as the time base changes.

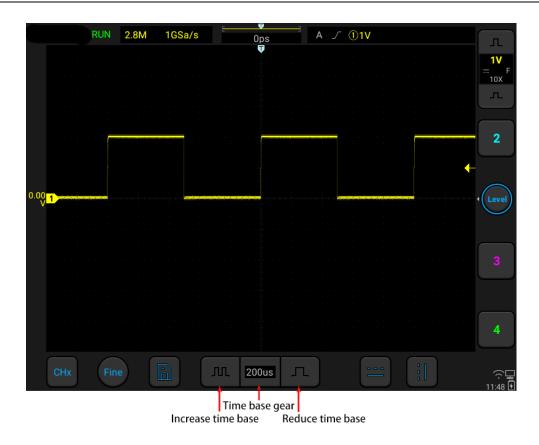


Figure 4-3 Adjust the Horizontal Time Base

#### Method 2: Time Base Knob

Tap to open the time base list (see Figure 4-4 Horizontal Time Base List), then tap the list to select the appropriate time base. The time base with the blue filled background is the currently selected time base.

#### Chapter 4 Horizontal System

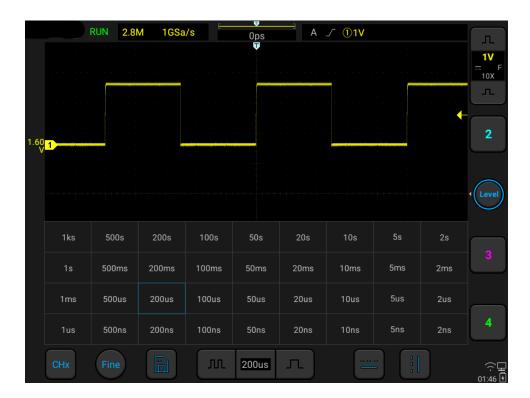


Figure 4-4 Horizontal Time Base Knob

## 4.3 Pan and Zoom Single or 1000Dpped Acquisitions

After the oscilloscope is 1000Dpped, the 1000Dpped display screen may contain several acquired data with useful information, but only the data in the last acquisition can be horizontally moved and zoomed. The data of the single

acquisition or 1000Dpped acquisition is moved horizontally and zoomed. For details, refer to "4.1 Move the Waveform <u>Horizontally</u>" and "<u>4.2 Adjust the Horizontal Time Base (time/div)</u>".

# 4.4 Roll, XY

In the main menu, tap the soft key Display, then select the desired time base mode. The time base mode is divided into YT, ROLL, and XY.

Measure	Save	Sample	Display	Trigger	Auto	Userset
Common	Waveform	Graticule	Persist			
HorRef	Center Tri	igPos Ti	meBase	YT XY		
Roll			сст 🦳			

Figure 4-5 Display Mode

#### YT——Normal View Mode of Oscilloscope

#### Chapter 4 Horizontal System

In YT mode, the relative relationship between vertical voltage and horizontal time is displayed. Y axis represents the voltage, X axis represents the time, and the waveform is displayed after triggering (waveform displayed from left to right).


**Note:** When the time base is large (such as 200ms and above), sometimes the waveform will not be displayed for a long time; this is because in YT mode, the waveform must be triggered before display. It is closely related to the time base and can be roughly calculated as: the number of divisions on the left side of the trigger position * time base level position; if you want to reduce the waiting time, move the trigger position to the left.


#### The case that trigger position is moved out of the waveform screen is not considered here.

#### ROLL—— ROLL Mode

In ROLL mode, the waveform rolls from right to left to refresh the display (see Figure 4-6 ROLL Mode). The horizontal time base adjustment range of the ROLL mode in the running state is 200ms/div~1ks/div.

In ROLL mode, trigger related information is invalid, including trigger position, trigger level, trigger voltage, etc.

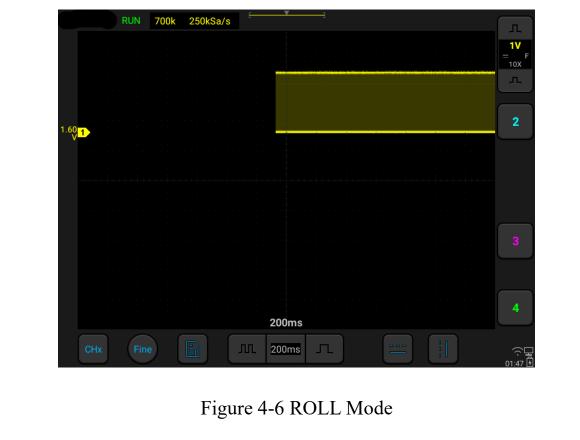

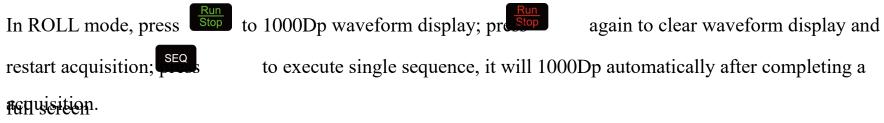

ROLL mode is generally used to observe waveforms with frequencies below 5 Hz.

#### Chapter 4 Horizontal System

ROLL mode is defaulted as open. When the time base is greater than 100ms, it automatically enters the ROLL mode. If the signal to be triggered under a large time base needs to be viewed, turn off the ROLL mode.

Roll mode on and off: In the main menu, tap the soft key Display. In the "Common" option, you can turn the roll mode on and off (refer to Figure 4-7). When the roll mode is on and the time base is within 200ms~1ks, the oscilloscope automatically enters the roll mode.

Measure	Save	Sample	Display	Trigger	Auto	Userset
Common	Waveform	Graticule	Persist			
HorRef	Center Tri	gPos Ti	meBase	YT XY		
Roll			сст 🔵			

Figure 4-7 Roll Mode On/Off

#### XY——XY Mode


The vertical amount of CH1 is displayed on the horizontal axis in XY mode, and the vertical amount of CH2 is displayed on the vertical axis (see Figure 4-8 XY Mode).

 
You can use XY mode to compare the frequency and phase relationship of two signals.

XY mode can be used for sensors to display stress-displacement, flow-pressure, voltage-frequency or voltagecurrent, for example: plotting a diode curve.

You can also use the cursor to measure the waveform in XY mode.

#### Chapter 4 Horizontal System

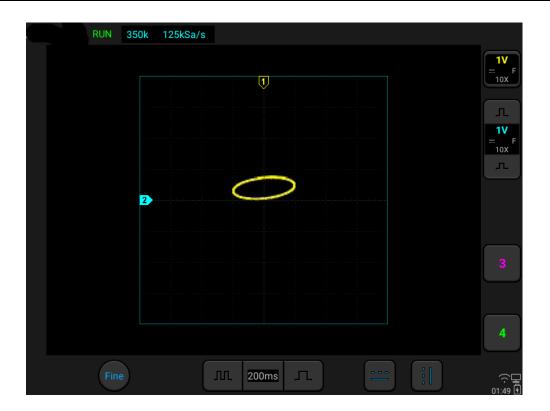



#### **XY Mode Example**

This exercise shows the usual practice of XY display mode by measuring the phase difference between two signals of the same frequency using the Lissajous method.

- Connect sine wave signals to CH1 and connect sine wave signals of the same frequency and different phases to CH2.
- 2) Press "Auto" set button, tap "Display" in the main menu, then select "XY" in "Time Base".
- 3) Drag signals so that they are centered on the display screen. Adjust the vertical sensitivity of CH1 and CH2, and extend signals for viewing.

The phase difference ( $\theta$ ) can be calculated using the following formula (assuming that the amplitudes of the two channels are the same):

$$\sin\theta = \frac{A}{B} \text{ or } \frac{C}{D}$$

Chapter 4 Horizontal System

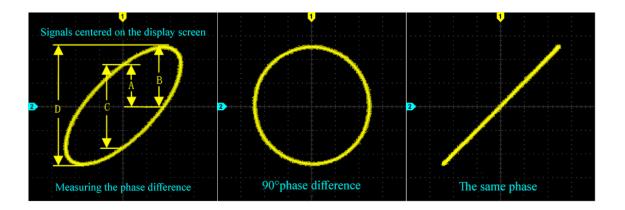


Figure 4-9 XY Time Base Mode Signal, Center on the Display Screen

- 4) Tap the "Cursor" button to open the horizontal cursor.
- 5) Set the cursor y2 at the top of the signal and the cursor y1 at the bottom of the signal. Record the  $\Delta y$  value in the upper right corner of the screen.
- 6) Move y1 and y2 cursors to the intersection point of the signal and the y-axis. Record the  $\Delta y$  value again.

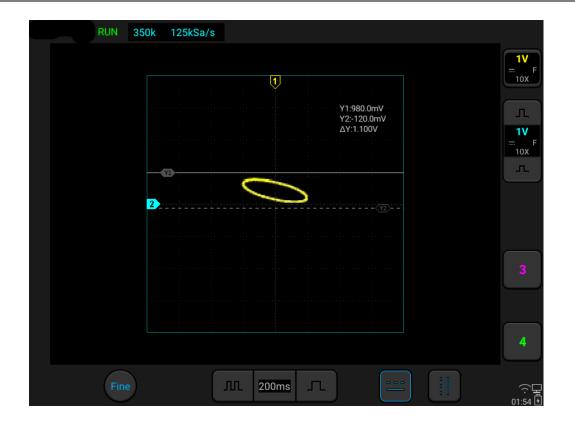


Figure 4-10 Phase Difference Measurement and Using the Cursor

7) The following formula is used to calculate the phase difference.

 $sin\theta = \frac{Y2}{Y1}$ ;  $\theta = arcsin\frac{Y2}{Y1}$ 

For example, if the first  $\Delta y$  value is 9.97V, the second  $\Delta y$  value is 5.72V:


62

Chapter 4 Horizontal System

$$sin\theta = \frac{5.72}{9.97}$$
;  $\theta = arcsin\frac{5.72}{9.97}$ 

## 4.5 Zoom Mode

Zoom is a horizontally expanded version of the normal display. Open the zoom function, the display is divided into two parts (see Figure 4-11 Zoom Interface). The upper part of the display screen shows the normal display window view and the lower part shows the zoomed display window.

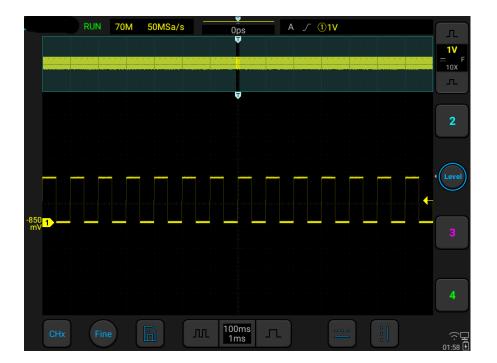



Zoom window view is the enlarged portion of the normal display window. You can use "Zoom" to view a portion of the normal window that is horizontally expanded to learn more about signal analysis.

#### Zoom on/off:

Open the pull-up menu and tap button to turn the zoom function on/off.

#### Chapter 4 Horizontal System

Zoom window is framed in a box on the normal window, and the other portion is covered by gray shade not displayed in the zoom window. This box shows the normal scan portion that was zoomed in the lower bottom.

Tap the time base button to adjust the time base of the zoom window. The size of the box in the normal window changes according to the time base of the zoom window.

Drag the waveform of the zoom window horizontally to adjust the waveform position. The box in the main window moves oppositely against the waveform; or directly drag the box in the normal window to quickly locate the waveform to be viewed.

#### Note:

The minimum time base is displayed in the normal window when the waveform in the screen is exactly within the memory depth. If the current time base is smaller than the minimum time base in the normal window at the current memory depth, when the zoom window is opened, the time base in the normal window is automatically set to the minimum time base in the normal window at the current memory depth.

- 2) The cursor, math waveform, and reference waveform are not displayed in the normal window, but can be displayed in the Zoom window.
- ³⁾ If Roll mode is 1000Dpped, Zoom mode can be turned on, and tap "Run/1000Dp" to automatically turn off Zoom

mode.

# **Chapter 5 Vertical System**


This chapter contains the detailed information of the vertical system of the oscilloscope. You are recommended to

read this chapter carefully to understand the set functions and operation of the vertical system of the 1000D Series

oscilloscope.

- Open/close channel, set the current channel
- Adjust vertical sensitivity
- Adjust vertical position
- Open channel menu
- Set channel coupling
- Set bandwidth limit
- Waveform inversion

- Set probe type
- Set probe attenuation coefficient
- Vertical expansion reference

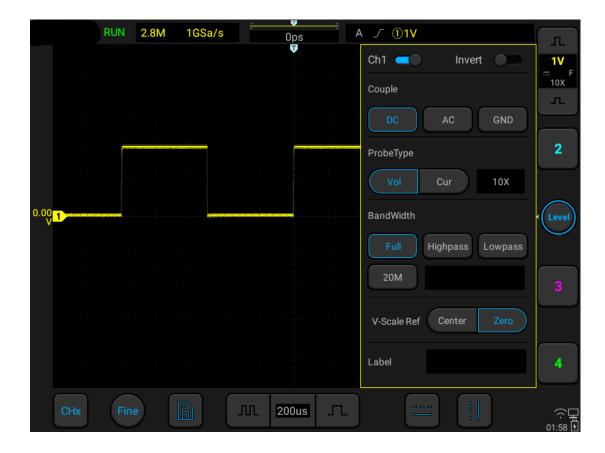

The figure below shows the "CH1 Channel Menu" displayed after opening the CH1 channel menu.

Figure 5-1 Channel Menu Display Interface


The ground level of each displayed analog channel signal is indicated by the channel indicator icon  $\square$  on the far left of the display screen.

www.gpslimited.com

**Chapter 5 Vertical System** 
 
## 5.1 Open/Close Waveform (Channel, Math, Reference Waveforms)

The channel icons



area (swipe up or down to switch to math channel and reference channel) correspond to the six channels of CH1,

CH2, CH3, CH4, math function and reference channel. The channel icons in open state will shows like





. Swipe right to close the desired channel.

Current channel: The oscilloscope can display multiple waveforms at the same time, but only one waveform is preferentially displayed on the uppermost layer, and the channel that is preferentially displayed on the uppermost layer is called the current channel. The channel indicator for the current channel is solid, and the channel indicator for the non-current channel is hollow, as shown in Figure 5-2.

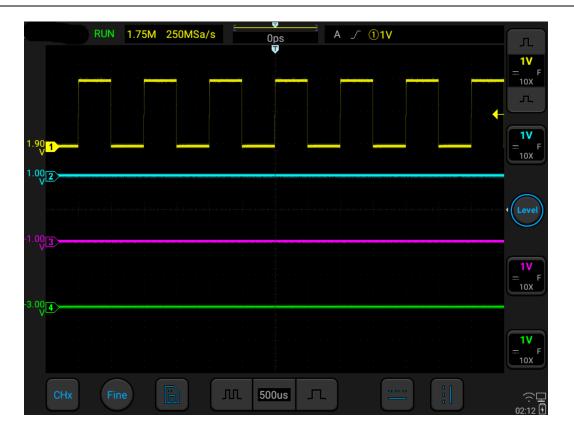


Figure 5-2 Current Channel and Non-Current Channel

The display content of the oscilloscope channel display interface includes the vertical scale, vertical scale sensitivity button, coupling mode, invert, bandwidth limitation of the channel, as shown in Figure 5-3.

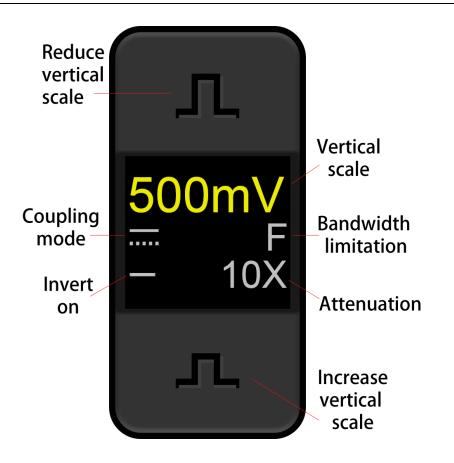


Figure 5-3 Channel Display Interface

When CH1 is on, but the state is not the current channel, tap CH1 waveform or vertical sensitivity or channel indicator  $\square$  or vertical sensitivity button or current channel selection button to set CH1 as the current channel, as shown in Figure 5-4.

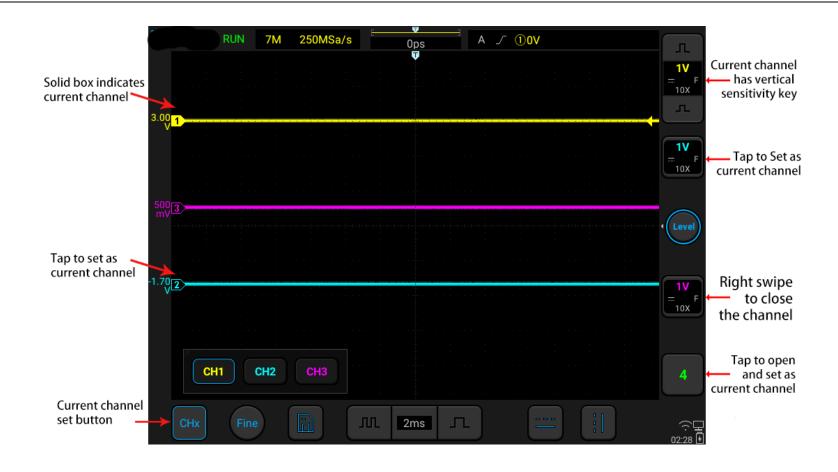


Figure 5-4 Channel Open, Close and Switching

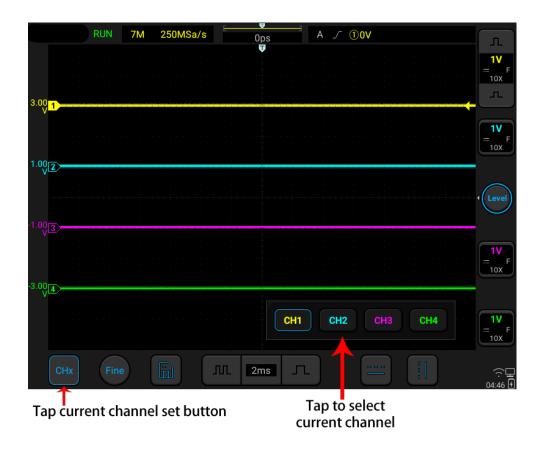


Figure 5-5 Using the Current Channel Selection Button

Tap the current channel icon at the bottom of the screen to pop up the current channel switching menu and press the button to light it up, as shown in Figure 5-5. Tap the button in the menu to switch the current channel. When this function is opened:

- a. the current channel may be switched in the channel switching menu;
- b. the current channel menu can be moved anywhere on the screen;
- c. only the open channel is displayed in the channel switching menu;
- d. when the math or reference waveform is opened, the current channel switching menu is automatically opened.

## 5.2 Adjust Vertical Sensitivity

Tap the vertical sensitivity or buttons on the right side of the channel icon to adjust the vertical display of the waveform corresponding to the channel, so that the waveform is displayed on the screen at an appropriate size.

The vertical sensitivity scale (V/div) after each adjustment is displayed on the channel icon. For example, means that the current vertical sensitivity of CH1 is 1.0V/div.



The vertical sensitivity coefficient adjusts the vertical sensitivity of the analog channel in steps of 1-2-5 (the probe attenuation coefficient is 1X), and the vertical sensitivity range of 1:1 probe is 1mV/div-10V/div (optionally minimum at 500uV/div).

## **5.3 Adjust Vertical Position**

### The method of adjusting vertical position is as follows:

- Coarse adjustment: In the waveform display area, hold the waveform and put one finger to slide up and down for changing the vertical position of the waveform.
- 2) Fine adjustment: Click the fine adjustment button in the lower left corner of the screen to fine adjust the vertical position of the waveform for the current channel.

## 5.4 Open Channel Menu

Right swipe the channel icon to open the desired channel menu.

The channel menu is shown in Figure 5-6. Channel waveform inversion, channel bandwidth limit, probe type, probe attenuation factor, channel coupling mode, vertical expansion reference, channel label and channel on/off can be set in the vertical menu.



Figure 5-6 Channel menu

### 5.4.1 Set Channel Coupling

Tap the icon under "Coupling Mode" and select "DC", "AC" and "GND" channel coupling modes in the pop-up box.

**DC:** DC coupling. Both the DC component and the AC component of the measured signal can pass, and can be used to view waveforms as low as 0 Hz without large DC offset.

**AC:** AC coupling. Measured DC signal is blocked, and only the AC component can be allowed to pass, and used to view waveforms with large DC offsets.

GND: Internal input ground, disconnecting from external input.

The oscilloscope is connected to the square wave signal with a frequency of 1KHz, an amplitude of 2V and an offset of 1V. The waveforms of the channel couplings of DC, AC, and GND are shown in Figures 5-7, 5-8, and 5-9.

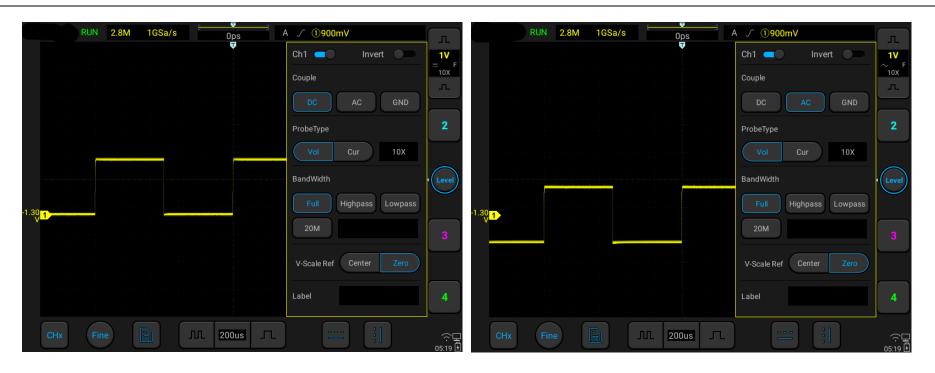


Figure 5-7 DC Coupling

Figure 5-8 AC Coupling





**Note:** This setting is only valid for the current channel. To switch from the current channel, just tap the channel icon, channel indicator icon or horizontal position pointed by the channel indicator icon for direct switching. You do not need to exit the menu.

### 5.4.2 Set Bandwidth Limit

Open the channel menu, find the "Bandwidth" selection box in the channel menu, set bandwidth limit, high-pass filtering and low-pass filtering as needed.

Full Bandwidth: Allows signals of all frequencies to pass.

**20M Bandwidth:** Only signals with frequencies below 20MHz are allowed to pass, and signals above 20MHz are effectively attenuated.

High Pass: Only signals above the lower limit of the currently set frequency are allowed to pass.

Select high pass, tap the frequency box ^{16.000MHz}, open the frequency setting interface, tap "MHz" and "KHz" to select the frequency scale, drag or tap the slide bar for coarse adjustment of the maximum frequency allowed to pass, tap "+", "-" buttons to precisely adjust the frequency.

Low pass: Only signals below the currently set frequency upper limit are allowed to pass. (with the settings same as High Pass)

High-pass filtering and low-pass filtering can be set within the frequency range of 30kHz-100MHz. ⁸⁰

The difference in bandwidth limitation can be visualized by the waveform. The full bandwidth is shown in Figure 5-10, the 20M bandwidth is shown in Figure 5-11, the high pass is shown in Figure 5-12, and the low pass is shown in Figure 5-13.

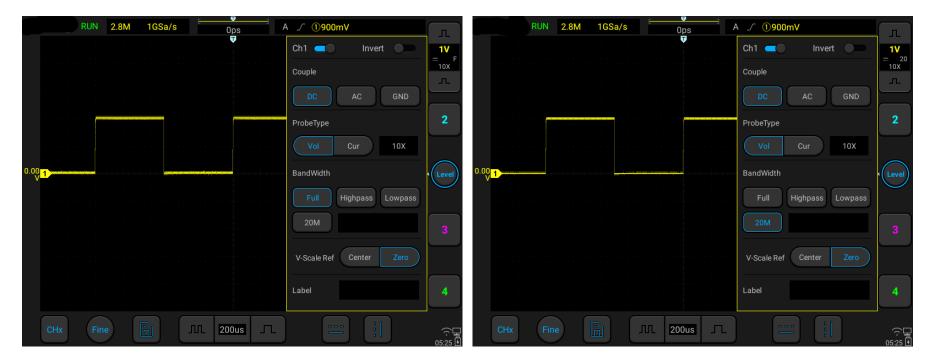


Figure 5-10 Full Bandwidth

Figure 5-11 20M Bandwidth


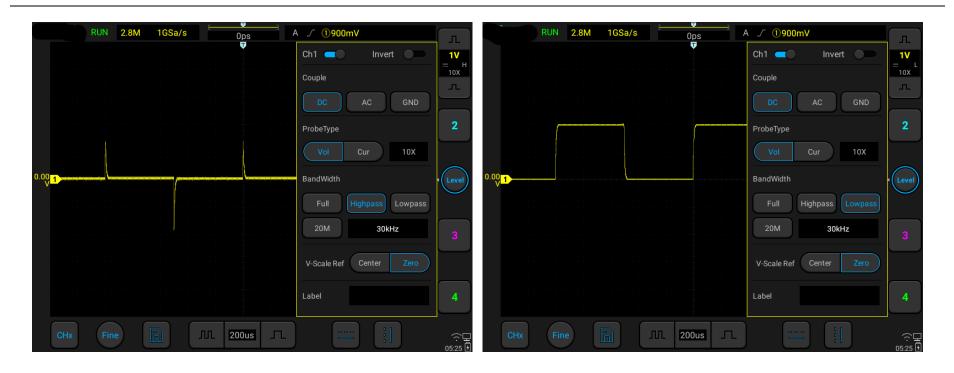


Figure 5-12 High Pass

 

#### **5.4.3 Waveform Inversion**

After selecting "Invert", the voltage value of the displayed waveform is inverted. Inversion affects the way the channel is displayed. When using a basic trigger, you need to adjust the trigger level to keep the waveform stable.

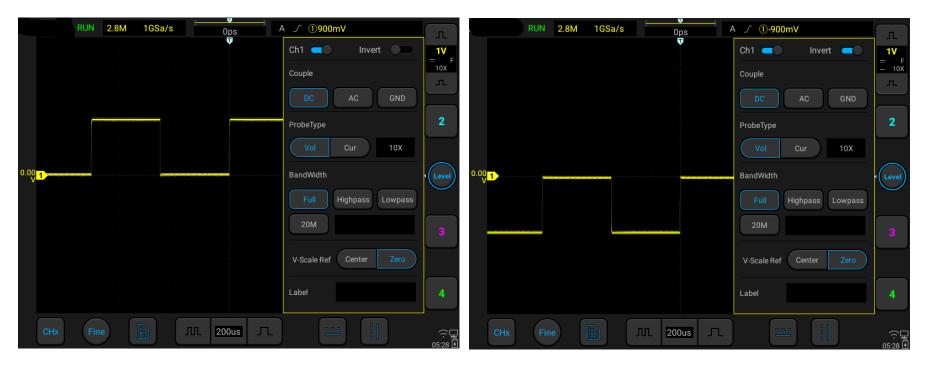


Figure 5-14 Before Inversion

Figure 5-15 After Inversion

### 5.4.4 Set Probe Type

Probe types are divided into voltage probe and current probe.

### Probe type adjustment steps:

Open the channel menu, find the "Probe Type" checkbox



in the channel menu, then select:

- Vol corresponding the voltage probe.
- Cur corresponding the current probe.

### 5.4.5 Set Probe Attenuation Coefficient

When measuring with a probe, the correct measurement result can only be obtained by setting the correct probe attenuation ratio. In order to match the actual probe attenuation ratio, it is necessary to adjust the channel attenuation factor correspondingly under the channel menu. When probe attenuation ratio is changed, the corresponding attenuation ratio must be set on the channel menu to ensure the correctness of the waveform amplitude and measurement result displayed by the oscilloscope.

Probe attenuation ratio and menu attenuation ratio are shown in the table below:

Probe attenuation ratio Menu attenuation ratio		Probe attenuation ratio Menu attenuation ratio		Probe attenuation ratio Menu attenuation ratio		Probe attenuation ratio Menu attenuation ratio	
0.001:1	1mx	0.1:1	100mx	10:1	10x	1000:1	1kx
0.002:1	2mx	0.2:1	200mx	20:1	20x	2000:1	2kx
0.005:1	5mx	0.5:1	500mx	50:1	50x	5000:1	5kx
0.01:1	10mx	1:1	1x	100:1	100x	10000:1	10kx
0.02:1	20mx	2:1	2x	200:1	200x		
0.05:1	50mx	5:1	5x	500:1	500x		

 Table 5-2 Probe Attenuation Ratio Correspondence Table

### **5.4.6 Vertical Expansion Reference**

When using vertical expansion, click the center or zero point.

Center: Click the center, adjust the vertical scale, and the oscilloscope waveform is expanded with the screen center as reference

Zero point: Click the zero point, adjust the vertical scale, and the oscilloscope waveform is expanded with the waveform zero point as reference

### 5.4.7 Labels

Labels can be added to each analog channel as needed, and the added label is displayed behind the channel indicator.

Channel labels can be selected: none, cu1000Dm, preset (including ACK, ADDR, CAN_H, CAN_L, CLK, CS, DATA,

H_L, IN, L_H, MISO, MOSI, RX, SCL, SDA, SS, TX, OUT).

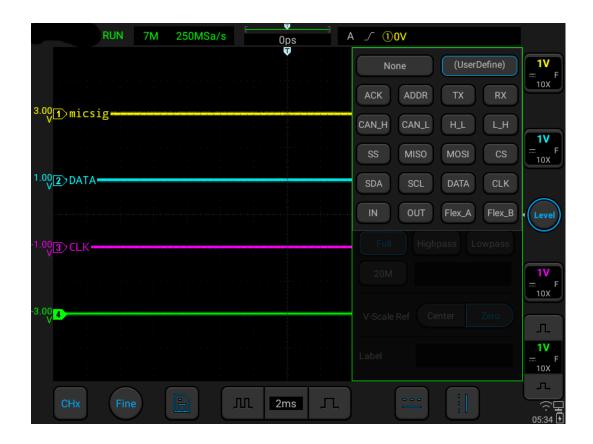


Figure 5-9 Label

Note: Cu1000Dmization supports up to 16 characters.

# **Chapter 6 Trigger System**

This chapter contains the detailed information of the trigger system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the trigger system of the 1000D Series

oscilloscope.

- Trigger and trigger adjustment
- Edge trigger
- Pulse width trigger
- Logic trigger
- Nth edge trigger
- Runt trigger

- Slope trigger
- Time out trigger
- Video trigger
- Serial bus trigger

Chapter 6 Trigger System

## 6.1 Trigger and Trigger Adjustment

### What is Trigger?

The oscilloscope can capture a waveform only when it meets a preset condition first. This action of capturing the waveform according to the condition is **Trigger**. The so-called capture waveform is that the oscilloscope grabs a signal and displays it. **If it is not triggered, there is no waveform display**.

### What can Trigger be used for?

(1) The oscilloscope can stably display a periodic signal.

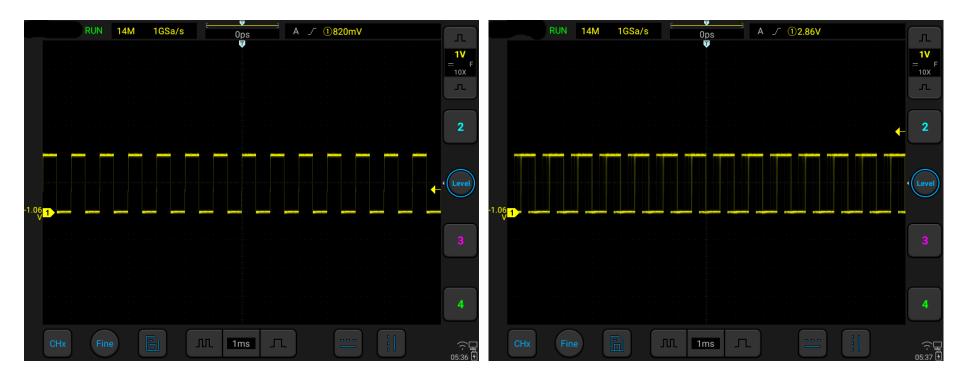


Figure 6-1 Stably Displayed Periodic Signal

Figure 6-2 Non-Stably Displayed Periodic Signal

Chapter 6 Trigger System

(2) Grab the segment you want to observe from a fast and complex signal

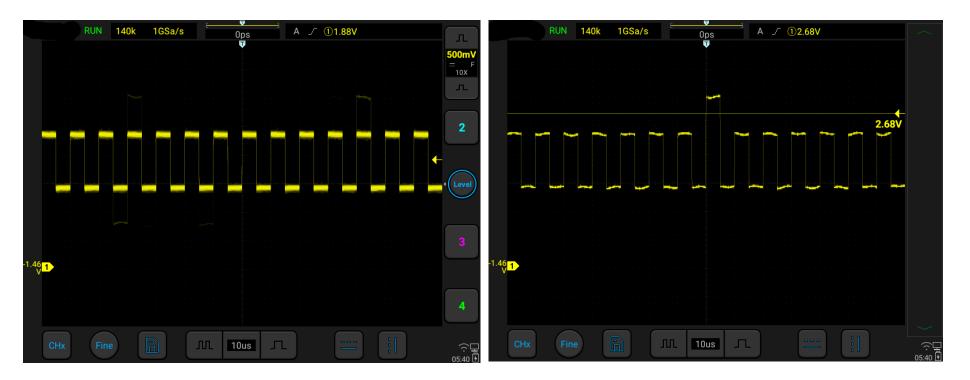


Figure 6-3 Abnormal Signal in Periodic Signals

Figure 6-4 Abnormal Signal Captured by Setting

Trigger Level

#### What is Forced Trigger?

When the oscilloscope does not meet the trigger condition, the artificial or automatic oscilloscope trigger is the forced trigger. It means that the oscilloscope only grabs a signal segment for display regardless of whether the condition is met or not.

Automatic forced trigger is set in the menu. In the trigger settings, there is usually a trigger mode option, which can be set as "Normal" or "Auto". Normal trigger means trigger after meeting the set condition. Automatic trigger is a kind of forced trigger. The oscilloscope will be force triggered if it does not trigger for a certain period of time.

#### Chapter 6 Trigger System

	RUN 2	.8M 1GSa/	S	Ops	А Л 🕻	)1.04V		л
Measure	Save	Sample	Display	Trigger	Auto	Userset		1V
Common	Edge	PulseWidth	Logic	N Edge	Runt	Slope	TimeOut	10X
Hold-Off Time	200ns	Mode	Auto	Normal				
								2
	· · · · · · · · · · · · · · · · · · ·				· · · · · · · · · · · · · · · · · · ·			
								Level
-1.70 <mark>1</mark>						· · · · · · · · · · · · · · · · · · ·		
								3
								4
СНх	Fine			200us _	L			 15:42

Figure 6-5 Oscilloscope Trigger Mode Setting

If a signal feature is not under1000Dod, the oscilloscope should be set as "Auto" mode, which can ensure that the

oscilloscope can also display the waveform when other trigger settings are not correct. Although the waveform is not necessarily stable, it can provide the intuitive judgment for our further adjustment of the oscilloscope. The signal in Figure 2-9 is the result of forced trigger in "**Auto**" mode. When we set a specific trigger condition for a specific signal, especially when the time interval for satisfying the trigger condition is long, we need to set the trigger mode to "**Normal**" so as to prevent the oscilloscope from automatic forced trigger.

Figure 6-6 shows a conceptual demonstration of the acquisition memory. In order to understand the trigger event, the acquisition memory can be divided into pre-trigger and post-trigger buffers. The position of the trigger event in the acquisition memory is defined by the time reference point and trigger position (horizontal delay) settings.

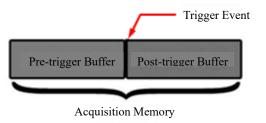


Figure 6-6 Conceptual Demonstration of Acquisition Memory

All events displayed to the left of the trigger point  $extsf{w}$  occur before trigger. These events are called pre-trigger messages that show events before the trigger point. All events to the right of the trigger point is called post-trigger

messages. The number of delay ranges available (pre-trigger and post-trigger messages) depends on the selected time base and memory depth.

### Adjust trigger position (horizontal delay)

Fingers swipe left and right in the waveform display area, the trigger point  $\mathbb{T}$  will move horizontally, the horizontal delay time changes, and the delay time is displayed at the top center of the screen, that is, the distance between the trigger point  $\mathbb{T}$  and the center line  $\checkmark$  of the waveform display area is displayed.

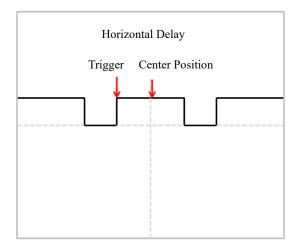


Figure 6-7 Horizontal Delay

When the trigger point  $\mathbb{T}$  is located on the left side to the center line  $\checkmark$  of the waveform display area, the delay time is displayed as a positive value; When the trigger point  $\mathbb{T}$  is located on the right side to the time reference point  $\checkmark$ , and the delay time is displayed as a negative value; the trigger point  $\mathbb{T}$  overlaps with the center line  $\checkmark$  of the waveform display area, and the delay time is zero.

#### **Trigger level**

Trigger level is the signal voltage corresponding to the set trigger point. When the trigger level is changed, a horizontal line will appear temporarily on the screen to tell you the level position (the specific value of the trigger level is displayed in the upper right corner of the screen), then the horizontal line disappears, the trigger level is indicated by a small arrow  $\leftarrow$  and the indication icon can be dragged to adjust the trigger level value. The trigger level is shown in Figure 6-8 (the arrow indicates the trigger level line).

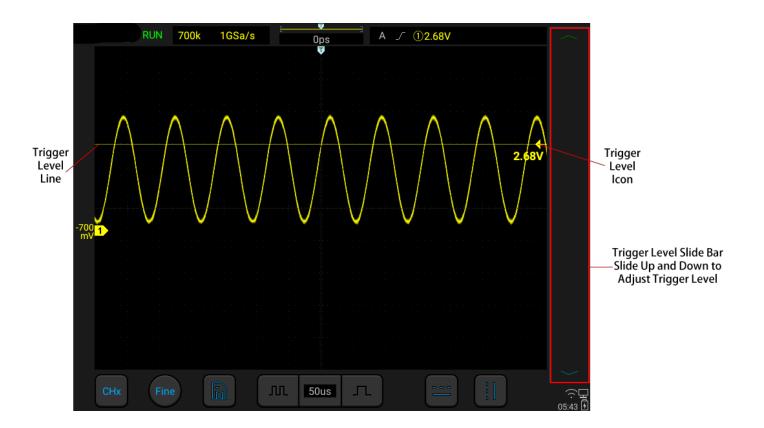


Figure 6-8 Trigger Level

### Adjust trigger level

The trigger level can be coarsely adjusted and finely adjusted.

Coarse adjustment: Slide up and down in the trigger level adjustment area.

Fine adjustment: Tap the fine adjustment button in the lower left corner of the screen for fine adjustment of the trigger level.

### **Trigger setting shortcut**

Left swipe from trigger level slide bar to open trigger setting shortcut, which includes trigger source, trigger mode etc.

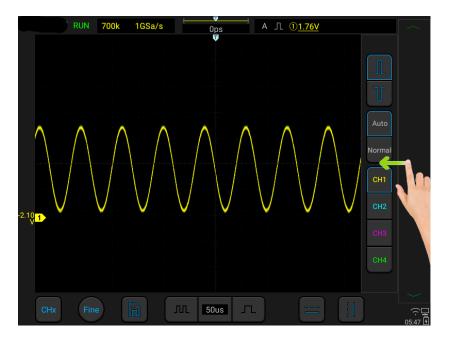


Figure 6-9 Trigger setting shortcut

#### Set trigger hold-off time

The trigger hold-off time can set up the waiting time of the oscilloscope after the trigger and before the trigger circuit is reconnected. During hold-off time, the oscilloscope does not re-trigger until the end of the hold-off time, and the hold-off time can be used to stably trigger complex waveforms. The trigger hold-off time ranges from 200ns~10s.

The hold-off may be used to trigger on repetitive waveforms with multiple edges (or other events) between waveform repetitions. If the shortest time between triggers is known, the hold-off may also be used to trigger on the first edge.

For example, to obtain stable trigger on the repetitive pulse trigger shown below, set the hold-off time to a value >200ns but <600ns.



Figure 6-10 Trigger Hold-Off Time

### Set trigger hold-off time:

 Tap "Trigger" on the main menu to open the trigger menu. Under "Common", tap the box after "Rejection Time" to open the hold-off time adjustment interface. The trigger time is displayed on the upper left, the fine adjustment time scale is displayed on the upper right, and the coarse time scale is displayed below, as shown in Figure 6-11.

Hold-Off Time	200ns		180ns				20ns
0 1us	10us 7	00us	1ms	10ms	100ms	1s	10s

Figure 6-11 Trigger Hold-Off Time Set Interface

2) When adjusting the time, drag or tap the coarse adjustment scale for coarse adjustment, and then drag the fine adjustment scale for fine adjustment of the hold-off time.

## **Trigger hold-off operation prompt**

It is typically used for complex waveforms. The correct rejection setting is usually slightly smaller than one repetition of the waveform. Setting the hold-off time to this time can become the only trigger point for the repetitive waveform.

Changing the time base setting will not affect the trigger hold-off time.

Using Zoom function, you can tap "Run/1000Dp" to 1000Dp, then horizontally move and zoom the data to find the position where the waveform is repeated. Use the cursor to measure this time and then set the hold-off time.

• Use "SingleSEQ" button for single acquisition

Usually when performing a single acquisition, you must initiate some operations on the measured equipment, and the oscilloscope is not desired to trigger automatically before these operations. The trigger condition indicator war is displayed in the upper left corner of the screen before starting operations in the circuit (this means the pre-trigger buffer is filled).

# 6.2 Edge Trigger

When the edge of trigger signal reaches a certain trigger level, the set signal is triggered and generated. Trigger occurs on either edge of the rising edge (indicating icon  $\square$  at the top of the screen), falling edge ( $\square$ ) or dual edge ( $\square$ ), and the trigger level can be set to change the vertical position of the trigger point on the trigger edge, namely the intersection point of the trigger level line and the signal edge. The stable waveform can be obtained by correctly setting the edge trigger coupling mode. Edge trigger menu is shown in the table below:

Trigger Option	Setting	Description
	CH1	Set CH1 as trigger signal source
Trianan Carras	CH2	Set CH2 as trigger signal source
Trigger Source	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
Slope	Rising edge	Set signal trigger on the rising edge

	Falling edge	Set signal trigger on the falling edge
	Dual edge	Set signal trigger on either rising edge or falling edge
	DC	AC and DC components getting through trigger signals
	AC	Filter out the DC component of trigger signals
Courling	HF rejection	Suppress signals above 50KHz in trigger signals
Coupling	LF rejection	Suppresses signals below 50KHz in trigger signals
		Low-sensitivity DC coupling to suppress high-frequency noise
	Noise rejection	in trigger signals

## Set CH1 rising edge trigger and coupling as DC with operation steps as follows:

- Tap "Trigger" on the main menu to open the trigger menu, select edge trigger in the trigger type, and set edge trigger as follows, as shown in Figure 6-11:
  - Trigger source: CH1;

- Trigger coupling mode: DC;
- Trigger edge: rising.

Measure	Save	Sam	ple	Display	Trigger	Auto	Userset	
Common	Edge	Pulse	Width	Logic	N Edge	Runt	Slope	TimeOut
Source	CH1	CH2	СНЗ	CH4	Slope	Rise	Fall	
Idle	1us		Edge	1				

Figure 6-12 Edge Trigger Setting Menu

 Adjust the trigger level to ensure that the waveform can be triggered stably, for example, the trigger level is set to 1V.

#### **Trigger coupling description**

When the edge trigger setup menu is opened, the trigger coupling option is displayed below the menu. Trigger coupling includes DC, AC, HFRei., LFRej., NoiseRej, see Figure 6-13:





- 1) DC coupling allows DC and AC signals to enter the trigger path.
- 2) AC coupling removes any DC offset voltage from the trigger waveform.

When the waveform has a large DC offset, stable edge triggering can be achieved using AC coupling.

- 3) HFRej. (High Frequency Rejection Coupling) removes high frequency components from the trigger waveform, using high frequency rejection to remove high frequency noises or noises from fast system clocks, from trigger paths such as AM or FM radio stations.
- 4) LFRej. (Low Frequency Rejection Coupling) removes any unnecessary low frequency components from the trigger waveform, for example, power line frequencies that can interfere with correct trigger.

When there is low frequency noise in the waveform, stable edge triggering can be obtained using LF rejection coupling.

5) NoiseRej. (Noise Rejection Coupling) - Noise rejection can add extra hysteresis to the trigger circuit. By increasing the trigger hysteresis band, the possibility of noise triggering can be reduced. But it also reduces the trigger sensitivity, so triggering the oscilloscope requires a slightly larger signal.

Note: Trigger coupling is independent of channel coupling.

# 6.3 Pulse Width Trigger

The trigger happens when the trigger signal pulse width ( $8ns\sim10s$ , the trigger type indication icon at the top of the screen is  $\square$ ) reaches the set condition and the signal voltage reaches the set trigger level. Pulse width trigger menu is shown in the following table:

Trigger Option	Setting	Description	
	CH1	Set CH1 as trigger signal source	
Trigger Source	CH2	Set CH2 as trigger signal source	

Trigger Option	Setting	Description
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
Deles:4-	Positive	Trigger on setting the positive pulse width of signals
Polarity	Negative	Trigger on setting the negative pulse width of signals
	<t< th=""><th>Trigger when the signal pulse width is smaller than pulse width T</th></t<>	Trigger when the signal pulse width is smaller than pulse width T
Triccor Condition	>T	Trigger when the signal pulse width is greater than pulse width T
Trigger Condition	=T	Trigger when the signal pulse width is equal to pulse width T
	≠T	Trigger when the signal pulse width is not equal to pulse width T
Trigger Pulse	8ns~10s	Set the trigger pulse width
Width	0115~105	Set the trigger pulse width

Notes: Conditions of greater than, smaller than, equal to or not equal to indicating that the error is 6%.

Trigger steps of positive polarity pulse width: (taking CH1 as an example)

- 1) Tap "Trigger" on the main menu to open the trigger menu, select the pulse width trigger in the trigger type, and set the pulse width trigger as follows, as shown in Figure 6-14:
  - Trigger source: CH1;
  - Trigger pulse polarity: positive;
  - Trigger level: 1V
  - Trigger condition and pulse width time: "greater than", the adjustment time is 180us.

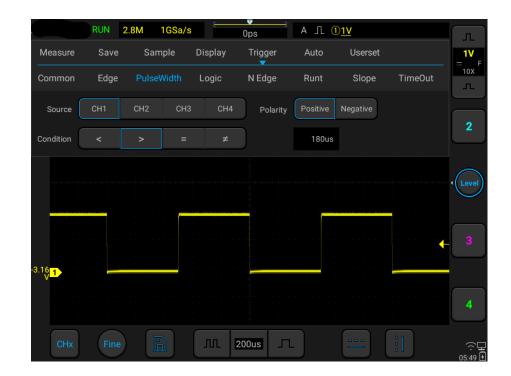


Figure 6-14 Pulse Width Trigger Setting Menu

Pulse width trigger setting description:

#### 1) Pulse polarity selection

The selected pulse polarity icon is displayed in the upper right corner of the display screen. The positive pulse is higher than current trigger level (CH1 positive pulse indication icon  $\int (\underline{1.00V})$ ), and the negative pulse is

lower than current trigger level (CH1 negative pulse indication icon  $\square \textcircled{1.00V}$ ). When triggered on positive polarity pulse, if the restrictions are true, the trigger will happen on the high-to-low transition of the pulse; when triggered on negative polarity pulse, if the restrictions are true, the trigger will happen on the low-to-high transition. (Figure 6-15 Negative Pulse Level Flip)



Figure 6-15 Negative Polarity Pulse Level Flip

### 2) Trigger condition and pulse width time setting

Time restrictions that can set in the trigger condition:  $<, >, =, \neq$ .

• Smaller than the time value (<)

For example, for positive pulse, if it is set as T<80ns, the trigger will happen stably only when the pulse width is smaller than 80ns (Figure 6-16 Trigger Time T<80ns).

 


Figure 6-16 Trigger Time T<80ns

• Greater than the time value (>)

For example, for positive pulse, if it is set as T>80ns, the trigger will happen stably only when the pulse width is greater than 80ns (Figure 6-17 Trigger Time T>80ns).

 


Figure 6-17 Trigger Time T>80ns

• Equal to the time value (=)

For example, for positive pulse, if it is set as T=80ns, the trigger will happen stably only when the pulse width is equal to 80ns (Figure 6-18 Trigger Time T=80ns).

 


Figure 6-18 Trigger Time T=80ns

• Not equal to the time value  $(\neq)$ 

For example, for positive pulse, if it is set as  $T \neq 80$ ns, the trigger will happen stably only when the pulse

width is not equal to 80ns (Figure 6-19 Trigger Time T $\neq$ 80ns).

 


Figure 6-19 Trigger Time T≠80ns

The trigger pulse width time can be set as 8ns~10s.

Tap the pulse width time setting box <u>8 ns</u> to pop up the time adjustment interface (as shown in Figure 6-

20), and adjust the pulse width time. Adjust the pulse width time by adjusting or dragging the time scale.

Ρι	ılseWidth	8r	าร		0ns			28ns
	1us	10us	100us	1ms	10ms	100ms	1s	10s

Figure 6-20 Pulse Width Time Adjustment Interface

# 6.4 Logic Trigger

Trigger happens when the level between analog channels satisfies a certain logical operation (AND, OR, NAND, NOR) and the signal voltage reaches the set trigger level and the trigger logic width (8ns~10s). Logic trigger menu descriptions are shown in the table below:

Trigger Option	Setting		Description	
		High	Set CH1 as high	
	CH1	Low	Set CH1 as low	
		None	Set CH1 as none	
		High	Set CH2 as high	
Trigger Source	CH2	CH2	Low	Set CH2 as low
		None	Set CH2 as none	
		High	Set CH3 as high	
	CH3	Low	Set CH3 as low	

		None	Set CH3 as none		
		High	Set CH4 as high		
	CH4	Low	Set CH4 as low		
		None	Set CH4 as none		
	AND		Select the logic of trigger source as "AND"		
Triggor Logio		OR	Select the logic of trigger source as "OR"		
Trigger Logic	88 8	AND	Select the logic of trigger source as "NAND"		
	1	NOR	Select the logic of trigger source as "NOR"		
<b>.</b>	Change	to true value	Trigger when the logic changes to true value		
Trigger Condition	Change to false value		Trigger when the logic changes to false value		
Condition	<,>	>, =, ≠T	If logic status for hold time as $<$ , $>$ , $=$ , $\neq$ T, then trigger		
Logic Time	8ns~10ns		Set trigger logic time		

Notes: Conditions of greater than, smaller than, equal to or not equal to indicating that the error is 6%.

Logic trigger operation steps between channels:

- Tap "Trigger" on the main menu to open the trigger menu, select logic trigger in the trigger type, and set the logic trigger as follows, as shown in Figure 6-21:
  - Logic levels: CH1, CH3: High; CH2, CH4: Low; (without reference to the channel of logic operation, the level selection is None to avoid interference to the logic operation);
  - Logic gate: AND;
  - Condition: <;
  - Logic time: 400ns.

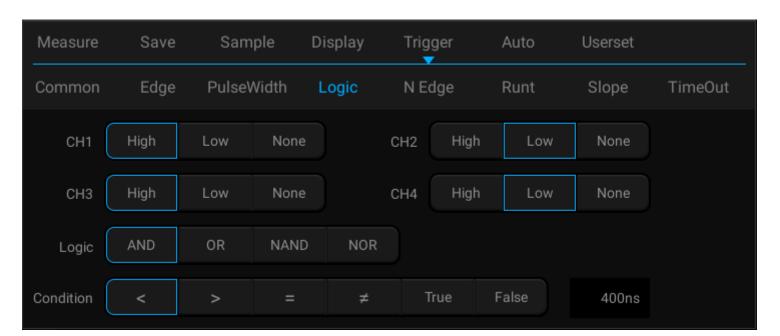


Figure 6-21 Logic Trigger Setting Menu

### Logic trigger setting description:

### Logic level setting

After trigger source, select High, Low and None for the channel. The corresponding trigger level value is displayed in the upper right corner of the display screen.

High: means a value higher than the current trigger level, and the icon indication is " $\boxed{0.0V}$ ".

Low: means a value lower than the current trigger level, and the icon indication is "0.0V,".

None: This channel is invalid.

Switch the trigger level channel: Tap the trigger level slide bar arrow or use trigger setting shortcut

## Logic conditions

- 1) True: Trigger when the logic changes to true value
- 2) False: Trigger when the logic changes to false value

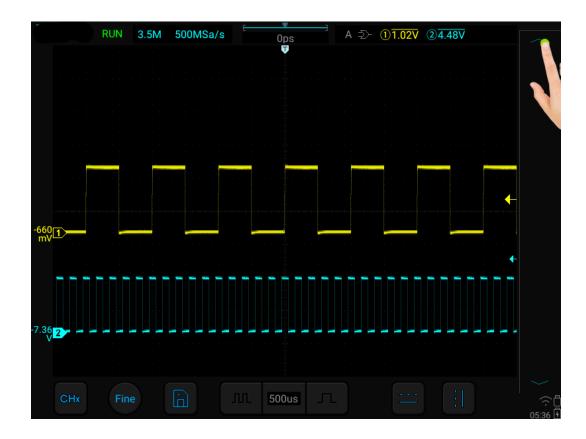


Figure 6-22 Trigger Level Adjustment

Trigger pulse width time can be set as 8ns~10s.

Tap the time setting box ( 400ns) to pop up the time adjustment interface and adjust the logic time. Please refer to the Pulse Width Adjustment section for details.

# 6.5 Nth Edge Trigger

When the trigger signal is triggered on the Nth edge after the specified idle time, it is Nth edge trigger. Menu

descriptions of the Nth edge trigger are shown in the table below:

Trigger Option	Setting	Description
	CH1	Set CH1 as trigger signal source
Tuingan Samua	CH2	Set CH2 as trigger signal source
Trigger Source	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
Time	8ns~10s	Idle time
Edge	Rising edge	Set signal trigger on the rising edge
	Falling edge	Set signal trigger on the falling edge
Nth Edge	1~65535	Set trigger on Nth edge after idle time

## Set CH1 to trigger on the 5th rising edge after 500us. The steps are as follows:

- Tap "Trigger" on the main menu to open the trigger menu, select Nth edge trigger in the trigger type, and set the Nth edge trigger as follows, as shown in Figure 6-23:
  - Trigger source: CH1;
  - Time: 10ms;
  - Edge signal: rising;
  - Nth edge: 99

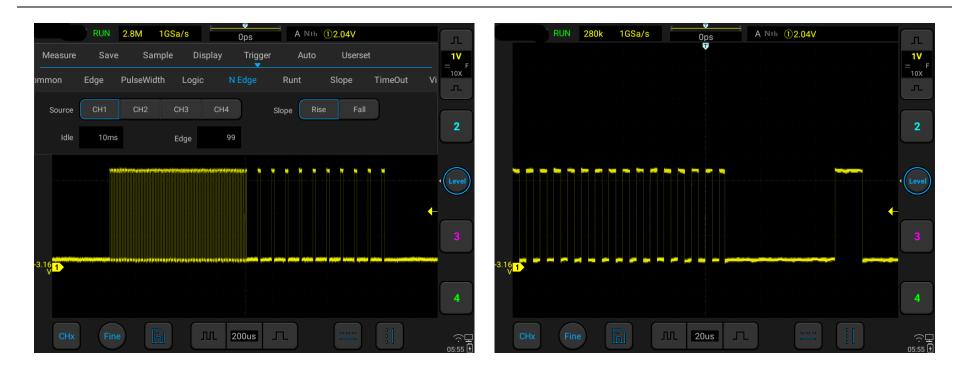



Figure 6-23 Nth Edge Trigger Menu

 Adjust the trigger level to ensure that the waveform can be triggered stably, for example the trigger level is set to 1.44V.

# 6.6 Runt Trigger

By setting the high and low thresholds, trigger on a pulse that cross one threshold but fail to cross a second

threshold. There are two types available: positive short pulse and negative short pulse.

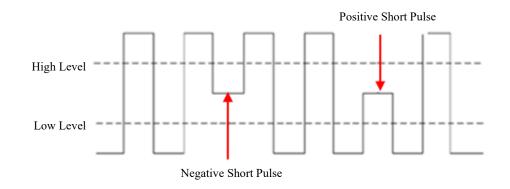



Runt trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description
<b>Trigger Source</b>	CH1	Set CH1 as trigger signal source

Trigger Option	Setting	Description
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	Positive	Set signal to trigger on positive runt pulse
Polarity	Negative	Set signal to trigger on negative runt pulse
	Any	Set signal to trigger on either positive or negative runt pulse
	<t< th=""><th>Trigger when the signal pulse width is smaller than pulse width T</th></t<>	Trigger when the signal pulse width is smaller than pulse width T
Tuiccor	>T	Trigger when the signal pulse width is greater than pulse width T
Trigger Condition	∽T	Trigger when the signal pulse width is greater than lower limit T1 and
Condition	~1	smaller than upper limit T2
	None	No trigger restrictions for runt pulse trigger

Trigger Option	Setting	Description
Trigger Pulse	8ns~10s	Set the trigger pulse width
Width		

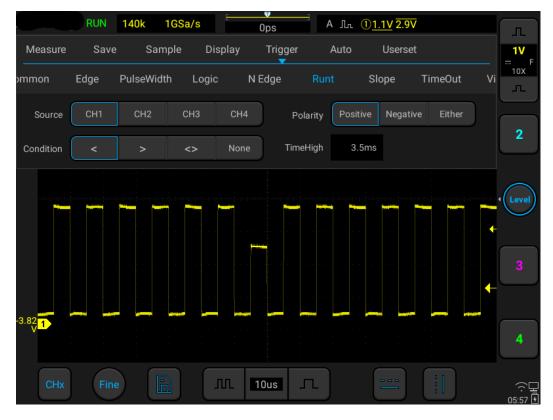


Figure 6-25 Runt Trigger Setting Menu

# **6.7 Slope Trigger**

Slope Trigger means trigger when the waveform reaches a set time condition from one level to another.

Positive slope time: Time takes for the waveform to go from low to high.

Negative slope time: Time takes for the waveform to go from high to low.

As shown in Figure 6-26

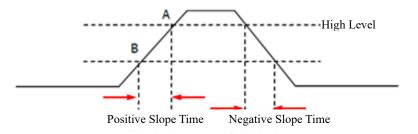


Figure 6-26 Positive/Negative Slope Time

When the trigger signal slope has the hold time ( $8ns\sim10s$ ), the trigger type on the top of the screen is only the icon  $\pm r$ , and trigger happens when the set condition is reached. Slope trigger is suitable for observing sawtooth or triangular waves. The slope trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description
Trigger Source	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
Edge	Rising	Set trigger on positive signal slope
	Falling	Set trigger on negative signal slope
	Any	Set trigger on detecting a signal slope change
	<t< th=""><th>Trigger when the signal slope hold time is smaller than T</th></t<>	Trigger when the signal slope hold time is smaller than T
Trigger	>T	Trigger when the signal slope hold time is greater than T
Condition	⇔T	Trigger when the signal slope hold time is smaller than upper limit T1 and
		greater than lower limit T2
Time	8ns~10s	Set the trigger signal slope hold time

### Set CH1 slope status as rise and hold time less than 1ms. The steps are as follows:

- Tap "Trigger" on the main menu to open the trigger menu, select the slope trigger in the trigger type, and set the slope trigger as follows, as shown in Figure 6-27:
  - Trigger source: CH1;
  - Edge: Rise;
  - Slope hold time: 1us;
- Adjust trigger level, adjust High or Low trigger level, click arrow at both ends of the chute Switch the trigger level between High and Low.

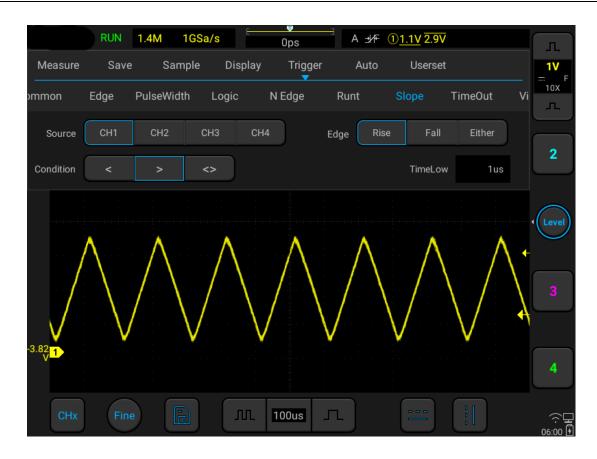


Figure 6-27 Slope Trigger Setting Menu

The slope hold time can be set as 8ns~10s.

**Note:** A stable trigger waveform can only be obtained by selecting the channel to which signals are connected as trigger source.

## 6.8 Timeout Trigger

Timeout trigger happens when the time from the intersection of signal and trigger level and above (or below) the trigger level reaches the set time, as shown in Figure 6-28:

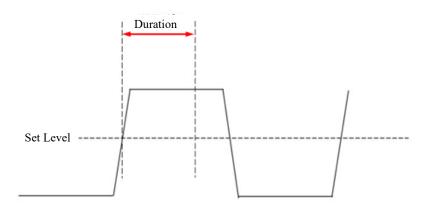


Figure 6-28 Timeout Trigger Schematics

Timeout trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description
	CH1	Set CH1 as trigger signal source

Chapter 6 Trigger System

	CH2	Set CH2 as trigger signal source					
Trigger Source	CH3	Set CH3 as trigger signal source					
Source	CH4 Set CH4 as trigger signal source						
	Positive	Select to count time when the rising edge of input signal gets through the					
	rosiuve	trigger level					
Polarity	Negative	Select to count time when the falling edge of input signal gets through the					
1 olarity		trigger level					
	Any	Select to count time when the rising edge or falling edge of input signal gets					
	Ally	through the trigger level					
Time	8ns~10s	Timeout time					

#### Set the polarity of CH1 trigger signal to be positive and the timeout time as 15us. The steps are as follows:

 Tap "Trigger" on the main menu to open the trigger menu, select timeout trigger in the trigger type, and set the timeout trigger as follows, as shown in Figure 6-29:

- Trigger source: CH1;
- Edge: positive;
- Timeout time: 8ns;
- 2) Adjust the trigger level to ensure that the waveform can be triggered stably.



### Figure 6-29 Time-out Trigger

## 6.9 Video Trigger

The triggering method for video signals depends on video formats. Generally, there are PAL/625, SECAM, NTSC/525, 720P, 1080I and 1080P formats. The video trigger can be triggered at different voltage scales, and the appropriate voltage scale can be adjusted as needed to observe the waveform. The video trigger menu descriptions are shown in the table below:

Trigger Option	Setting	II       Set CH1 as trigger signal source         I2       Set CH2 as trigger signal source         I3       Set CH3 as trigger signal source				
	CH1	Set CH1 as trigger signal source				
Trigger	CH2	Set CH2 as trigger signal source				
Source	CH3	Set CH3 as trigger signal source				
	CH4	Set CH4 as trigger signal source				

Trigger Option	Setting	Description					
Delevity	Positive	Set signal positive polarity trigger					
Polarity	Negative Set s	Set signal negative polarity trigger					
	625/PAL	Based on PAL signal trigger					
	SECAM	Based on SECAM signal trigger					
<b>X</b> 7* 1	525/NTSC	Based on NTSC signal trigger					
Video Standard	720P	Base on 720P(50Hz, 60Hz) signal trigger					
Stanuaru	1080I	Base on 1080I(50Hz, 60Hz) signal trigger					
	1080P	Base on 1080P (24Hz, 25Hz, 30Hz, 50Hz, 60Hz) signal					
	1080P	trigger					
Line		Trigger lines					


Chapter 6 Trigger System

Trigger Option	Setting		Description			
	Odd fiel	ds	Trigger on the rising edge of the first tooth pulse in odd fields			
Trigger	Even fie	lds	Trigger on the rising edge of the first tooth pulse in even fields			
	All field	S	Trigger on the rising edge of the first tooth pulse found			
	All lines		Trigger on all horizontal sync pulses			
		625 line (PAL,SECAM)				
		263 odd line 262 even				
Trigger	Line	line (NTSC)	Trigger on a specified line in odd or even fields			
		750 line (720P)				
		1125 line (1080I,1080P)				

# Set CH1 as trigger channel, positive polarity, NTSC standard video, all fields trigger, and the steps are as follows:

- Tap "Trigger" on the main menu to open the trigger menu, select the video trigger in the trigger type, and set the video trigger as follows, as shown in Figure 6-30:
  - Trigger source: CH1;
  - Polarity: positive;
  - Standard: 525/NTSC;
  - Trigger: Odd fields

#### Chapter 6 Trigger System

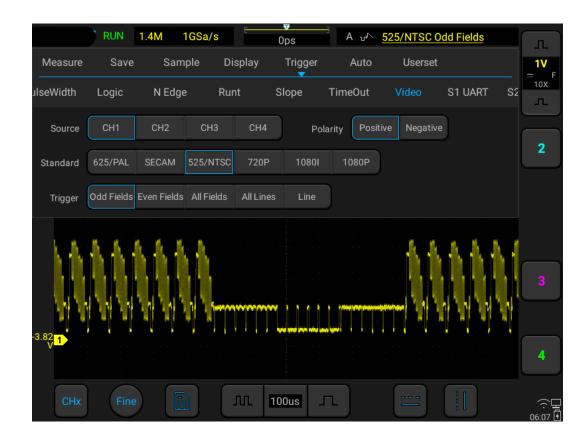



#### Prompts:

• In order to better observe the waveform details in the video signal, first set the memory depth to be larger.

• During the trigger debugging of the video signal, since the digital oscilloscope has multi-level gray scale display function, different brightness can reflect the frequency of different parts of the signal. Experienced users can quickly judge the quality of the signal during the debugging process and find abnormal conditions.

## 6.10 Serial Bus Trigger

Please refer to Chapter 12 Serial Bus Trigger and Decode (Optional)

## **Chapter 7 Analysis System**

This chapter contains the detailed information of the analysis system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the analysis system of the 1000D Series oscilloscope.

- Automatic measurement
- Frequency meter measurement
- Cursor

## 7.1 Automatic Measurement

#### **Measurement setting**

Slide down from top, open the main menu, tap "Measure" to enter the measurement menu. There are 23 measurement items on the measurement menu. Measurement menu, selected measurement item display and measurement item display are shown in Figure 7-1:

		RUN 7	M 1GSa/s	E	<b>⊽</b> Ops	→ A / ①	1.08V	
	Measure	Save	Sample	Display	Trigger	Auto	Userset	
	Common	Counter						
	● CH1							
Measurement	fff f Period Fr	eq. RiseTime	FallTime Dela	f ft ay +Duty	 -Duty	+Width -Width	ffff //	FOV
Selection Area	JAV IT		ارت ایر High Lov		Min	RMS CRMS	Mean CMea	
elected Parameters at most ten	ff Period Fr	eq. RiseTime	FallTime +Duty	+Width	ffff BurstW.	ov PK-PK	Amp.	Clear
	-6.96					· · · · · · · · · · · · · · · · · · ·		
Display Area of Measured Value		1.000ms 1:499.2us	Freq.:1.000kHz BurstW.:6.499m		Time:2.669us :0.00%	FallTime:297 PK-PK:2.080		49.92% 2.080V
	СНх	Fine		лц	500us	л	:	

Figure 7-1 Automatic Measurement Menu

#### Automatic measurement

1) Select channel: Select the channel to be measured above the measurement menu.

- Select measurement: Select the desired measurement item on the measurement menu. The selected measurement item is displayed in the "Selected Parameters" display area below.
- 3) Press top button on the key area to quickly close the measurement menu.
- 4) Cancel measurement item: In the "Selected Parameters" display area below measurement menu, tap the measurement item to be cleared; or tap
   Clear
   button to clear all measurement items.

#### Note:

Measurements and math functions will be recalculated when moving/zooming and opening/closing channels.

Oscilloscope has an automatic measurement memory function. Shutdown and restart will not automatically clear added automatic measurement options.

#### All measurements

Slide from bottom, open the **pull-up menu**, see Figure 7-2, click **Clear** to open all measurement items, display the current channel measurement value. Switch the current channel to open all the measurement items of other channels, as shown in Figure 7-3; click again to turn off all measurements.



## Figure 7-2 Pull-up Menu

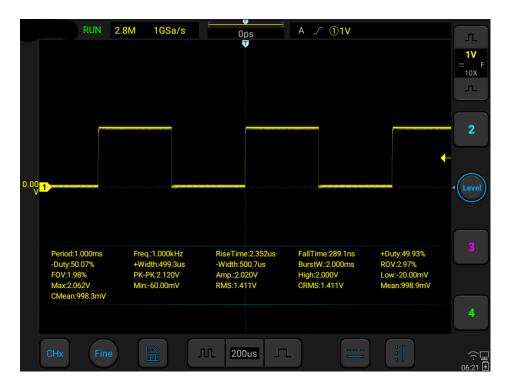


Figure 7-3 All Measurements

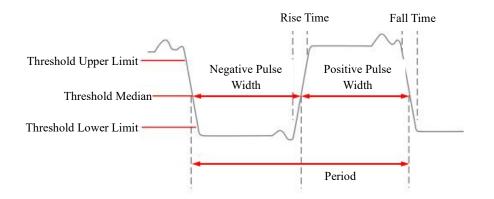


Figure 7-4 Time Parameter

#### Period

Time of the first complete signal cycle in the waveform

#### Frequency

Reciprocal to the cycle time

#### **Rise time**

Time required for the first rising edge of the waveform to rise from the amplitude of 10% to 90%

#### Fall time

144

Time required for the first falling edge of the waveform to rise from the amplitude of 10% to 90%

#### Delay

Time delay between rising or falling edges of channels may be measured, and there are nine effective measurement combinations

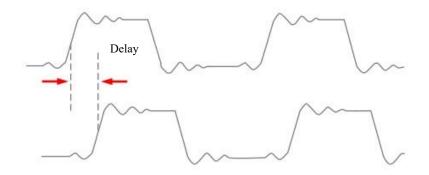


Figure 7-5 Delay Measurement Schematics

1) Open the automatic measurement menu and tap  $\begin{bmatrix} \underline{J} \\ \underline{P} \end{bmatrix}$  to pop up the phase selection menu.

- 2) The left channel is defaulted as the current channel, and other channels can be selected by the channel area that has been opened (except the reference channel); there are four edge selections: first rising edge, first falling edge, last rising edge, last falling edge.
- The right channel is a contrast delay channel, which can be selected between each channel and math channel.
   There are four edge selections: first rising edge, first falling edge, last rising edge, and last falling edge.
- 4) Tap **ok** button to confirm.

#### **Positive duty cycle**

Measured value of the first cycle in the waveform

Positive duty cycle = (waveform positive pulse width / period) * 100%

#### Negative duty cycle

Measured value of the first cycle in the waveform

Negative duty cycle = (waveform negative pulse width / period) * 100%

#### Positive pulse width

Measured value of the first positive pulse in the waveform, taking the time between two 50% amplitude points

#### Negative pulse width

Measured value of the first negative pulse in the waveform, taking the time between two 50% amplitude points

#### **Burst width**

Duration of a burst measured over the entire waveform

#### Overshoot

#### **Positive overshoot**

Positive overshoot =[(max - high) / amplitude]*100%

#### Negative overshoot

Negative overshoot =[(low - min) / amplitude]*100%

#### Phase

Timing measurement. The amount of time that one waveform leads or lags another waveform, expressed in degrees where 360° comprises one waveform cycle.

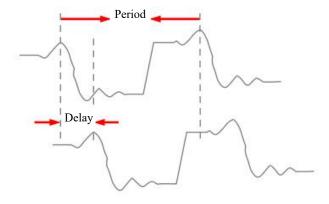


Figure 7-6 Phase Measurement Schematics

## Peak-peak

In the entire waveform measurement, peak-peak = max - min

#### Amplitude

In the entire waveform measurement, amplitude = high (100%) - low (0%)

The figure below shows voltage measurement points.

The channel probe type setting is used to set the measurement unit for each input channel to Volts or Amperes.

Refer to "<u>5.4.4 Set Probe Type</u>".

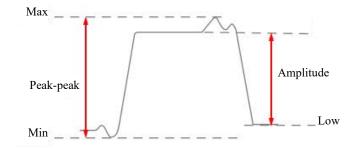


Figure 7-7 Voltage Measurement

#### High

Take 100% in the entire waveform, and calculated using either the min/max or hi1000Dgram method.

#### Low

Take 0% in the entire waveform, and calculated using either the min/max or hi1000Dgram method.

#### Max

Highest positive peak measured over the entire waveform

#### Min

Highest negative peak measured over the entire waveform

#### RMS

True root mean square value over the entire waveform

#### C RMS

True root mean square value of the first cycle in the waveform

#### Mean

Arithmetic mean over the entire waveform

#### C mean

Arithmetic mean over the first cycle in the waveform

#### AC RMS

True root mean square value of the AC component of the entire waveform

#### +Rate

The ratio of the difference between the high and low values of the first rising edge of the waveform to the rise time.

#### -Rate

The ratio of the difference between the low and high values of the first falling edge of the waveform to the fall time.

#### Note:

If the waveform required for measurement is not fully displayed on the screen, "Forward Clipping" or "Negative Clipping" is displayed at the position of the measured value.

When the math function is operated, if source channel waveform is fully displayed, and the math waveform appears to be off the screen, the measured value of math waveform will not be influenced.

If source channel is clipped, the measured value of math waveform is the source channel value during screen wave clipping.

#### **Statistics**

Swipe down from the top to open the main menu, tap "Measure", then select "Statistics" to enter the statistics menu.

The oscilloscope supports statistics and displays the current value of multiple measurement results, including Mean,

Max, Min, Deviation, and Count. The number of counts can be up to 10,000 times. Click the "Reset" button to clear

the hi1000Drical data of all measurement items and perform statistics again, as shown in Figure 7-8:

		RUN	2.8M	1GSa,	/s	 Ops	3	А Л (	1)1.02V			ГЛ
												=1V =F 10X F
											•••	<u> </u>
0.00 V	1				<b></b>					<b>, i </b>		Level
		Period	Freq.	RiseTi	Amp.	Low	Max	Min	+Width	RMS	Mean	3
	Curr:	1.000ms	1.000kHz		1.960V	40.00mV	2.086V	-42.04mV	499.2us	1.413V	1.017V	-
	Mean:	1.000ms	1.000kHz	2.569us	1.960V	40.00mV	2.086V	-42.86mV	499.2us	1.413V	1.017V	
	Max:	1.000ms	1.000kHz	2.688us	1.960V	40.00mV	2.086V	-20.00mV	499.2us	1.415V	1.018V	
	Min:	999.9us	1.000kHz	2.380us	1.960V	40.00mV	2.044V	-60.00mV	499.1us	1.412V	1.016V	
	Dev:	15.67ns	15.71mHz	44.12ns	0V	0V	1.321mV	3.858mV	13.02ns	482.0uV	322.3uV	4
	Cou:	2086	2074	2036	2018	2006	1994	1970	1952	1944	1930	
		Fine		B	Л	200us	Л		Hx	<u> </u>		एन 06:12 🗗

Figure 7-8 Statistics

#### **Measure Range**

The default setting for measure is to calculate the waveform across the entire screen, but it can also be set to only calculate the waveform within the cursor. Open the top menu, select "Measure," and click on "Settings" to adjust the measurement range. By setting it to "Cursor," the measure will only calculate the waveform within the cursor. As shown in Figure 7-9, the maximum value within the screen is around 5V. After setting the measurement range to the cursor, the maximum value becomes 40mV.

Note: When the measurement range is set to the cursor, the cursor will open automatically. After closing the cursor, the measurement range will automatically be set to the screen.

	STOP 1	4k 1GSa/	S	.⊽ Ops	A Nth 12.8	BV	
Measure	Save	Cursor	Sample	Display	Trigger	Auto	Userset
Common	Statics	Counter	Setting				
Indicator	$\odot$		Range	Screen	Cursor		
CH1							Reset
Thresholds	%	Absolute	High	90%	Middle 50%	Low	10%
2.1 V	X1:-5.020µs	X2:-3.100µs					
-2.9							
		920µs 20.8kHz					
-12.9 Мах: -17.9 -6µ		Low:- <mark>40.00n</mark> 4µs - <del>3</del> µs	NV Mea −2µs -1µs	n:36.62mV	ıs 2µs 3µs	4µs 5µs	s 6µs
	Fine 🗸		ЛЛ	1µs	л. Снх		

Figure 7-9 Measure Range

#### Indicator

Open the top menu, select "Measure," and click on the sub-menu "Setting" to open the measurement item

indicators, as shown in Figure 7-10.

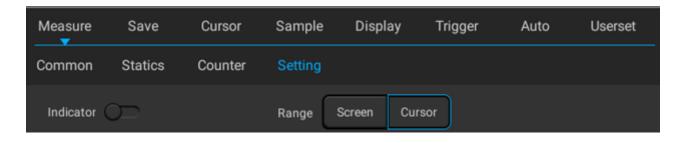


Figure 7-10 Indicator menu

After opening the indicator, you can select the displayed measurement items by clicking on them. The selected measurement item will be highlighted with a box, and its calculation object will be indicated by a white line in the waveform. As shown in Figure 7-11, in the measurement item display area below, "amplitude" is selected, and white line appears in the waveform as an indicator.

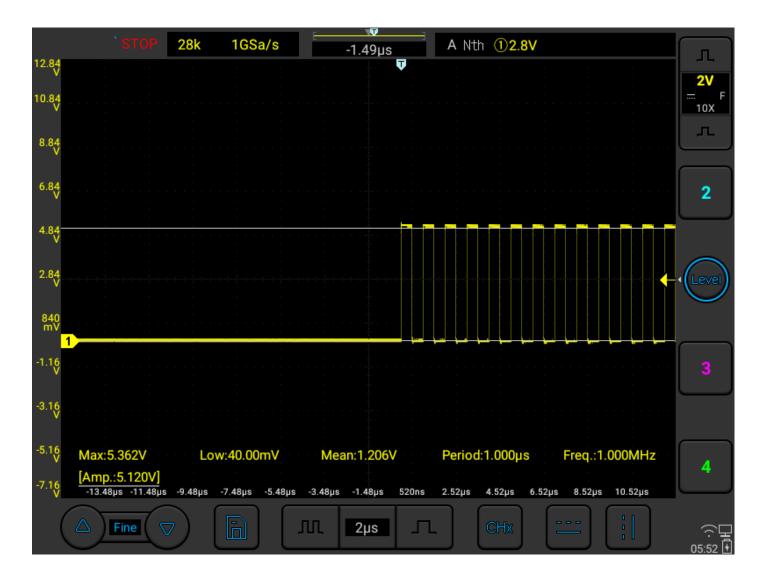


Figure 7-11 Indicator

#### **Measure Thresholds**

Each channel (CH1, CH2, CH3, CH4, Math) can be independently set with threshold values. The threshold type can be selected as "%" or "Absolute", as shown in Figure 7-12.

Measure	Save	Cursor	Sample	Display	Trigger	Auto	Userset
Common	Statics	Counter	Setting				
Indicator	$\Sigma$		Range	Screen Cu	rsor		
CH1							Reset
Thresholds	% A	bsolute	High	90%	viddle 50%	Low	10%

Figure 7-12 Measure Thresholds

The setting of thresholds will affect the results of the measurement items. The setting of the high and low values will impact the measurement results of rise time and fall time. The setting of the mid value will affect time parameters such as pulse width, frequency, delay, duty cycle, and phase. As shown in Figure 7-13, when the mid value is set to 80%, the positive pulse width of the signal relative to the mid value of 50% will be smaller.

When the set high value is lower than the current mid value, the mid value will automatically equal the high value; the high value cannot be lower than the mid value, and if the set value is lower than the low value, it will be automatically set to 1% or 10mV (absolute value) higher than the low value.



Figure 7-13 Set Middle Thresholds as 80%

## 7.2 Frequency Meter Measurement

Open the main menu, tap Measure and Counter to enter the hardware frequency meter setting menu, and select the channel to be measured, as shown in Figure 7-14. The measured value is displayed in the upper left corner of the screen, as shown in Figure 7-15.

Measure	Save	Sample		isplay	Trigger	Auto	Userset	
Common	Counter							
Frequency Meter	Disable	CH1	CH2	СНЗ	CH4			

Figure 7-14 Frequency Meter Measurement Menu Open

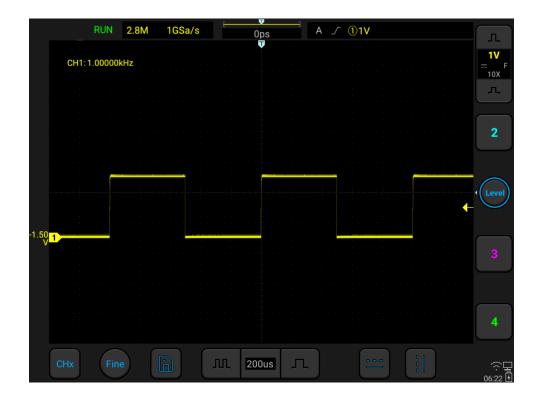


Figure 7-15 Frequency Meter Measurement

## 7.3 Cursor

Open cursor and place it on the measurement point to read the waveform measurement value. There are two types of cursors: horizontal cursor and vertical cursor. The horizontal cursor measures the vertical direction magnitude, and the vertical cursor measures the horizontal direction magnitude, as shown in Figure 7-16.

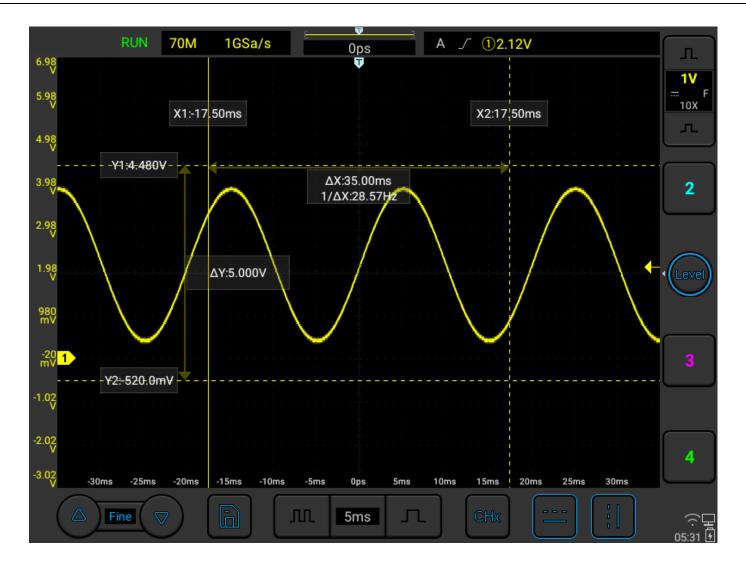


Figure 7-16 Cursor Measurement Description

Note:

 $\Delta$  reading: indicates the difference between two cursor positions.

Voltage readings after Y1, Y2: indicate the position of activated horizontal cursors relative to the zero potential.

Time readings after X1, X2: indicate the position of activated vertical cursors relative to the trigger point.

 $1/\Delta X$ : frequency


Vertical cursor on/off and activation

Vertical cursor on/off

Vertical cursor on: Tap cursor icon to open vertical cursors and the icon is on and activated.

Vertical cursor off: Tap cursor icon to turn off vertical cursors.

164

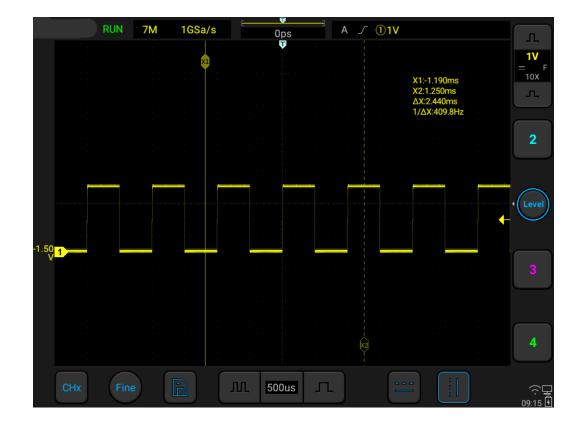

Tap the vertical cursor indicator line to switch the cursors.

Figure 7-17 Open Cursor Selection Box and Close Cursor

#### Vertical cursor movement descriptions:

- Use a single finger to press and hold the cursor indicator line on the screen to make coarse adjustment to the cursor; tap the fine adjustment button in the lower left corner of the screen to fine-adjust the cursor that has just been adjusted.
- 2) Cursor linkage: When the cursor is opened, two finger slide and enter the cursor linkage state.

Note: During the sliding process, the current operation is changed unless the initial two fingers leave the screen. If one finger leaves the screen and the other finger does not leave, the current linkage adjustment is continued.

#### Horizontal cursor on/off and activation

Horizontal cursor on/off, switching, activation and movement operations, similar to those of vertical cursors, will not be described in detail here, and please refer to vertical cursors for details.

Chapter 7 Analysis System

#### **Cursor test example**

When vertical cursors are activated, the two cursors move together to check for pulse width changes in the pulse

sequence.

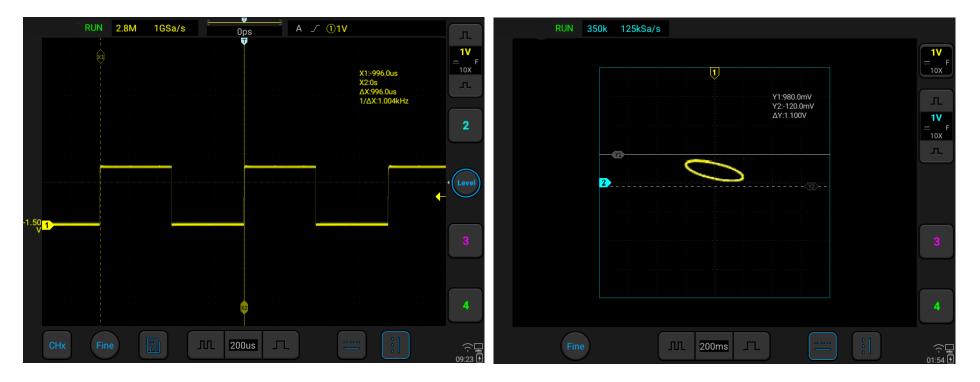


Figure 7-18 Cursor Measurement Pulse Width

Figure 7-19 In XY Mode, Cursor Measurement

In the XY horizontal mode, X cursor displays CH1 value (V or A), and Y cursor displays CH2 value (V or A).

This chapter contains the detailed information of the screen capture function and memory depth of the oscilloscope. You are recommended to read this chapter carefully to understand the 1000Drage system of the 1000D Series oscilloscope.

- Screen capture function
- Video recording
- Memory depth
- Waveform 1000Drage

# **8.1 Screen Capture Function**

The screen capture function can locally 1000Dre the display information on the current display screen in picture format.

Screen capture method: Slide upward from bottom to open pull-up menu. Tap the icon to have a screen capture in the oscilloscope application.

You may rename or edit the screenshot after taken screen capture.

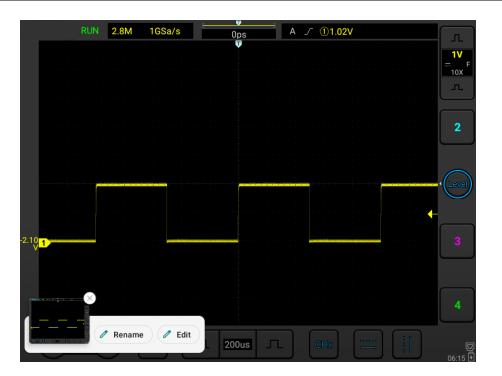


Figure 8-1 Screen Capture

Please refer to "<u>13.6 Picture View</u>" for details on viewing pictures.

## **Timestamp and InverseColor**

Invert and time-stamp screenshots is possible in oscilloscope.

Open the main menu, tap Save and enter Picture menu, turn off/on Timestamp and InverseColor button as desired.

	RUN 2	.8M 1GSa	/s	Ops	АЛ	1)980mV		
Measure	Save	Sample	Display	Trigger	Auto	2022-0	-11 09:40:31	
Wave	Setting	Picture						
Timestamp	-	InverseColor	-					
1							· · · · · · · · · · · · · · · · · · ·	
CHx	Fine	B	л	200us	-			00

Figure 8-2 Timestamp & inverse color

# 8.2 Video Recording

The video recording function is similar to the screen capture function, and the display information of the current display screen can be 1000Dred locally in video format.

Video recording method is sliding down from top in non-oscilloscope application, open pull-down menu, tap the screen to start recording, and count down to three seconds to complete the video recording, as shown in Figure 8-3. You can cancel recording by pressing the triangular, circular or square button at the bottom of the screen before the countdown ends.

During video recording, you can end recording by tapping the video recording time at the top left of the screen. Or you can leave the oscilloscope application interface to open the pull-down menu, and click "1000Dp Recording" to end

the video recording.

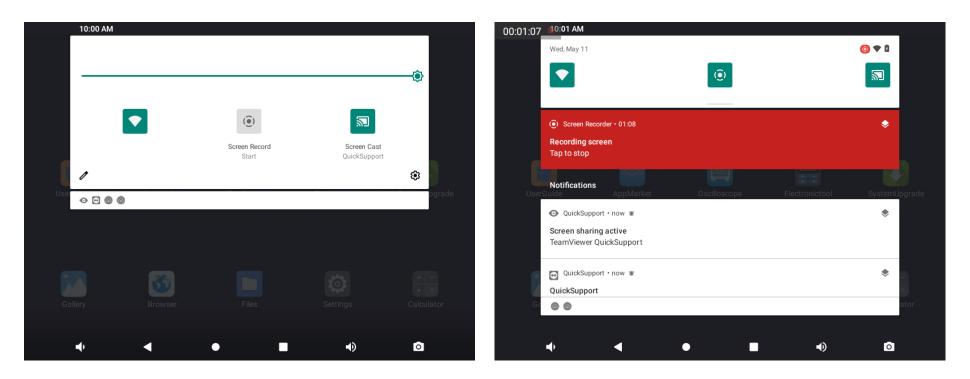


Figure 8-3 Video Recording Method

Figure 8-4 Video Recording

Please refer to "<u>13.7 Gallery</u>" for details of viewing videos.

## 8.3 Waveform 1000Drage

The oscilloscope can save the analog channel or math channel waveform locally or in USB device. The file type can be WAV, CSV or BIN.

The oscilloscope provides four reference channels, which can be called to load WAV format files into the reference channel and open the reference channel to display the reference waveform.

#### Save reference file

Slide down from top, open main menu and tap "Save" to open the menu. Save the reference waveform interface of the specified channel as follows:

	RUN 2	2.8M 1GSa	/s	ops		А / 🕦	80mV		л
Measure	Save	Sample	Display	Trigg	er	Auto	Userset		1V 
Wave	Setting	Picture							10X
●CH1						_			2
Save In	Local	UDisk		Туре	WAV	CSV	BIN	J	
Name	22051100	01	Save	Save To	R1	R2	R3	R4	Level
									3
-3.10 <mark>1</mark>									
V									
									4
СНх	Fine		ЛЛ	200us	л			:	

Figure 8-5 Save CH1 Reference Waveform Interface

Location: 1000Dred locally and in USB device.

File types: WAV, CSV, and BIN.

File name: The initial file name is displayed as year + month + day + 1000Drage serial number. Press the file name box to pop up the virtual keyboard, tap "Backspace" to delete the file name, and use the virtual keyboard to rename the file.

Save: Tap to save the reference file and pop up the save success prompt. The most recently saved file will be displayed at the top of the called menu.

Save to: Tap the R* (R1, R2, R3, R4) button to save the current channel waveform directly to the corresponding reference channel, and the save success prompt will pop up.

Back: Tap to return to the previous level.

#### Method 1: Click the "save" button

In the Save Reference Waveform menu, select the channel waveform to be saved, select the file save location, file type and file name, and click the "save" button to save the reference waveform file.

#### Save the reference waveform by steps as follows:

1) The current channel is set to the channel to be saved, which can be analog channel, math channel or reference.

- 2) In the main menu, tap "Save" to enter the save menu.
- 3) In the Save menu, tap "Save" to open the Save Reference Waveform menu and make the following settings:
  - 1000Drage location: locally.
  - Selecting the file type: WAV.
  - Entering the file name: CH1.
- 4) Tap "Save" to save the reference file. The save success prompt box is popped up.

If the reference waveform file is to be saved in USB device, the oscilloscope must be connected to an external USB device. After connection, the reference waveform save location is preferentially set to the USB device.

There is no limit to the number of saved reference waveform files.

#### Method 2: Click R* button

In the Save Reference Waveform menu, tap R* (R1, R2, R3, R4) button to save the current channel waveform directly to the corresponding reference channel, and the save success prompt will pop up. The file name is displayed

as Ref* in the reference channel (* is the corresponding reference channel name). Reference waveform files saved by this method will be overwritten after loading other reference waveforms and cannot be re1000Dred.

#### Method 3: Click "Quick Save" button

Tap at bottom of the screen to save all channel waveforms as reference waveforms and capture the current screen. The file names are the default initial file names.

#### Management of reference files

In the file manager, open waveforms in the classification file to manage reference files by operations such as copy, cut, delete, rename, compress, etc., as shown in Figure 8-4. Select reference files and click trash button to delete them; click More at bottom of the screen, tap Rename to open soft keyboard and change the reference file name. Tap Compress to pop up the soft keyboard and enter the compressed file name to compress the file; when inserting the USB device, files on the oscilloscope can be moved to the USB device.

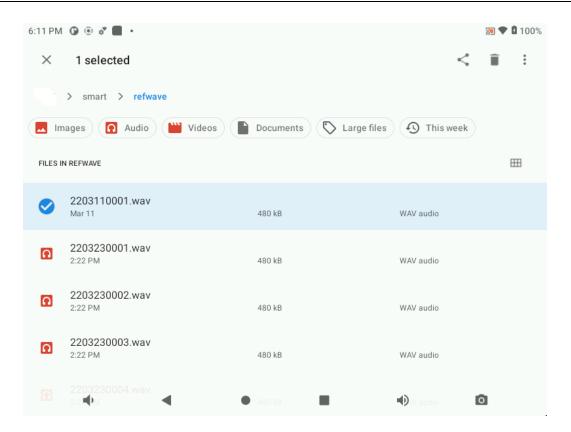


Figure 8-6 Delete Reference Files

#### **CSV** files

**CSV file structure** 

CSV format contains the basic information of the saved data: save time, file name, data length, sampling interval, trigger time, source, vertical scale, vertical offset, vertical accuracy, horizontal time base, horizontal accuracy, probe multiples.

The data and length of CSV files can be saved up to 70K/35K depending on the single/dual channel while being saved. If the oscilloscope record length or the displayed data length is less than 70K/35K, the data length of CSV files changes either. For example, when the record length is set to 14/7/3.5K, there will be 7000 sample points in the dual channel CSV file.

#### Max and Min in CSV files

If running Min or Max measurements, Min and Max values displayed on the measurement results screen may not appear in CSV files.

Explanation: If the oscilloscope sampling rate is 1GSa/s, sampling will be once every 1ns. If the horizontal scaling is set to 10us/div, the data of 140us will be displayed (because there are 14 divisions on screen). To find the total number of samples, the oscilloscope will perform: 140us×1GSa/s=140K sampling, which require the oscilloscope to display 140K times of sampling using 600-pixel columns. The oscilloscope extracts 140K samples into 600-pixel ¹⁸⁰

columns, and this extraction will track Min and Max values of all points represented by any given column. These Min and Max values will be displayed in this screen column.

The similar process is applied to reduce sampled data and produce records that can be used to perform various analyses, such as measurements and CSV data. This analysis record (or measurement record) is much larger than 600 and may actually contain up to 60,000 points. However, once the number of points sampled exceeds 60,000, some extraction method is required. The extraction factor used to generate the CSV record is configured to provide the best estimate of all samples represented by each point in the record. Therefore, Min and Max values do not appear in CSV files.

## **8.4 Oscilloscope setting save**

The oscilloscope supports saving up to 10 current settings and re1000Dring them with one key.

Open the main menu, tap Save and enter Setting menu, as shown in Figure 8-7.

	'RUN 2.8	M 1GSa/	's	T Ops	A	∫ ①980mV		Гл
Measure	Save	Sample	Display	Trigger	Au	to Userse	t	1V
Wave	Setting	Picture						10X
	SaveTo		micsi	g s	ave	Recovery		
			USERSET_		ave	Recovery		2
			USERSET_	2 S	ave	Recovery		
			USERSET_:	S S	ave	Recovery		$\square$
			USERSET_4	4 S	ave	Recovery		Level
			USERSET_	=	ave	Recovery		
			USERSET_	=	ave	Recovery		3
			USERSET_	=	ave	Recovery		3
			USERSET_	=	ave	Recovery		
			USERSET_		ave	Recovery		
								4
CHx	Fine		几 2	00us	г			?⊑ 10:04 ि

Figure 8-7 oscilloscope setting save

Tap the black box area to rename save settings, tap the Save button to 1000Dre, the Recovery button to re1000Dre the

settings.

# **Chapter 9 MATH and Reference**

This chapter contains the detailed information of the MATH operation and reference channel of the oscilloscope.

You are recommended to read this chapter carefully to understand the setting functions and operations of the MATH and reference channels of the 1000D Series oscilloscope.

- Dual waveform calculation
- FFT measurement
- Reference waveform call

## **9.1 Dual Waveform Calculation**

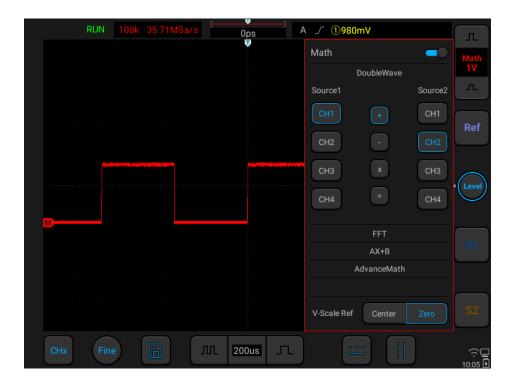


Figure 9-1 MATH Channel Waveform

#### **Display math waveform**

Swipe up or down at the channel selection area to enter the second channel selection area. Tap the soft key open the math channel. After the math waveform is opened, the current channel selector is automatically opened.

Left swipe math channel icon to open the math channel menu. While opening math for the first time, the math operation is defaulted as the dual channel calculation.

### Math operation prompt

If the analog channel or math function is clipped (not fully displayed on the screen), the resulting math function will also be clipped.

Once the math waveform is displayed, tap the channel icon to close the source channel for a better view of the math waveform.

The vertical sensitivity and offset of each channel participating in the math function can be adjusted to facilitate viewing and measuring of the math waveform.

The math function waveform can be measured using "Cursor" and "Measure".

#### Adjust the math waveform

Press the math channel vertical sensitivity icon, directly tap the math waveform or math channel indication icon M→, and set the math channel as the current channel.

- For details of movement, vertical sensitivity adjustment, time base adjustment and vertical expansion reference of the math channel, please refer to "<u>Chapter 4 Horizontal System</u>" and "<u>Chapter 5 Vertical System</u>".
- 3) The vertical sensitivity, unit and time base corresponding to the math waveform are displayed in the channel area of the math channel. For details, see "<u>2.7 Understand the Oscilloscope Display Interface</u>".

#### Math waveform units

Use "Probe Type" on the channel menu to adjust the channel unit (refer to "<u>5.4.4 Set Probe Type</u>") and set the unit of each input channel to Volt or Ampere. The units of math function waveform include:

Math Function	Unit					
+/	V, A, ?					
×	VV, AA, W					
÷	V/V, V/A, A/A, A/V					

Table 9-1 List of Mathematical Units

**Note:** If the units of two operation source channels are different and the unit combination cannot be identified, the unit of math function will be displayed as? (undefined).

#### Math operators

Math operators perform arithmetic operations on the analog input channels.

### Addition or subtraction

If addition or subtraction is selected, the values of function sources 1 and 2 will be added or subtracted point by point and the results will be displayed.

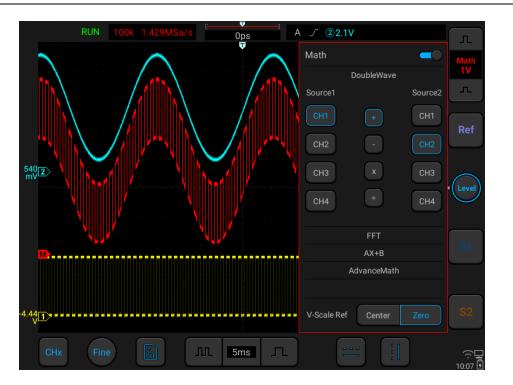


Figure 9-2 Mathematical Operation of CH1 adding CH2

### **Multiplication or division**

When multiplication or division is selected, the values of function sources 1 and 2 values will be multiplied or divided point by point and the results will be displayed.

Multiplication is useful when viewing the power relationship, if one of the channels is proportional to the current.

## **9.2 FFT Measurement**

FFT is used to calculate the Fast Fourier Transform using the analog input channel. FFT record specifies the digitization time of the source and converts it to the frequency domain. After selecting the FFT function, FFT spectrum is plotted as amplitude in V-Hz or dB-Hz on the oscilloscope display screen. The reading of the horizontal axis changes from time to frequency (Hz), while the unit of the vertical axis changes from volt to V or dB.



Figure 9-3 FFT Window

#### **Open FFT**

1) Swipe up or down at the channel selection area to enter the second channel selection area. Tap the soft key

to open the math channel, left swipe to open math channel menu.

- 2) Tap **FFT** spectrum type "Line/Decibel" to open the FFT window (see Figure 9-3 FFT Window).
- 3) Tap the Operation Source box to select the channel for which FFT transform is required.
- 4) Tap the window box to select the window function applied to the FFT input signal.

#### Selection of window function

In the FFT transform, four different FFT windows can be selected.

Each window is alternatively used between frequency resolution and amplitude accuracy, and the appropriate window may be selected according to the characteristics of the following windows.

#### • Rectangular window

This is the best window type for resolution frequencies that are very close to the same value, but this type is the least effective at accurately measuring the amplitude of these frequencies. It is the best type of measuring the spectrum of non-repetitive signals and measuring the frequency component close to DC. Use the "Rectangular" window to measure transients or bursts of signal levels before or after almost the same event. Moreover, this window can be used to measure equal-amplitude sine waves with very close

frequencies and wideband random noises with relatively slow spectral variations.

#### • Hamming window

This is the best window type for resolution frequencies that are very close to the same value, and the amplitude accuracy is slightly better than the "Rectangular" window. The Hamming type has a slightly higher frequency resolution than the Hanning type.

Use Hamming to measure sinusoidal, periodic, and narrowband random noises. This window is used for measuring transients or bursts of signal levels before or after events with significant differences.

#### • Hanning window

This is the best window type for measuring amplitude accuracy but less effective for resolving frequencies.

Use Hanning to measure sinusoidal, periodic, and narrowband random noises. This window is used for measuring transients or bursts of signal levels before or after events with significant differences.

#### • Blackman-Harris window

This is the best window type for measuring frequency amplitude, but worst for measuring the resolution frequency.

Use the Blackman-Harris measurement to find the main single-signal frequency waveform for higher harmonics.

Since the oscilloscope performs FFT transform on the finite-length time record, the FFT algorithm assumes that YT waveform is continuously repeated. Thus, when the period is integral, the amplitudes of YT waveform at the beginning and at the end are the same, and waveform will not interrupt. However, if the period of YT waveform is not integral, the waveform amplitudes at the beginning and at the end are

different, resulting in high-frequency transient interruption at the junction. In the frequency domain, this effect is called leakage. Therefore, to avoid leakage, the original waveform is multiplied by a window function, forcing the values at the beginning and at the end to be zero.

**Note:** Signals with DC components or deviations can cause errors or deviations in the FFT waveform components. AC coupling can be selected to reduce DC components.

#### Persist

The oscilloscope supports FFT persist setting, which is by default set to "None" and can be set to "Infinite" ( $\infty$ ) to never clear previously collected results. Select "Normal" to specify the persist time, which can be set to 200ms, 500ms, 1s, 2s, 5s, or 10s.

### Spectrum type

Select Line, the vertical axis reads V or A; select dB, the vertical axis reads dB. When the spectrum is linear, the waveform is shown in Figure 9-4.



Figure 9-4 Spectrum Amplitude as V-Hz

## **Adjust FFT waveforms**

## Waveform position

- Select math channel as the current channel. After touching math waveform on the screen with one finger, adjust the waveform display position by dragging upward and downward, leftward and rightward, or tap the fine adjustment button in the lower left corner of the screen for fine adjustment
- Select math channel as the current channel and press the "position" knob in the horizontal button area to move the leftmost side of the waveform (0Hz) to the horizontal center of the screen.
- Select math channel as the current channel and press the "position" knob in the vertical button area to move the waveform to the vertical center of the screen.

## Horizontal time base scale

Select math channel as the current channel, tap the time base adjustment button, and adjust the horizontal time base scale. The horizontal time base is stepped in 1-2-5, and the waveform changes either.

For FFT measurement, the reading of the horizontal axis changes from time to frequency (Hz), and it no longer shares the same time base with other analog channels. Therefore, before adjusting the horizontal frequency scale, the math channel must be set as the current channel.

#### Vertical sensitivity

Tap or on the right side of the screen to set the vertical sensitivity (V/div or dB/div) for the channel so that waveform is displayed on the screen at an appropriate size. The vertical sensitivity factor is stepped in 1-2-5 (using 1:1 probe).

Note: FFT waveform does not support automatic parameter measurement.

## 9.3 Advanced Math

1000D Series oscilloscopes support user-defined editing formulas for waveform calculation. Support the input of

functions, operators, channels, constants, variables, etc. The expression supports up to 36 characters.

Click the corresponding button to input and edit the waveform (please click in order, the ones that are grayed out cannot be clicked).



Figure 9-5 Advanced Math

Туре	Description	Item	Remark
Function		Sqrt(), Abs(), Deg(),	Functions can be nested
		<pre>Rad()、Exp()、Diff()、</pre>	
		ln(), Sine(), Cos(),	
		Tan()、Intg()、Log()、	
		arcsin(), arccos(),	
		arctan()	
Channel	Source	Ch1、Ch2、Ch3、Ch4	
Variable	Source	variable1、variable2	When a variable is written in the
			expression, the input box of the
			variable appears in the math menu,
			indicating that it can be input; for
			example, input 4.1235 -3 for variable
			1, which means $4.1235 \times 10^{-3}$

			Variable value range -9.9999~9.9999,
			variable power range $-9^{\sim}9$
Operator		+、-、*、/、==、!=、>、	
		$<$ , $\geq$ , $\leq$ , && , $  $ , !(	
symbol	brackets	(,)	
Value	Source	0, 1, 2, 3, 4, 5, 6, 7, 8,	
		9、.、π、Ε	
	Source	10 [×]	
	Numerical	f, p, n, u, m, K, M, G, T	
	unit		

Table 9-2 List of Advanced Math

## 9.4 Reference Waveform Call

## Reference waveform call and close

Swipe up or down at the channel selection area to enter the second channel selection area. Left swipe button to open the reference menu, see Figure 9-5.

-	RUN	87.5k	31.25kSa	/s	¶ Ops ∎	АЛ	①980mV		
							Ref		Math
						· · · · · ·	R1		$\square$
							Recall	2205100001 2022-05-10 13:49:00	Л
									Ref 500mV
							R2		л
R1					rad frant rung	i min ii	Recall	2205070003 2022-05-07 17:09:24	Level
						· · · · · ·	R3		
							Recall		S1
							R4		
<u>R2</u>						Ļ			$\frown$
							Recall		S2
СНх	Fine	e		ЛЛ	2ms				
					21110				· · 도 10:12 년

#### Figure 9-6 Reference Channel Menu

When there are already waveforms loaded into the reference channel, click "Open/Close" button to open or close

the reference channel; the reference waveform is displayed in blue-violet, and the four 1000Dred waveforms can be

displayed simultaneously, wherein the current reference waveform is brighter than non-current reference

waveforms.


When there are no waveforms loaded into the reference channel, turn on the "Call" switch to call waveforms.

 
#### Take R1 as an example, with operation steps as follows:

- 1) Open reference menu.
- 2) Tap the "Call" file box under R1 to open the reference file column.
- 3) Click the name of the reference waveform file to be called. The file is loaded into R1 channel. Then, R1 channel is turned on as the current channel waveform, and the reference waveform channel icon is highlighted. The displayed state changes from "Close" to "Open". As in Figure 9-6, the brighter reference waveform is shown as the current reference channel.

If there are already files loaded into the reference channel, tap to open the reference channel of all loaded reference files; Right swipe to close all currently opened reference waveforms. A single reference channel

may also be opened with the Open/Close button.

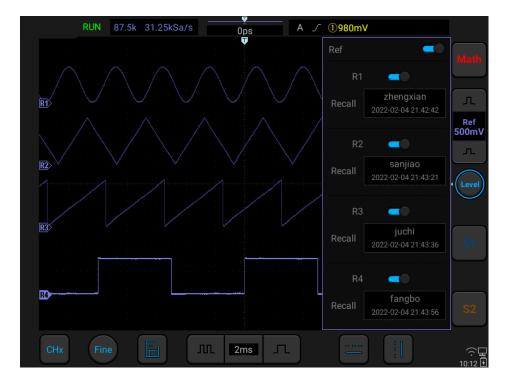



Close the reference waveform:

#### Chapter 9 MATH and Reference

- 1) In the reference menu, tap "Open/Close" button in R1 to close the reference waveform.
- 2) Repeat step 1 to close other reference channels.
- 3) Right swipe  $\underbrace{\mathbb{P}}^{\text{ref}}$  to turn off all reference waveforms.

### Reference waveform movement and time base adjustment

The horizontal or vertical movement and zoom of reference waveforms are independent of analog channels, and the adjustments among different reference waveform channels are also independent of each other.

To adjust the reference waveform of a channel, first set the channel as the current channel, and then adjust the reference waveform by move or zoom (in accordance with the analog channel method).

The scale and time base of the current channel reference waveform are displayed on the reference button. After switching the current reference channel, the scale and time base on the reference button change with the change of current reference channel.

# **Chapter 10 Display Settings**

This chapter contains the detailed information of the display settings and function buttons of the oscilloscope. You are recommended to read this chapter carefully to understand the display setting functions and operations of the 1000D Series oscilloscope.

- Waveform setting
- Graticule setting
- Color temperature setting

- Persistence setting
- Horizontal expansion center
- Time base mode selection

Chapter 10 Display Settings

In the main menu, tap Display button to enter display settings menu, as shown in Figure 10-1.

Measure	Save	Sample	Display	Trigger	Auto	Userset
Common	Waveform	Graticule	Persist			
HorRef	Center Tri	gPos Tir	meBase	YT XY		
Roll			сст 🔵			

Figure 10-1 Display Settings and Function Buttons

## **10.1 Waveform Settings**

Open the display menu, tap Waveform button to open the waveform display menu. This menu is used to set the display mode and brightness of waveform. The waveform display mode is divided into two types: dots and vectors. The waveform brightness percentage is adjustable, and the waveform display setting is shown in Figure 10-2.

Measure	Save	Sample	Display	Trigger	Auto	Userset
Common	Waveform	Graticule	Persist			
Draw Type	Dots Ve	ctors Brigh	ntness –	•	30	%

Figure 10-2 Waveform Display Menu

# **10.2 Graticule Setting**

Open the display menu and tap Graticule button to open the graticule setting menu (Figure 10-3). Graticule display mode includes: "Full", "Grid", "Crosshair" and "Frame", and the brightness percentage is adjustable.

Chapter 10 Display Settings

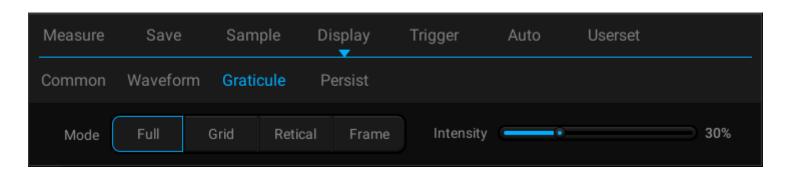


Figure 10-3 Graticule Menu Display

## **10.3 Persistence Setting**

Open the display menu and tap Persist key to open the persistence settings menu.

### 1) Persistence setting

In the persistence setting menu, select:

- None: None no persistence.
- Auto: Auto automatic persistence.

- Normal: Normal set the persistence time After selecting the variable persistence, tap the box on the right of "Adjust" to pop up the persistence time selection box (Figure 10-4) and set the persistence time. It can be set between 10ms and 10s.
- $\infty$ : Infinite persistence never erase the results of previous acquisitions

Infinite persistence can be used to measure noise and jitter, display the worst-case extremes of varying waveforms, find time violations, capture events that occur infrequently.

#### Chapter 10 Display Settings

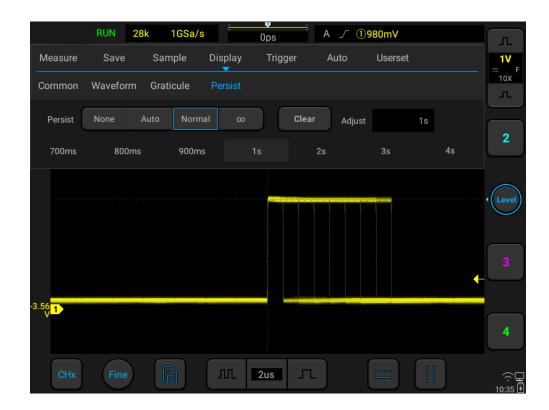


Figure 10-4 Persist time adjust

### 2) Erase persistence

To erase the previously acquired results from the display, tap and vertical sensitivity. The oscilloscope will erase the persistence display and start the cumulative acquisition again.

## **10.4 Horizontal Expansion Center**

Horizontal expansion is divided into two types: screen center and trigger position:

### 1) Screen center

Select "Center" to adjust the time base waveform to expand or contract toward both sides with the screen center as the base point, and the delay time does not change.

### 2) Trigger position

Select "TrigPos" to adjust the time base waveform to expand or contract toward both sides with the trigger position as the base point. The delay time varies with the horizontal time base.

# **10.5 Color Temperature Setting**

Turn on the color temperature mode, and the waveform display is shown in Figure 10-5;

#### Chapter 10 Display Settings

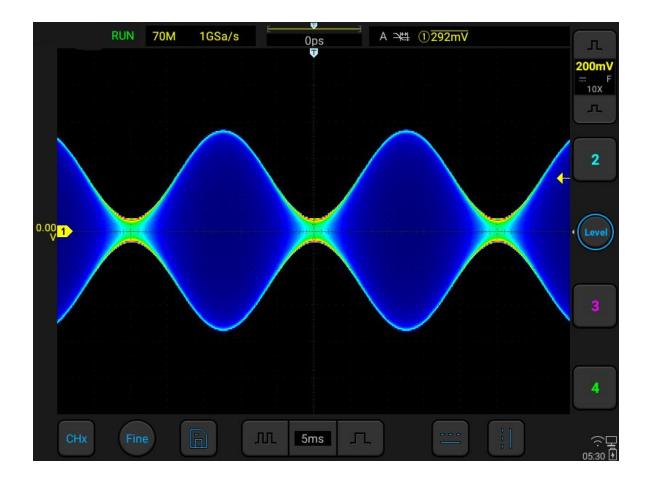


Figure 10-5 Color Temperature Open Mode

### **10.6 Time Base Mode Selection**

For details, please refer to "<u>4.4 ROLL, XY</u>" in Chapter 4.

# **Chapter 11 Sampling System**

This chapter contains the detailed information of the sampling system of the oscilloscope. You are recommended to read this chapter carefully to understand the setting and operation of the sampling system of the 1000D Series oscilloscope.

- Sampling overview
- Run, 1000Dp and single sequence acquisition (running control)
- Select sampling mode
- Record length and sampling rate

### **11.1 Sampling Overview**

To understand the sampling and sampling modes of the oscilloscope, you need to understand the sampling principle, aliasing, oscilloscope bandwidth and sampling rate, oscilloscope rise time, required oscilloscope bandwidth, and the influence of memory depth on the sampling rate.

### **Sampling principle**

According to the Nyquist sampling principle, for a bandwidth-limited signal with the maximum frequency  $f_{MAX}$ , the equidistant sampling frequency  $f_S$  must be twice as large as the maximum frequency  $f_{MAX}$ , so that a unique signal can be reconstructed without aliasing.

$$f_{MAX} = \frac{f_S}{2} = Nyquist frequency (f_N) = alias frequency$$

### Aliasing

Aliasing occurs when the signal is under sampled ( $f_S < 2f_{MAX}$ ). Aliasing is signal di1000Drtion caused by incorrectly

reconstructing low frequencies from a small number of sampling points.

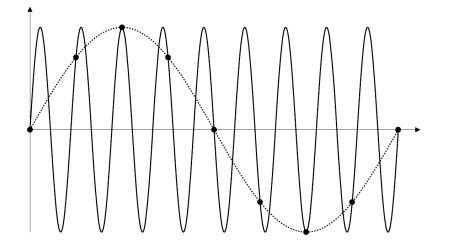


Figure 11-1 Aliasing

### Oscilloscope bandwidth and sampling rate

The oscilloscope bandwidth usually refers to the lowest frequency at which the input signal sine wave is attenuated by 3dB (-30% amplitude error).

For oscilloscope bandwidth, according to the sampling principle, the required sampling rate is  $f_s=2f_{BW}$ . However, this principle assumes that there is no frequency component exceeding  $f_{MAX}$  ( $f_{BW}$  in this case) and requires a system with ideal brick-wall frequency response.

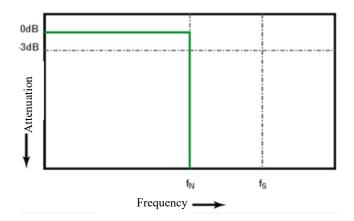


Figure 11-2 Theoretical Brick-Wall Frequency Response

However, digital signals have frequency components that exceed the fundamental frequency (the square wave consists of sine waves at fundamental frequency and an infinite number of odd harmonics), and for bandwidths of 500MHz and below, the oscilloscope typically has Gaussian frequency response.

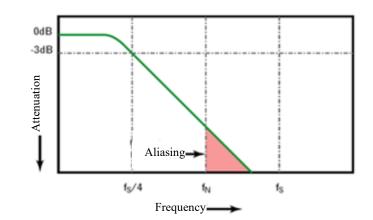


Figure 11-3 Sampling Rate and Oscilloscope Bandwidth

The oscilloscope bandwidth is limited to 1/4 sampling frequency and reduces the frequency response above the Nyquist frequency.

Therefore, in fact, the oscilloscope sampling rate should be 4 times or more of its bandwidth:  $f_s \ge 4f_{BW}$ . This can reduce aliasing and cause greater attenuation in the aliased frequency components.

### **Oscilloscope rise time**

The oscilloscope rise time is closely related to its bandwidth. The rise time of an oscilloscope with Gaussian type frequency response is approximately  $0.35/f_{BW}$  (based on the standard from 10% to 90%).

The oscilloscope rise time is not the fastest edge speed that an oscilloscope can accurately measure. It is the fastest edge speed that the oscilloscope can produce.

### Desired oscilloscope bandwidth

The oscilloscope bandwidth required to accurately measure signal is primarily determined by the rise time of the signal rather than the frequency of the signal.

The following steps can be used to calculate the required oscilloscope bandwidth:

1) Determine the fastest edge speed.

Rise time information is typically obtained from the published device specifications used in the design.

2) Calculate the maximum "actual" frequency component.

According to Dr. Howard W. Johnson's book "*High-Speed Digital Design–A Handbook of Black Magic*", all fast edges have wirelessly continuous frequency components. However, there is a turning point (or "inflection point") in the fast edge spectrum at which frequency components above  $f_{knee}$  are negligible in determining the signal shape.

 $f_{knee}$ =0.5/signal rise time (based on 10% - 90% threshold)

 $f_{knee}$ =0.4/signal rise time (based on 20% - 80% threshold)

3) The multiplication factor for the desired accuracy is used to determine the required oscilloscope bandwidth.

Desired	Desired Oscilloscope
Accuracy	Bandwidth
20%	$f_{BW}=1.0xf_{knee}$
10%	$f_{BW}=1.3xf_{knee}$
3%	$f_{BW}=1.9xf_{knee}$

www.gpslimited.com

Chapter 11 Sampling System

Figure 11-4 Bandwidth Corresponding to Oscilloscope Measurement Accuracy

# 11.2 Run/1000Dp Key and Single SEQ Key

Use softkeys in the button area to start and 1000Dp the oscilloscope acquisition system: Run/1000Dp

button and Single Sequence Augustion

button.

• When the Run/1000Dp butters is displayed in green, it indicates that the oscilloscope is running, that is, it meets the trigger condition and data acquisition is being performed. The green " where " is displayed

in the upper left corner of the screen.

To 1000Dp data collection, tap the Run/1000Dp button. After 1000Dpping, the screen displays the last acquired

waveform.



STOP

When the Run/1000Dp button is displayed in red, it indicates that data acquisition has 1000Dpped.
 The red" " is displayed in the upper left corner of the screen.

To resume data acquisition, press the Run/1000Dp button again.

• To capture and display single acquisition (whether the oscilloscope is running or 1000Dpped), tap the single sequence key for a single acquisition.

# **11.3 Select Sampling Mode**

Open the main menu, tap the sampling mode option under "Sampling", and choose among the four sampling modes: normal, average, peak and envelope in the pop-up box.

The sampling modes of all channels are same. That is, if the sampling mode of any channel is changed, the sampling mode of all channels is changed at the same time.

### Normal sampling mode

Oscilloscope samples signal through equivalent time intervals to build waveform. When the time base of 20 ns or faster is chosen, the oscilloscope automatically performs an interpolation algorithm that inserts difference point between sampling points.

This mode produces the best display effects for most waveforms.

### Peak sampling mode

In peak sampling mode, when the horizontal time base setting is low, the minimum and maximum sample values are retained to capture rare events and narrow events (with any noise expanded). This mode will display all pulses that are at least as wide as the sampling period.

When the time base is set to 200ms and above, the oscilloscope will automatically exit the peak sampling mode and switch to the normal sampling mode.

### Burr or narrow pulse capture

Burr is the rapid change in waveform that is usually narrower than waveform. Peak sampling mode can be used to view burr or narrow pulses more easily. In the peak sampling mode, narrow burr and transition edges are brighter than in those in the "normal" sampling mode, making them easier to see.

Applying the peak sampling mode can avoid signal aliasing but show more real noises.

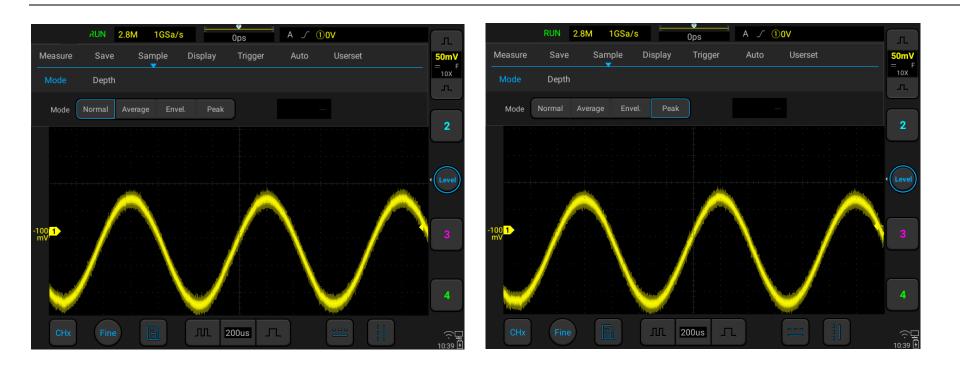


Figure 11-5 Sine Wave with Burr

Normal Sampling Mode

Figure 11-6 Sine Wave with Burr

Peak Sampling Mode

### Use peak detection mode to find burrs

- 1) Connect signal to the oscilloscope to be stably displayed.
- 2) To find burr, select the peak sampling mode in Sampling Mode option in the Channel menu.
- 3) In the menu, tap "Display" → "Persistence", then tap "∞" (infinite persistence). The oscilloscope will restart sampling data and display them on the screen.
- 4) Use the zoom mode to represent the characteristics of burr:
  - a. Tap the "Zoom" button in the main menu to open the zoom window.
  - b. To get a better resolution of burr, expand the time base to set the expanded portion of the normal window view around burr.

### Average sampling mode

The average sampling mode averages multiple acquisition results to reduce random or unrelated noises in the displayed signal. The average of multiple sampling results requires stable trigger.

The average number can be set in the selection box after the average sampling mode, and can be set to eight order of magnitudes: 2, 4, 8, 16, 32, 64, 128 and 256.

The higher the average number is, the slower the response of the displayed waveform-to-waveform changes. A compromise must be made between the response speed of waveform versus the changes and the degree of noise reduction shown on the signal.

### Use average sampling mode

- 1) Open the channel menu and select the average sampling mode in the sampling mode option.
- Press the number box on the right of the average sampling mode box to pop up the average number and then tap it to set the average number that can best eliminate displayed waveform noises.



Figure 11-7 Waveform after choosing the average sampling mode, with average number 32

### **Envelope sampling mode**

In the envelope sampling mode, the superposition effect of several sampled waveforms can be observed. The maximum and minimum values of one signal can be captured in the specified N sample data, and the number of waveform superpositions can be set to 2, 4, 8, 16, 32, 64, 128, 256 or  $\infty$ .

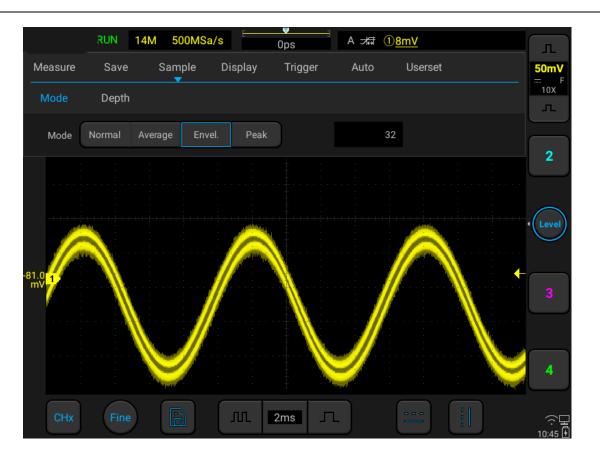


Figure 11-8 AM Signal in Envelope Sampling Mode (32)

## **11.4 Record Length and Sampling Rate**

The record length is the data volume for each captured waveform. For example, if the record length is 700K, it means that 700K sample points are captured by one trigger.

In the main menu, tap "Sample" to enter the record length setting menu, which can be set by tapping the corresponding record length.

Measure	Save	Sample	Display	Trigger ,	Auto U	serset
Mode	Depth					
Depth	Auto	70/35/17.5M	7/3.5/1.75M	700/350/175K	70/35/17.5k	C 7/3.5/1.75K

Figure 11-9 Record Length

In normal refresh mode, if it is a single channel, the record length can be set to 7k, 70k, 700K, 7M, 70M, Auto; if it is dual channel, the record length can be set to 3.5k, 35k, 350K, 3.5M, 35M, Auto; if it is three or four channels, the record length can be set to 1.75k, 17.5k, 175K, 1.75M, 17.5M, Auto.

### **Record length and sampling rate**

The record length is data volume collected per waveform capture. For example, if the record length is 0.7M, it means that 700K sample points are captured by one trigger.

The oscilloscope record length and sampling rate have the following relationship:

Sampling rate = record length/acquisition time

Generally, the oscilloscope acquisition time is exactly the display time on the current entire screen (current horizontal time base $\times$ 14).

For example, if the oscilloscope has the memory depth of 700K, the sampling rate of 1GSa/s, and the horizontal time base of 50us/div, the acquisition time is 700us, which is 50us/div×14div.

However, when the fast time base (below 20 ns) or the record length is set to a fixed value, the oscilloscope acquisition time does not necessarily represent the display time on the current entire screen.

For example, if the oscilloscope has the memory depth of 700K, the sampling rate of 1GSa/s, and the horizontal time base of 20ns, the acquisition time is 700ns, which is 2.5 times of the current display time on the entire screen.

Or, if the memory depth is 140K (fixed value), the sampling rate is 1GSa/s, and the horizontal time base is 1us, the acquisition time is 140us, which is 10 times of the current display time on the entire screen.

For a single channel in a channel pair, the maximum sampling rate of the 1000D Series oscilloscope is 1GSa/s.

If any two channels are opened, the sampling rate of the two channels will halved. For example, when CH1 and CH3 are opened, the sampling rates of CH1 and CH3 are both 500 MSa/s.

If any three channels or all four channels are opened, the sampling rate per channel will become 1/4 of the maximum sampling rate. For example, when CH1, CH2 and CH3 are opened, the sampling rates of CH1, CH2 and CH3 are 250 MSa/s for each of them.

# **Chapter 12 Serial Bus Trigger and Decode (Optional)**

This chapter contains the detailed information of serial bus decoding. You are recommended to read this chapter carefully to understand the setting and operation of 1000D bus trigger and decode.

This chapter mainly include the below contents:

- UART (RS232/RS422/RS485) bus trigger and decode
- LIN bus trigger and decode
- CAN bus trigger and decode
- SPI bus trigger and decode
- I2C bus trigger and decode
- ARINC429 bus trigger and decode
- 1553B bus trigger and decode

Chapter 12 Serial Bus Trigger and Decode (Optional)

Swipe up or down at the channel selection area to enter the second channel selection area, tap or to enable decoding, open bus configuration menu, select bus type, there are seven bus types: UART (RS232/RS422/RS485), LIN, CAN, SPI, I2C, ARINC429, 1553B, where channels S1 and S2 can be used for decoding simultaneously. Open the trigger setting menu, choose an appropriate trigger type, the corresponding bus trigger type and trigger mode can be set when the bus trigger is selected, and the serial bus is displayed in graphic form.

In the serial bus decode mode, if it is screen rolling in other modes, the time base is automatically adjusted to 1ms when switching to serial decode (the maximum time base supported by the serial decode mode is 100ms); in Zoom mode, the enlarged signal can be decoded and displayed. The normal display window supports a maximum time base of 100ms. When decoding is enabled, clicking "AUTO" will set the trigger type to be the same as the decode channel bus type. The bus type selection menu is shown in Figure 12-1:



Figure 12-1 Bus Type Selection Menu

Open the pull-up menu and tap key to open or close the text mode, as shown in Figure 12-2.

#### Chapter 12 Serial Bus Trigger and Decode (Optional)

1			F	RUN							E	ų	1.9	▼ 97ms	;			A	0	- 3	61:0	JA	RT	Da	ta	Da	ta=	00		
				S1:	UAF	RT								S2										S1	&S	2				Math
		Hex										ASCII																		
	5A	5B	5C	5D	5E	5F	21	00	55	25	60	61	62	63		z	[		]	٨		!		U	%		a	b	с	
	78	00	55	ΒA	68	69	6A	6B	6C	6D	6E	6F	AO	00		x		U		h	i	j	k	1	m	n	o			
	55	25	70	71	72	73	38	00	55	ΒA	78	79	7A	7B		U	%	р	q	r	s	8		U		x	у	z	{	Ref
	7C	7D	7E	7F	20	00	55	25	80	81	82	83	F7	00		Ι	}					U	%							
	55	BA	88	89	8A	8B	8C	8D	8E	8F	9F	00	55	25		U												U	%	
	90	91	92	93	B7	00	55	BA	98	99	9A	9B	9C	9D								U								
	9E	9F	1F	00	55	25	AO	A1	A2	A3	77	00	55	BA						U	%		i	¢	£	w		U		
	A8	A9	AA	AB	AC	AD	AE	AF	9E	00	55	25	BO	B1			O	а				R				U	%		±	
	B2	B3	37	00	55	ΒA	B8	B9	ΒA	BB	BC	BD	BE	BF				7		U						1/4	1/2	₹4	ż	
	1E	00	55	25	CO	C1	C2	C3	F6	00	55	BA	C8	C9				U	%	À	Á	Â	Ã	ö		U		È	É	UART
	CA	СВ	сс	CD	CE	CF	9D	00	55	25	DO	D1	D2	D3		Ê	Ë	Ì	Í	Î	Ϊ			U	%	Ð	Ñ	ò	Ó	2.4V
	B6	00	55	ΒA	D8	D9	DA	DB	DC	DD	DE	DF	1D	00		¶		U		Ø	Ù	Ú	Û	Ü	Ý	Þ	ß			
	55	25	E0	E1	E2	E3	76	00	55	ΒA	E8	E9	EA	EB		U	%	à	á	â	ã	۷		U		è	é	ê	ë	
	EC	ED	EE	EF	9C	00	55	25	F0	F1	F2	F3	36	00		ì	í	î	ï			U	%	ð	ñ	ſ	С	ear		
	55	BA	F8	F9	FA	FB	FC	FD	FE	FF	1C	00	55	25		U		Ø	ù	ú	û	ü	ý	þ	ÿ	5	•	U	λ	
	тх	FR	AME	S:00	0000	029	44											E	ERR	2:00	000	000	29	5(1	0.0	%)				
	СН	x		Fi	ne			Ð			Л	L	50	0us		Л	L,						-	)		1				 11:07 ❶

Figure 12-2 Bus Decode Text Mode

### **Description:**

Two decode channels S1&S2 in the text interface must be configured identically to be opened, and each channel is displayed in chronological order with different colors;

S1/S2/S1&S2 are the channel configuration bus information, and X knob is rotated or the label is switched to change the bus channel;

Clicking save during the text acquisition process can save all currently acquired data. If the date volume is too large, "wait" will be displayed, and the save success prompt will be displayed.

Oscilloscope can be used as a USB 1000Drage device to view saved files on a computer, as shown in Figure 12-3:

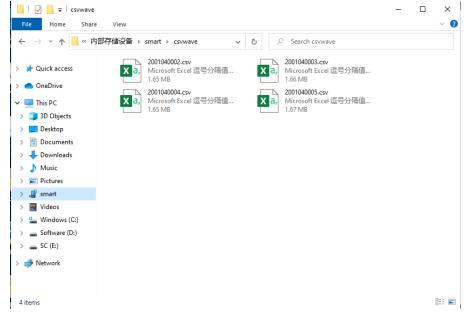


Figure 12-3 Bus Text 1000Drage Files

Chapter 12 Serial Bus Trigger and Decode (Optional)

# 12.1 UART (RS232/RS422/RS485) Bus Trigger and Decode

For correctly decoding UART(RS232/RS422/RS485) bus data and making trigger stable, the bus configuration, trigger mode setting and trigger level need to be adjusted.

### Bus configuration

Left swipe or to open the bus configuration menu, as shown in Figure 12-4. The RX channel must be chosen and the following parameters must be set according to measured signals:

Idle Level — Choose Idle Low or Idle High to match the idle state of measured equipment. For RS232, Idle Low may be chosen.

Note: RS232 industry standard uses "negative logic", namely high level is logic "0" and low level is logic "1".

Parity Bit — Choose odd, even or none depending on measured equipment.

Word Length — Set the number of bits in UART word to match measured equipment (5-9 bits available).

**Baud Rate** — Choose the baud rate that matches signal in measured equipment.

The baud rate can be set within the range from 1.2Kb/S to 8.000Mb/S.

**Bus Display** — Choose hexadecimal, binary or ASCII code display.



Figure 12-4 UART Bus Configuration Menu

Chapter 12 Serial Bus Trigger and Decode (Optional)

When word is displayed in ASCII, 7-bit ASCII format is used. Valid ASCII characters are between 0x00 and 0x7F. To display in ASCII, at least 7 bits in the "Bus Configuration" must be chosen. If ASCII is chosen and the data exceeds 0x7F, the data will be displayed in hexadecimal.

Click the baud rate setting box to open the baud rate selection column. If Cu1000Dm is chosen, click to pop up the

virtual soft keyboard, select the bit to be modified, enter value, and click "Enter" on the virtual soft keyboard to complete setting. The baud rate can be set from 1.2Kb/S to 8.000Mb/S. The virtual soft keyboard is shown in Figure 12-5:



Figure 12-5 Baud Rate Default Setting

**Note:** When there is parity bit, the data word length indicates the total length of data bit plus parity bit. When there is no parity bit, the data word length is considered to be the length of data bit. For example, if the data word length is 8bit, when there is no parity bit, it means that the total length of data bits is 8bit; when there is parity bit, it means that the total length of 1 bit.

### • Trigger mode

Open the trigger configuration menu and select the appropriate trigger type; when choosing UART bus trigger,

the trigger type, trigger relationship and trigger data need to be set, as shown in Figure 12-6:

	Measure	Save	Sample	Dis	play [.]	Trigger	Auto	Userset	
٦	Logic	N Edge	Runt	S	lope	TimeOut	Video	S1 UART	S2 UART
	Start Bit		Stop Bit		Data				
	Condition	<	>	=	¥	Dat	a	55	

Figure 12-6 Trigger Setting Menu

After selecting the trigger data, use the pop-up virtual keyboard to modify it, enter the value, and click "Enter" on the virtual soft keyboard to complete the setting.

UART trigger configuration menu description:

- a) Start bit trigger at the start bit of the measured signal;
- b) 1000Dp bit trigger at the 1000Dp bit of the measured signal, no matter the measured signal uses 1, 1.5, or 2

1000Dp bits or not, the trigger will occur at the first 1000Dp bit.

c)

[data] — Trigger at the specified data bit, when measured signal data bits are effective as 5 to 8bits, select [data], and select the trigger relationship as" =" ">" " <" " $\neq$ ", then select "Trigger Data", press data on the touch screen, and use the pop-up virtual keyboard to modify;

d)

[0:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). Only when the 9th bit is 0, then trigger. The trigger relationship, trigger data configuration are the same as those of [data] trigger;

e)

[1:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). Only when the 9th bit is 1, then trigger. The trigger relationship, trigger data configuration are the same as those of [data] trigger;

f)

[x:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). No matter what the value of the 9th bit is, trigger at the designated data bit. The trigger relationship, trigger data configuration are the same as those of [data] trigger;

g) Parity error — valid when there is parity check at parity bit, trigger while parity error.

### • UART serial decode

The measured signal word length is 8bit; parity bit, none; baud rate, 19.2kb/s, hexadecimal; trigger mode as data bit:55; follow the steps as below:

(1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

- (2) Select the bus type as "UART", click "Ch1", "Idle High", "Parity None", "8bit", "19.20kb/s", display "hexadecimal", then close menu;
- (3) Open the trigger mode setting menu, click "Data", enter 55 manually, and press "enter" to confirm;
- (4) Adjusting the threshold level according to the amplitude level of signal may make the signal to be stably triggered. The UART trigger graphic interface is shown in Figure 12-8:

Method 1: Click configuration information to open the decode channel threshold level adjustment box, and drag the adjustment box upward and downward to adjust the threshold level.

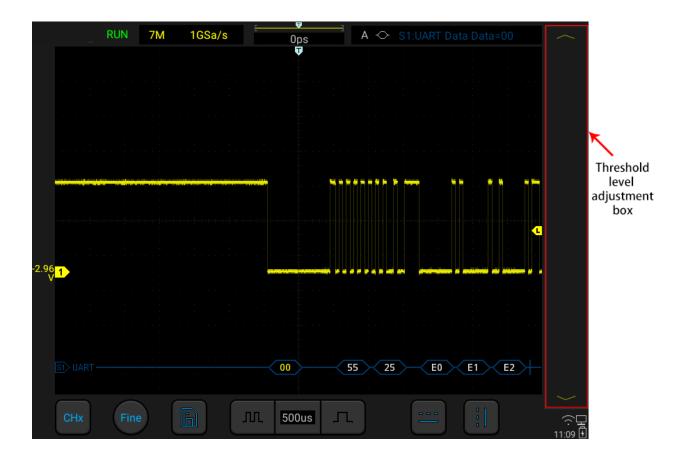


Figure 12-7 UART Decode Level Adjustment

Trigger

Method 2: Long press trigger navigation switch to switch between bus threshold level and trigger level.



Figure 12-8 UART Graphic Interface

# UART graphic interface description:

(1) Trigger position

- (2) Trigger type
- (3) Threshold level
- (4) Configuration information
- (5) Decode the data packet, detailed as follows
- (6) Decode data and the corresponding waveform area

### **UART decode data packet description:**

- (1) Decode data packet displays real-time data about the bus activities;
- (2) Decode data displays as hexadecimal system in white;
- (3) When the word length is 5-8 bits, the decode data displays as two bits of hexadecimal; when the word length is 9 bits, the decode data displays as 3 bits of hexadecimal, and the 9th bit displays at the left side;

(4) When there is error in decode data, if the error is at 1000Dp bit, the data displays in yellow, if it is parity error,

data displays in red;

(5) When "?" appears, the time base needs to be adjusted to view decode results.

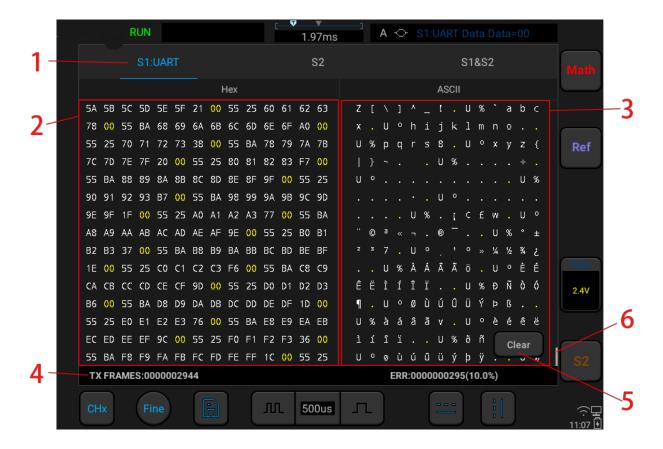


Figure 12-9 UART Text Interface

UART text interface description, see Figure12-9:

- (1) S1/S2/S1&S2 is channel configuration bus information.
- (2) Area for decode data.
- (3) ASCII code corresponding to the text data (when the data format is 9 bits and there is no parity bit, ASCII code corresponds to lower 8 bits of data on the left side).

(4) Counter: Calculates the total number of frames and the percentage of ERR (parity error and 1000Dp bit error)

#### frames.

- (5) Clear: Clear the counter data.
- (6) Roller bar.

In the decode data area, the 1000Dp bit error data is displayed in yellow, and the decode error data is displayed in

red;

# **12.2 LIN Bus Trigger and Decode**

For correctly decoding LIN bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

## Bus configuration

Left swipe or to open the bus configuration menu, and the following need to be set according to measured signal:

Source — Select the signal source of decode.

Idle Level - high and low. Select whether to display high active or low active after the signal start bit of measured equipment.

Baud Rate — Select the baud rate that matches the signal being measured, and it can be cu1000Dmized.

The setting method is the same as that of UART, and will not be repeated here. As shown in Figure 12-10:



Figure 12-10 LIN Bus Configuration Menu

#### • Trigger mode

Open the trigger configuration menu and select the appropriate trigger type. When the LIN bus trigger is selected, the trigger mode includes: synchronous rising edge, frame ID, frame ID and data. See Figure 12-11:



Figure 12-11 LIN Trigger Mode Configuration Menu

- a) Synchronous rising edge When the "Sync Interval" of LIN bus ends, the rising edge triggers.
- b) Frame ID Triggered when a frame with an ID equal to the set value is detected. Select "Frame ID", click data on the touch screen, and use the pop-up virtual keyboard to modify it.
- c) Frame ID and data—triggered when a frame with ID and data equal to the set value is detected. After selecting "Frame ID and Data", click ID or data, and set them.

#### • LIN serial decode

Ch1 is connected to measured signal. The idle level is high and the baud rate is 19.2 kb/s. The trigger mode is synchronous rising edge. Please follow these steps:

- (1) Tap S1 to open the decode channel, and click again to open the bus configuration menu;
- (2) Select the bus type as "LIN", click "Ch1", "Idle High", "19.20kb/s", and then close the menu;
- (3) Open the trigger mode configuration menu and click "Synchronous Rising Edge";
- (4) Click Configuration information to open the decode channel threshold level adjustment box, and drag the adjustment box upward and downward to adjust the threshold level; adjust the threshold level according to the signal amplitude level to make the signal stably triggered. The LIN trigger graphic interface is shown in Figure 12-12:



Figure 12-12 LIN Graphic Interface

# LIN decode data packet description:

(1) Decode data packet displays real-time data about the bus activities.

- (2) Decode data displays as hexadecimal system.
- (3) "Frame ID" displays in yellow, "Data" displays in white, and "Parity sum" displays in green. If the parity sum has error, it is displayed in red "E".
- (4) When "?" appears, the time base needs to be adjusted to view decode results.

-	RUN 7N	/ 1	GSa/s	Ops	A 🔶 S1:LIN S	Sync-Ri	sing		
	S1:LIN			S2		S1&S	2		Math
Ch	Time	ID		Data		Error	Check	Trigger	$\square$
S1	03s144.81	25	00 01 02 03				F9	Yes	
S1	03s149.87	ЗA	08 09 0A 0B 0C 0	D OE OF			A3	Yes	
S1	03s160.13	25	10 11 12 13				B9	Yes	Ref
S1	03s165.18	ЗA	18 19 1A 1B 1C 1	D 1E 1F			23	Yes	
S1	03s175.44	25	20 21 22 23				79	Yes	
S1	03s180.50	ЗA	28 29 2A 2B 2C 2I	D 2E 2F			A2	Yes	
S1	03s190.75	25	30 31 32 33				39	Yes	
S1	03s195.81	ЗA	38 39 3A 3B 3C 3I	D 3E 3F			22	Yes	
S1	03s206.07	25	40 41 42 43				F8	Yes	
S1	03s211.12	ЗA	48 49 4A 4B 4C 4I	D 4E 4F			A1	Yes	LIN
S1	03s221.38	25	50 51 52 53				B8	Yes	1V
S1	03s226.44	ЗA	58 59 5A 5B 5C 5I	D 5E 5F			21	Yes	
S1	03s236.70	25	60 61 62 63				78	Yes	
S1	03s241.75	ЗA	68 69 6A 6B 6C 6I	D 6E 6F			Clea	ar	
S1	03s252.01	25	70 71 72 73				00	, es	
CHx	Fine	Ē	ЛЛ. 50	00us 💷					 11:26 ₺

Figure 12-13 LIN Text Interface

### LIN text interface description, as shown in Figure 12-13:

- (1) "Ch": bus channel.
- (2) "Time": Time intervals between the last frames to current frames.
- (3) "ID": Frame ID value.
- (4) "Data": Frame data.
- (5) "Parity sum": Frame parity sum, the sum of parity error displays in red.
- (6) "Trigger": "Yes" means the frame reaches trigger condition.
- (7) "Clear": Clear counter data.

# 12.3 CAN (FD) Bus Trigger and Decode

1000D1000 support CAN bus, CAN FD(optional) bus trigger and decode. For correctly decoding bus data and

making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

## • Bus configuration

Left swipe or to open the bus configuration menu, the signal source needs to be set, and the signal type and baud rate are set according to measured signal; the setting method is the same as that of UART and will not be repeated here. See Figure 12-14:


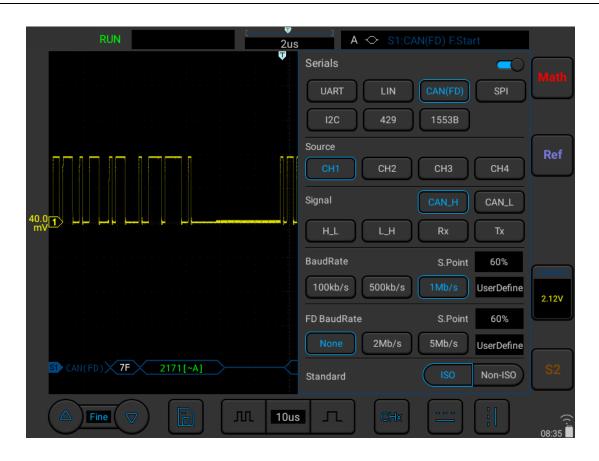


Figure 12-14 CAN / CAN FD Bus Configuration Menu

#### • Trigger mode

Open the trigger configuration menu and select the appropriate trigger type; when S1 CAN bus trigger is selected, as shown in Figure 12-15:



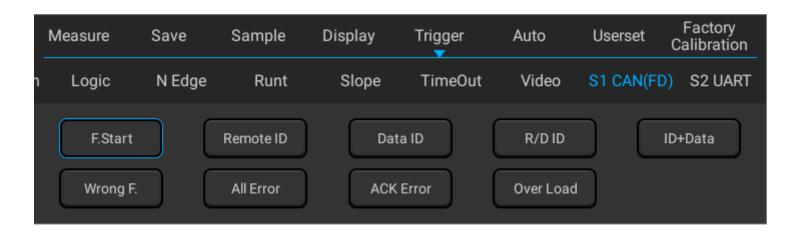

Trigger mode selection menu description:

- a) Frame start trigger at the start of the frame;
- b) Remote frame ID setting the ID matches the remote frame trigger. After selecting the "Remote Frame ID", and then set the ID value at the bottom of the trigger data area

Operation description: Press the numbers on the touch screen and use the virtual keyboard to set;

c) Data framed ID — trigger on data frame that matches set ID. Data frame ID configuration mode is the same as the remote data frame ID configuration;

- Remote frame/data frame ID trigger on remote frame or data frame that matches set ID. Remote frame/data frame ID configuration is the same as the remote data frame ID configuration;
- e) Data frame ID and data ID trigger on data frame that matches set ID and data. The configuration method is the same as the remote frame ID configuration;
- f) Error frame trigger on CAN error frame;
- g) All errors trigger when there is any error in format or activity;
- h) Ack error trigger on recessive (high) Ack position;
- i) Overload frame trigger on CAN overload frame.

# • CAN serial decode

Ch1 is connected to measured signal. The idle level is high and the baud rate is 1Mb/s; the Trigger mode is the frame start. Please follow these steps:

(1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

- (2) Select the bus type as "CAN", and then click "Ch1", "Idle High" and "1Mb/s", FD BaudRate set to None.After setting, click the blank area to close the menu;
- (3) Open the trigger mode configuration menu and click "Frame Start";
- (4) Adjust the threshold level according to the signal amplitude; the CAN trigger graphic interface is shown in Figure 12-16:



Figure 12-16 CAN Graphic Interface

S.point: Sets the sample point from 0% to 99.9% of the position within the bit period or the unit interval.

## CAN decode data packet description:

- (1) Decode data packet displays real-time data about the bus activities.
- (2) Decode data displays as hexadecimal system.
- (3) "Frame ID" displays in yellow, "Data" displays in white, and "DLC" and "CRC" codes display in green. If there is frame error, it is displayed in red "E".
- (4) When "?" appears, the time base needs to be adjusted to view decode results, and "!" indicates that the bus waveform corresponding to the decode data packet is incomplete and the data cannot be displayed correctly.

	RUN 70	x 1GSa/s	E		ps 3	A 🔶 S1	:CVN Data II	D ID=00	00 05
	S1:CAN			S	2		S1&S	2	Ma
Ch	Time	Id	Туре	DLC		Data	CRC	Error	Trigger
S1	04s130.64	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s130.78	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s130.92	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		Re
S1	04s131.06	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.20	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.34	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.48	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.62	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.76	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s131.91	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		CA
S1	04s132.05	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		1.76
S1	04s132.19	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s132.33	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762		
S1	04s132.47	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762	Clea	ır 👘
S1	04s132.61	12EFABCD	EFF	8	50 51 52	53 54 55 56	5 57 0762	ACK	<u> </u>
FRAM	IES:0000029177		SPEC:0	000040	780	ERR FI	R:000002916	6(100.09	6)
CHx	Fine	Ē	лл	5ι	ıs 🗐	-			(- 11:2

Figure 12-17 CAN Text Interface

# CAN text interface description, as shown in Figure 12-17:

- (1) "Ch": bus channel.
- (2) "Time": Time intervals between the last frames to current frames.
- (3) "ID": CAN frame ID value displayed in hexadecimal, maximum 29 bits.

- (4) "Type": Frame type, "SFF" standard data frame, "SRF" standard remote frame, "EFF" extended data frame, "ERF" extended remote frame.
- (5) "DLC": Number of data bytes sent by this frame. This value can be ignored for remote frames.
- (6) "Data": Frame data.
- (7) "CRC": Frame CRC check code.
- (8) "Error": Response error, bit stuffing error, format error, CRC error.
- (9) "Trigger": "Yes" means the frame reaches trigger condition.
- (10) "Statistics": counts the number of occurrences of frame type, data length, status, etc., and the percentage.

# **12.4 SPI Bus Trigger and Decode**

For correctly decoding SPI bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

• Bus configuration

Left swipe or

to open the bus configuration menu, the following need to be set:

Clock source, data source, chip select signal, and data word length, as shown in Figure 12-18:

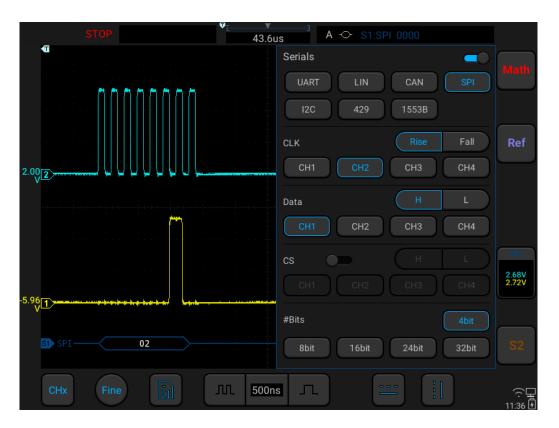


Figure 12-18 SPI Bus Configuration Menu



Open the trigger configuration menu and select the appropriate trigger type; when selecting the SPI bus trigger, as shown in Figure 12-19:

I	Measure	Save	Sample	Display	Trigger	Auto	Userset	
٦	Logic	N Edge	Runt	Slope	TimeOut	Video	S1 SPI	S2 UART
			Data	X:Da	ita			
	Set the Bits				XXXX			

Figure 12-19 SPI Trigger Mode Configuration Menu

The operation method is the same as CAN frame ID to be matched in the configuration, and will not be repeated here.

**Note:** According to the data byte length set by bus decode, the value of the relevant bit within the byte length is set. Trigger when the corresponding bit on data bus matches the set value.

### • SPI serial bus

The measured signal channel Ch1 is connected to CLK, Ch2 channel is connected to DATA, the bus idle state is high, the clock rising edge is sampled; the data word length is 4 bits; the CS chip select is off; the trigger mode matches the "Data" at 0001, please follow the steps below:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as "SPI", click clock as "Ch1" rising edge, the data is "Ch2" high level, and the data word length is "4bit";
- (3) Open the trigger setting menu, click data on the touch screen, and use the virtual soft keyboard to set the data to be matched as "0001";
- (4) Adjust the threshold levels of two channels according to signal amplitude; the SPI trigger graphic interface is shown in Figure 12-20:

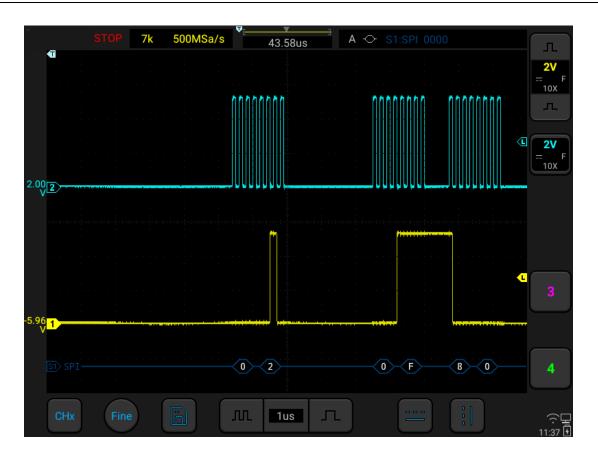


Figure 12-20 SPI Graphic Interface

# SPI decode data packet description:

(1) Decode data packet displays real-time data about the bus activities.

- (2) Decode data displays as hexadecimal system.
- (3) Data displays in white.
- (4) When "?" appears, the time base needs to be adjusted to view decode results.

			A	♥ _E ▼ 43.58us	500MSa/s	V 7k	RUN	
Math		S1&S2		S2		1:SPI		
$\square$	Trigger		Data			ne	Ch Tin	Ch
	Yes				0	93.87	S1 02s59	S1
$\square$	Yes				5	93.88	S1 02s59	S1
Ref					8	93.88	S1 02s59	S1
					9	93.89	S1 02s59	S1
					A	93.89	S1 02s59	S1
					В	93.90	S1 02s59	S1
					c	93.90	S1 02s59	S1
	Yes				2	93.91	S1 02s59	S1
	Yes				9 Q	93.91	S1 02s59	S1
SPI	Yes				8	93.91	S1 02s59	S1
2.68V 2.72V					2	93.92	S1 02s59	S1
2.724					) 7	93.92	S1 02s59	S1
					5 B	93.94	S1 02s59	S1
$\square$	ear	Cle			В	93.95	S1 02s59	S1
S2					D	93.95	S1 02s59	S1
주모 11:37 년		···· :	л	.Л.L. 1us		ine	Hx	СНх

Figure 12-21 SPI Text Interface

### SPI text interface description, as shown in Figure 12-21:

- (1) "Ch": bus channel.
- (2) "Time": Time intervals between the last frames to current frames.
- (3) "Data": According to the data word length setting, the decode data is displayed. For example, if the data word length is 8bit, only one byte displays in the data column; if the data word length is 16bit, 2 bytes display in the data column; if the data word length is 24bit, 3 bytes display; and if the data word length is 32bit, 4 bytes display.
- (4) "Trigger": "Yes" means the frame reaches trigger condition.

Note: "One frame" is measured by the set "data word length" and can meet 1 data bit code stream.

# **12.5 I2C Bus Trigger and Decode**

For correctly decoding I2C bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

#### • Bus configuration

Left swipe or to open the bus configuration menu, Bus configuration includes the serial clock (SCL) and the serial data (SDA) corresponding to the channel settings. See Figure 12-22:



Figure 12-22 I2C Bus Configuration Menu

Notes: When SCL or SDA channel is set, the system will automatically set other channels.

• Trigger mode

Open the trigger configuration menu and select the appropriate trigger type. When the I2C bus trigger is

selected, click the trigger type and relationship on the screen, as shown in Figure 12-23:

h Logic N Edge Runt Slope TimeOut Video S1 I2C S2 UART Start Stop LostACK Restart NoACKInAdr Frame1 Frame2 RomData 10 WriteFrame		Measure	Save	Sample	Displa	ay Trig	ger	Auto	Userse	:t		
	h	Logic	N Edge	Runt	Slo	pe Tir	neOut	Video	S1 I.	2C	S2 UART	
Frame1 Frame2 RomData 10 WriteFrame		Start	Stop			LostACK		Restart	Restart		oACKInAdr	
		Frame1		Frame2		RomData		10 WriteFrame				

Figure 12-23 I2C Trigger Mode Configuration Menu

Trigger mode menu description:

- a) Start condition trigger when SCL is high and SDA has a falling edge (includes restart).
- b) 1000Dp condition trigger when SCL is high and SDA has a rising edge.
- c) Ack Loss Trigger when the bus Ack bit is high.

- d) Restart triggered when a new start condition occurs before the 1000Dp condition.
- Address no ack trigger when the ack bit in the set address field is invalid (ignoring W/R bit), select
   "Address" in the trigger data, and use the pop-up virtual soft keyboard to modify it.
- f) Frame Type 1 Start + Address 7 + Read/Write + Acknowledge + Data; if all bits in the frame type match,
   trigger on read/write frames in 7-bit addressing mode on the 17th clock edge.

Frame type 1 operation method: Select values after the address/data, click values after the address/data on the touch screen, and modify them on the pop-up virtual soft keyboard.

- g) Frame type 2 Start + Address 7 + Read/Write + Acknowledge + Data 1 + Acknowledge + Data 2; trigger on read/write frames in 7-bit addressing mode on the 26th clock edge if all bits in the frame type match. The operation method of configuring frame type 2 is the same as frame type 1, and will not be repeated here.
- h) EEPROM data read When the read operation which contains 1010xxx control byte of the EEPROM appears on the bus and the Ack bit is correct, then the read data can be captured. If the captured data and

the set data match the set relationship condition, trigger on the clock edge of Ack bit after the data byte. After selecting "EEPROM Data Read", click the relationship by "=" " >" "<" "  $\neq$ ", and the setting method is the same as the address field.

i) 10-bit write frame - Trigger on 10-bit write frame on the 26th clock edge if all bits in the pattern match.

Trigger mode is start condition, SCL connect to Ch2, SDA connect to Ch1, follow these steps as below:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as "I2C", open the bus setting menu, and select the clock SCL as Ch2 channel;
- (3) Open the trigger mode configuration menu and click "Start Condition" on the touch screen.
- (4) Set the threshold level of two channels according to signal amplitude; I2C trigger graphic interface is shown in Figure 12-24:



Figure 12-24 I2C Graphic Interface

I2C decode data packet description:

(1) Decode data packet displays real-time data about the bus activities.

(2) Decode data displays as hexadecimal system.

- (3) Address content display: Read address displays in green, write address displays in yellow, and data displays in white. "W" denotes write operation, "R" denotes read operation, "D" denotes decode data, and "~A" denotes no Ack bit.
- (4) When "?" appears, the time base needs to be adjusted to view decode results.

1			Start	0ps A ↔ S1:I2C	)k 50	RUN 350	
Math		2	S1&S	S2		S1:I2C	
L	Restart	Trigger	Confirm	Data	Addr	Time	Ch
		Yes		00	W09	01s918.12	S1
		Yes			W09	01s918.33	S1
Ref		Yes			R09	01s918.44	S1
		Yes			W50	01s918.61	S1
	Yes	Yes		8 19 1A 1B 1C 1D 1E 1F 20	R50	01s918.77	S1
		Yes		00	W09	01s933.43	S1
		Yes			W09	01s933.65	S1
		Yes			R09	01s933.76	S1
		Yes			W50	01s933.92	S1
120	Yes	Yes		25 26 27 28 29 2A 2B 2C 2D	R50	01s934.09	S1
1V 1V		Yes		00	W09	01s948.75	S1
		Yes			W09	01s948.96	S1
		Yes			R09	01s949.08	S1
	ar	Cle			W50	01s949.24	S1
S2	, es	103		32 33 34 35 36 37 38 39 3A	R50	01s949.40	S1
				Л. 50us	Ē	Fine	CHx
11:38		1					

Figure 12-25 I2C Text Interface

### I2C text interface description, as shown in Figure 12-25:

- (1) "Ch": bus channel.
- (2) "Time": intervals between the last read/write operations to current read/write operations
- (3) "Address": in address bar, "R" means the read operation, and "W" means write operation
- (4) "Data": data sent by one read and write operation is in the data bar.
- (5) "Ack": in Ack bar, "X" means Ack bit lost.
- (6) "Trigger": "Yes" means reach trigger condition.
- (7) "Restart": "Yes" means reach restart condition.

# 12.6 ARINC429 Bus Trigger and Decode

For correctly decoding ARINC429 bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

### • Bus configuration

Left swipe or to open the bus configuration menu, the following needs to be set:

Data Source — Select channel for ARINC 429 signal.

Word format — Select ARINC 429 decode mode.

Bus Display — Set the format for ARINC 429 decode data.

Baud Rate — Set the speed of ARINC 429 signal.

As shown in Figure 12-26:

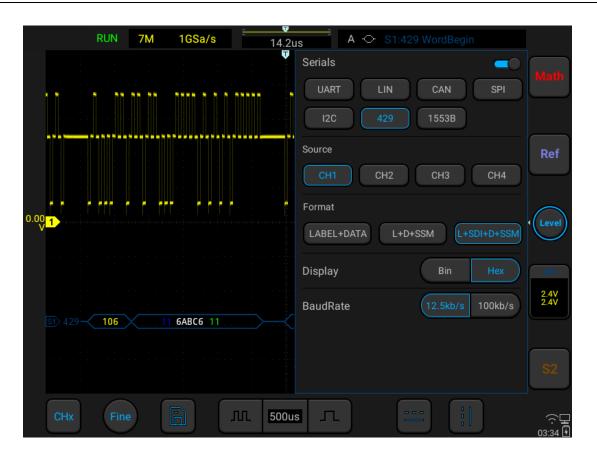


Figure 12-26 ARINC429 Bus Configuration Menu

### • Trigger mode

Open the trigger configuration menu and select the appropriate trigger type; when the ARINC429 bus trigger is selected, click the trigger type and relationship on the screen, as shown in Figure 12-27:

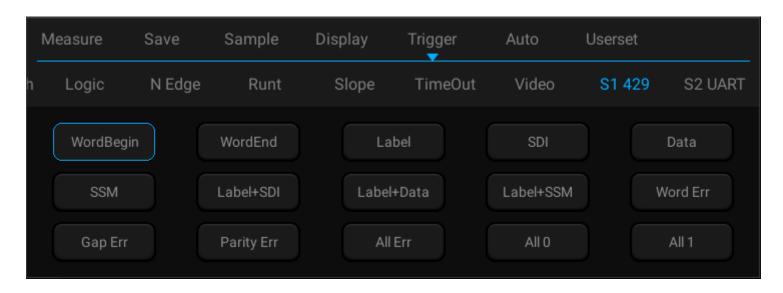


Figure 12-27 ARINC429 Trigger Mode Configuration Menu

If LABEL, SDI (source identifier), DATA or SSM (symbol/status mark) trigger are used, after selecting trigger mode, use the pop-up virtual keyboard to modify it, enter the value, and click "Enter" on the virtual soft keyboard to complete the setting.

Trigger configuration menu description:

- a) Word start: Trigger at the word start.
- b) Word 1000Dp: Trigger at the word 1000Dp.

- c) LABEL: Label, triggered when the specified tag value occurs.
- d) SDI: Source identifier, triggered on the specified source terminal.
- e) DATA: Trigger on the specified data.
- f) SSM: Symbol/status mark, triggered on the specified symbol status matrix.
- g) LABEL+SDI: Trigger on the specified label and the specified source terminal.
- h) LABEL+DATA: Trigger on the specified label and the specified data.
- i) LABEL+SSM: Trigger on the specified label and the specified symbol status matrix.
- j) Word Error Triggered when a word error occurs.
- k) Word gap error: Triggered when a gap error occurs.
- 1) Verification error: Triggered when a verification error occurs.
- m) All errors: Triggered when any of the above errors occur.
- n) All 0 bits: Triggered when any bit with the value of zero occurs.

o) All 1 bit -: Triggered when any bit with the value of 1 appears.

### • ARINC 429 serial decode

The measured signal source is CH1, the decode format is LABEL+DATA, the display is in hexadecimal, the baud rate is 12.5kb/s, and the trigger mode is LABEL, operate as follows:

(1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

Select bus type "429", source as "CH1", decode format as "LABEL+DATA", display in "hexadecimal", baud rate as 12.5kb/s.

(2) Open the trigger setting menu, select the trigger type as bus trigger, S1-ARINC429, the trigger mode is LABEL, and enter LABEL as "106" on virtual keyboard.

Adjust **High trigger threshold level** and **Low trigger threshold level** according to signal amplitude; and ARINC429 trigger graphic interface is shown in Figure 12-28:

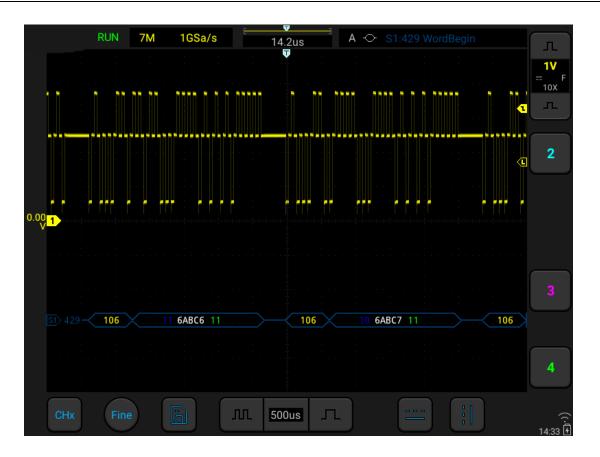


Figure 12-28 ARINC429 Graphic Interface

#### ARINC429 decode data packet description:

(1) Data packet, a total of 32bits, the data format is 8~1 (label bit, high bit first) +9~10(SD) +11~29 (data bit, low bit first) +30~31 (symbol status bit) +32 (parity bit)

- (2) Label (8bits) Displayed in octal: yellow
- (3) SDI (2bits) Displayed in binary: blue
- (4) Data (19bits) Displayed in selected numeration system: white, or red if there is parity error
- (5) SSM (2bits) Displayed in binary: green

	RUN 7	vi 1	GSa/s	14.2us	A 🔶 S1:429		egin		
	S1:429			S2		S1&S	2		Ma
Ch	Time	Label	SDI	Data		SSM	Error	Trigger	
S1	02s944.29	130	00	05 3A 6C		11		Yes	
S1	02s955.48	102	00	06 EF 18		11		Yes	
S1	02s958.34	074	10	02 BB 23		00		Yes	Re
S1	02s961.39	106	00	06 AB CO		01		Yes	
S1	02s964.25	106	01	06 AB C1		10		Yes	
S1	02s967.12	106	10	06 AB C2		11		Yes	
S1	02s969.99	106	11	06 AB C3		00		Yes	
S1	02s972.85	106	00	06 AB C4		01		Yes	
S1	02s975.72	106	00	06 AB C5		10		Yes	_
S1	02s978.59	106	11	06 AB C6		11		Yes	42
S1	02s981.45	106	10	06 AB C7		11		Yes	3.2 1.7
S1	02s984.32	106	01	06 AB C8		11		Yes	
S1	02s987.19	106	00	06 AB C9		11		Yes	
S1	02s990.05	072	11	05 80 84		00	Cle	ar ^S	
S1	02s993.23	144						, es	
WORI	WORDS:000000943 ERRORS:0000000331(35.1%)								
CHx	Fine	Ē							14:3

Figure 12-29 ARINC429 Text Interface

### ARINC429 text interface description, as shown in Figure 12-29:

- (1) "Ch": bus channel.
- (2) "Time": intervals between the last read/write operations to current read/write operations
- (3) "LABLE": label, information identifier, displayed in octal.
- (4) "SDI": source/target identifier, displayed in binary (displays XX if not identified separately).
- (5) "Data": content of the transmitted information, displayed in the selected numeration system.
- (6) "SSM": symbol/status matrix, displayed in binary (displays XX if not identified separately).
- (7) "Error": displays the frame error type (parity error Par, frame error Frm).
- (8) "Trigger": "Yes" means reach trigger condition.

# 12.7 1553B Bus Trigger and Decode

For correctly decoding 1553B bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

### • Bus configuration

Left swipe or to open the bus configuration menu, the data source and display hexadecimal need

to be set, as shown in Figure 12-30:



Figure 12-30 1553B Bus Configuration Menu

### • Trigger mode

Open the trigger configuration menu and select the appropriate trigger type. When the trigger type is 1553B bus trigger, click the trigger type on the screen, as shown in Figure 12-31:

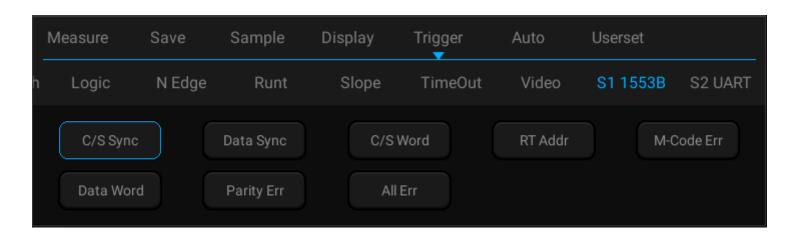


Figure 12-31 1553B Trigger Mode Configuration Menu

Trigger configuration menu description:

- a) Command/status word sync header: Triggered at the beginning of the command/status word (at the end of valid C/S sync pulse).
- b) Data word sync header: Triggered at the beginning of data word (at the end of valid data sync pulse).
- c) Command/status word: Triggered when the specified command/status word is detected.
- d) Remote terminal address: Triggered when RTA of command/status word matches the specified value.

- e) If you select this option, RTA softkey will be available, allowing you to select the hexadecimal remote terminal address value to be triggered on it. If you select 0xXX (irrelevant), oscilloscope will trigger on any RTA.
- f) Manchester coding error: Triggered when a Manchester coding error is detected.
- g) Data word: Triggered when the specified data word is detected.
- h) Odd parity error: Triggered when the odd parity bit is incorrect for data in the word.
- i) All errors: Triggered when an error is detected.

# • 1553B serial decode

The measured signal source is CH1, the bus display is hexadecimal, the baud rate is 12.5kb/s, and the trigger mode is the command/status word sync header, and operate as follows:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as "1553B", source as "CH1', and display in "hexadecimal".

(3) Open the trigger setting menu, select the trigger type as bus trigger, 1553B, and trigger mode as "command/status word sync header".

Channel **threshold level** is adjusted according to signal amplitude. 1553B trigger graphic interface is shown in Figure 12-32:



Figure 12-32 1553B Graphic Interface

#### 1553B decode data packet description:

- (1) Remote terminal address (5-bit data): blue
- (2) The value of remaining 11 bits of the command/status word: yellow
- (3) Decoded data: white
- (4) If the command/status or data word has a parity error, its decoded text is displayed in red instead of green or white.
- (5) The sync error is displayed together with the word "SYNC".

	RUN 14	0k 1	GSa/s	<b>▼</b> 14.2us	A 🔶 S1:1	553B C/S Sync		
	S1:1553E			S2		S1&S2		Math
Ch	Time	Туре	RAdr		Data	Trigger	Error	
S1	04s499.20	C/S	1F	03 E3		Yes		
S1	04s499.22		N/A			Yes		
S1	04s499.23	Data	N/A	FB E3				Ref
S1	04s499.25		N/A			Yes		
S1	04s499.25	Data	N/A	23 45				
S1	04s499.28		N/A			Yes		
S1	04s499.28		N/A					
S1	04s499.30		1F			Yes		
S1	04s499.84	C/S	19	00 67		Yes		
S1	04s499.86	Data	N/A	00 01				1553B
S1	04s499.88	Data	N/A	02 03				1.72V
S1	04s499.90	Data	N/A	04 05				
S1	04s499.92	Data	N/A	06 07				
S1	04s499.94	Data	N/A	08 09		Clea	ar	
S1	04s499.96	Data	N/A	OA OB				S2
CHx	Fine	Ē		10us	л			() 14:31 +

Figure 12-33 1553B Text Interface

# 1553B text interface description, as shown in Figure 12-33:

- (1) "Ch": bus channel.
- (2) "Time": intervals between the last read/write operations to current read/write operations.

- (3) "Type": frame type (data frame DATA, command/status frame C/S, others N/A).
- (4) "RAdr": remote terminal address, displayed in the selected numeration system (N/A for no content display).
- (5) "Data": content of the transmitted information, displayed in the selected numeration system.
- (6) "Trigger": "Yes" means reach trigger condition.
- (7) "Error": displays the frame error type (parity error Par, Manchester coding error M-ch).

This chapter contains the functions of the oscilloscope homepage and describes the functions of all icons on the homepage and settings. You are recommended to read this chapter carefully to understand the homepage functions of the 1000D Series oscilloscope.

•	Oscilloscope	•	Gallery
•	App 1000Dre		• Calendar
•	Settings	•	Electronic Tools
•	File manager	•	Clock
•	Calculator	•	Power Off
•	Browser	•	ES File Explorer

The following figure shows the contents of the oscilloscope home page. Slide left or right to display the remaining applications. See Figure 13-1.



Figure 13-1 Homepage Interface

# **13.1 Oscilloscope (see Chapters 2~12)**

# 13.2 App 1000Dre

Tap the app 1000Dre icon on the homepage to go to the app 1000Dre interface, as shown in Figure 13-2. App 1000Dre content

includes Network, Local, U-disk, and About.

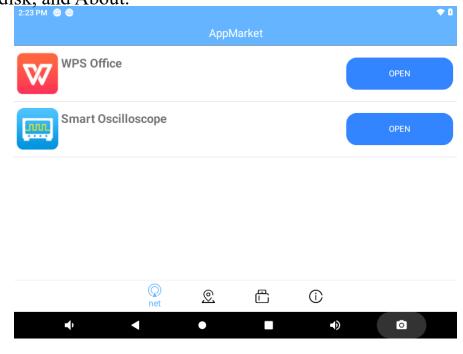


Figure 13-2 App 1000Dre

#### Network

Tap "Network" to open the application list.

Tap app icon to view details such as version number of the current app and app description, and tap the green open option below to open or install the current app.

Tap the green option on the right of the app list to open and install the app.

#### Local

Apps that have been downloaded and installed are displayed locally. When there is no downloaded application installation package file locally, the interface will display "There are no available apk files in the local directory".

#### **U-disk**

The U disk interface will display applications that can be opened in the USB disk.

If the USB disk is not plugged, the interface displays "U-disk not inserted".



After USB disk has been plugged, if there are no apk files in the USB device for installation, the interface displays "There is no available apk file in the U disk directory".

### About

In "About" interface, the equipment model, bandwidth, serial number, version information, shipment date and information about installed options can be viewed. Open the virtual keyboard and enter the license to install the corresponding options.

11:36 AM	0 0 0			🔝 💎 🕯 100%
		AppMarl	ket (	
Serial	e Model: Number: ery Date:		Bandwidth: Version Info:	
Licen				Install
	1553B(Uninstalled) 429(Uninstalled)		Frequency Meter(Installed) Auto Range(Installed)	
	429(Ullinstaneu)		High/Low pass(Installed)	
			UART (Installed)	
			LIN(Installed)	
			SPI(Installed)	
			CAN(Installed)	
	$\bigcirc$	<u>\$</u>	about	
	•I) •	)		0

Figure 13-3 About Interface

The options that can be installed include: UART, LIN, SPI, CAN, I2C, 1553B, 429 and other serial decode (refer to

Chapter 12 Serial Bus Trigger and Decode).

# **13.3 Settings**

Tap settings on Homepage to enter the System Settings interface. Settings on the settings interface include Network

& internet, display, sound, 1000Drage, system and About Oscilloscope, as shown in Figure 13-4.

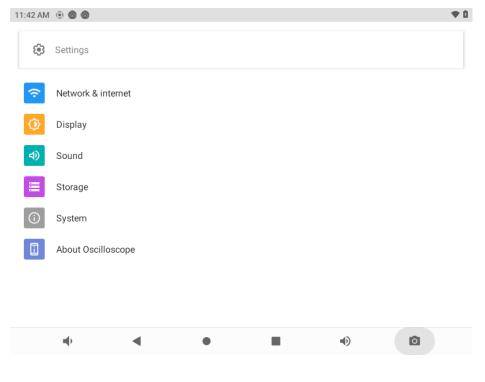


Figure 13-4 System Setting Interface

### WLAN connection

Tap WIFI icon to enter the WLAN settings interface, as shown in Figure 13-5.

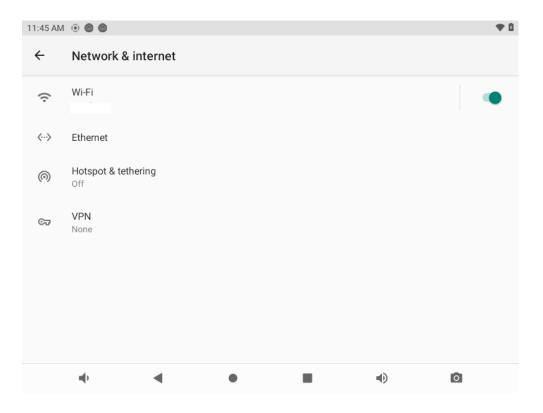


Figure 13-5 WLAN Connection Setting

Tap on/off bar to turn the WLAN function on. Oscilloscope can automatically scan the surrounding wireless networks and display their names by list.

Tap the wireless network to be connected and the password input box will pop up. After entering password using the virtual keyboard, tap Enter to connect oscilloscope to the wireless network.

Click the current network can advanced settings for WIFI.

#### Portable WLAN hotspot

Tap Hotspot to enter the portable hotspot settings interface.

Tap the off icon to open the hotspot. Click "hotsopt name" to enter the network name and password using the virtual keyboard, as shown in Figure 13-6. Other equipment can share oscilloscope files by linking oscilloscope hotspots (portable hotspot default IP is: 192.168.243.155).

1:30 PM	0	•
÷	Wi-Fi hotspot	
	Off	
	Hotspot name AndroidAP_4141	
	Security WPA2-Personal	
	Hotspot password	
	AP Band 2.4 GHz Band	
~	Advanced Turn off hotspot automatically	

Figure 13-6 Portable WLAN Hotspot Setting

# Display

Tap display icons to set the oscilloscope Brightness level, Dark theme, Wallpaper, Font size and Display size.

Brightness level: The progress bar can be dragged to set the brightness of the screen display.

Dark theme: Set Dark theme uses a black background to help keep battery alive longer on some screens.

Wallpaper: Set the screen wallpaper.

Font size: Change the system display font size.

Display size: Make the items on your screen smaller or larger. Some apps on your screen may change position.

#### Sound

Tap the "sound" icon and drag the progress bar in the sound section to change the media volume, alarm volume and notification volume. After clicking the default notification ring tone, drag up and down to select the ring tone, then click OK.

#### 1000Drage

Tap 1000Drage to enter the 1000Drage space view interface, then view the total 1000Drage capacity, size of available space, as

well as memory size of applications (application data and media content), pictures, videos, audio (music, ringtones,

podcasts, etc.), download content, cache data, and others.

If USB device is plugged, it will display the total 1000Drage capacity and available memory size, and can also uninstall

and format SD card.

### Language and input method

Tap System  $\rightarrow$  language & input icons to set your system language and input method.

Language: add a language and drag it to the first position of language list to make it as system language.

Spell Checker: When this function is turned on, it will automatically check for correctness as you type.

On-screen keyboard includes Android keyboard and Gboard, tap +manage on-screen keyboards to turn off one of them.

Advanced setting include Spell checker, Autofill service, Personal dictionary, Pointer speed.

#### Date and time

Tap System  $\rightarrow$  Date & time icons to set your system date and time

Use network-provided time: When turned on, the time provided by the network will be used as the system time.

Date and time cannot be set manually after turning this on.

Set date: Set the system date manually.

Set time: Set the system time manually.

Select time zone: Set the time zone manually.

Use 24-hour system: If on, the system time will be 24-hours, and off for 12 hours.

#### **About Oscilloscope**

In the "About" interface, view legal information, Android version, IP address, build number and other information.

Accept online updates: turn off/on System update, app update, boot interface update, userguide update ...

# **13.4 File Manager**

File manager app can enable quick access to and management of various files 1000Dred on the equipment.

Tap the Files app icon on the homepage screen to enter the file manager interface.

Recent: shows files that have been opened recently

Classification: views files by types, including images, videos, Audio, Documents, Downloads, 1000D etc.

Local: views the content 1000Dred in the oscilloscope by the traditional folder list mode. When USB device is plugged,

the content in the USB device can also be accessed through external 1000Drage.

To operate files, simply press and hold a single file to select it. The selected file will show blue  $\sqrt{}$ . Then, click the remaining files to select them. If all files must be selected, tap the  $\vdots$  icon at the right top of the screen and click Select all, which also includes copy, cut, compress, rename and more operations. Tap the trash icon to delete files.

# **13.5** Calculator

Tap calculator icon on the homepage to open the calculator app.

Calculator can perform simple addition, subtraction, multiplication and division calculations as well as scientific calculations.

# 13.6 Browser

Tap the browser icon on homepage interface to enter the browser interface, and then it can access to the internet if the network condition is good, as shown in Figure 13-7.

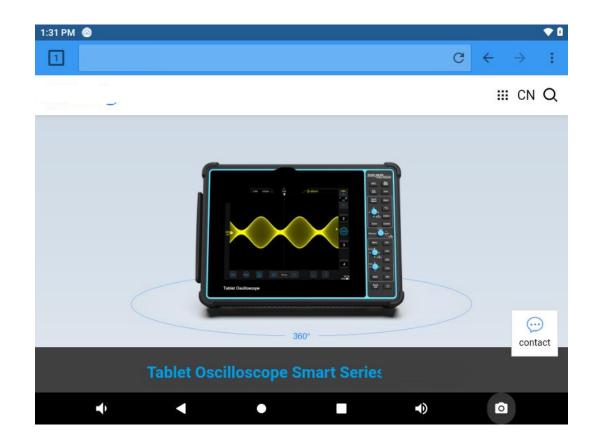


Figure 13-7 Browser Interface

# 13.7 Gallery

Tap gallery application on the homepage interface to enter the picture viewing interface, as shown in Figure 13-8.

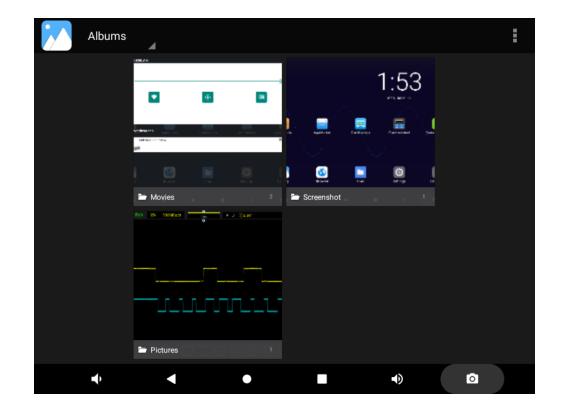


Figure 13-8 Picture Viewing Interface

Gallery provides locally 1000Dred photos/videos with the functions of picture/video viewing and photo editing. In the picture view interface, pictures and videos can be classified into different categories according to the method in the upper left corner, and tap them to view pictures or videos.

When viewing pictures, click to display them in full screen. When viewing videos, swipe left and right to select the video you want to play. Click the triangle play button, and the video will play automatically. Tap the screen to pause play. Drag the pictures left and right when displaying in full screen to view previous and next pictures. Tap the back button to exit the full screen display, as shown in Figure 13-9.

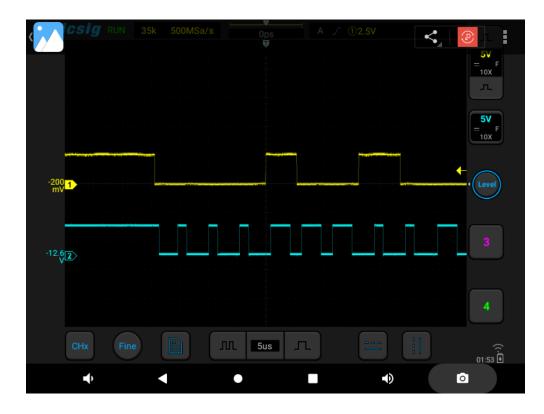


Figure 13-9 Full-Screen Picture Viewing Interface

When viewing pictures and videos, tap the option at the top right of the screen and click to select items. The pictures and videos can be selected. Click the recycle bin icon in the upper right corner of the screen to delete pictures or videos.

After the USB device is connected to oscilloscope, if there are pictures or videos in the USB device, they will be automatically displayed on the picture viewing interface.

# 13.8 Calendar

Tap the calendar app icon on the homepage to enter the calendar interface.

Tap TODAY at the top right of the screen to navigate directly to today's date.

Tap the date at the top left of the screen to adjust the calendar display style by day, week and month.

# **13.9 Electronic Tools**

Electronic tools can provide a convenient set of electronic calculation tools.

#### Chapter 13 Homepage Functions

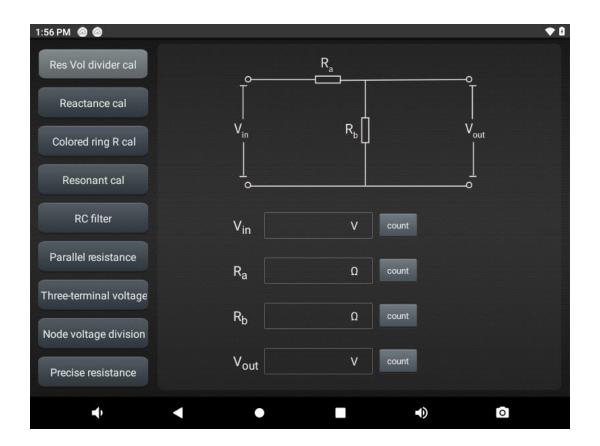


Figure 13-10 Electronic Calculation Tool Function

# 13.10 Clock

Tap time icon on the homepage or tap clock app icon to enter the clock settings screen, as shown in Figure 13-11.

#### Alarm clock

Add an alarm: Click "+" button below to add an alarm clock and create settings.

Alarm time: Drag pink dot in the dial to set the hour, and drag again to set the minute.

Repeat: Monday to Sunday available and click calendar icon on the right to enter the calendar for cu1000Dm selection.

Alarm ringtone: Select alarm ringtone, support local ringtone, system ringtone, none.

Label: The alarm will be displayed on the screen when it rings.

Delete alarm: Click the alarm to be deleted in the list and select "delete" at the bottom of the alarm edit page.

Switch status: Click the switch behind the alarm to turn it on and off.

#### World clock

Add region: Click the bottom globe button and select city in the list of cities.

#### Timer

Add timer: Enter the hour, minute and second, click the triangle button to start countdown.  $_{312}$ 

Chapter 13 Homepage Functions

Delete timer: Click "DELETE" to delete the timer.


Pause: Click the double rectangle button to pause timer.

 
#### 1000Dpwatch

Start: Click "Triangle" to start timing.

Pause: Click "Double Rectangle" below to pause the 1000Dpwatch.

Mark: Click the LAP to mark it.

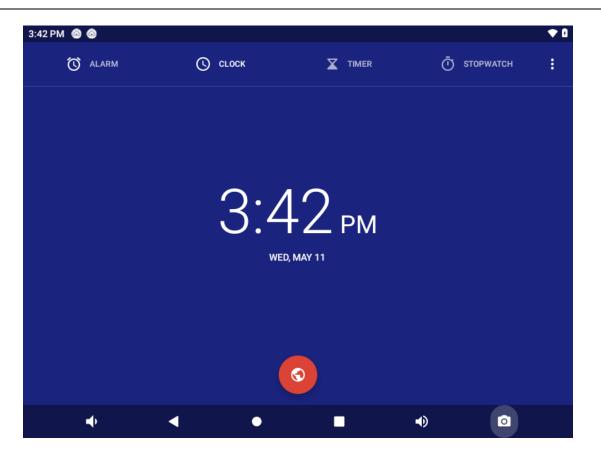



# 13.11 Power Off

Long press power button (b) to enter the power off interface, as shown in Figure 13-12. Power off contains 4 options: Shutdown, Reboot, Standby, Lock Screen.

#### Chapter 13 Homepage Functions


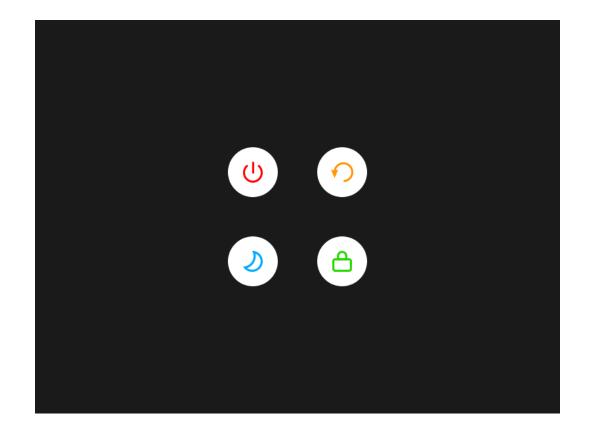


Figure 13-12 Power Off Interface

 Shutdown: Click the
 U
 button to turn off the oscilloscope.

 Reboot: Click the
 D
 button to restart the oscilloscope.

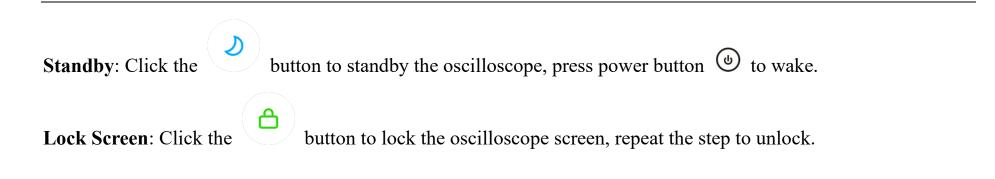

# **13.12 ES File Explorer**

Use the ES file browser to realize wireless transfer of oscilloscope files to computers and 1000Dphones.

Chapter 13 Homepage Functions

Connect the oscilloscope to the Wi-Fi and be in the same network gateway as the computer/1000Dphone, click "Network" on the right side of the ES file Explorer UI, then click "View on PC", and "TURN ON" to obtain the ftp

address and port.



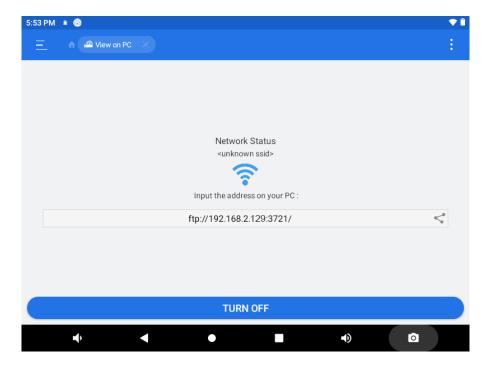


Figure 12-13 ES File Explorer

 **On PC**: Get an ftp client software, here FileZilla is used as an example. Put the computer and the oscilloscope in the same network gateway, create a new site, use the FTP file transfer protocol, enter the Host address and port number generated by the oscilloscope ES file explorer, and set the logon type to anonymous.

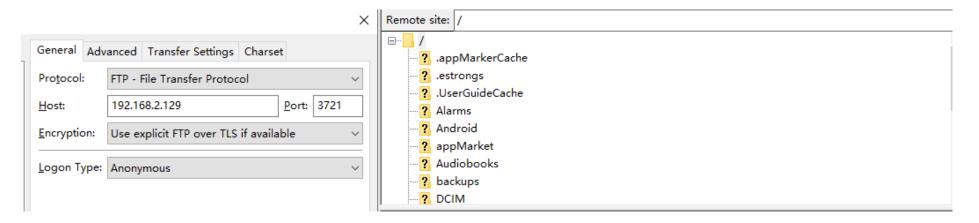



**On 1000Dphone**: Get an ftp client application, take the ES file explorer app as an example. Place the 1000Dphone and

the oscilloscope on the same network gateway, open ftp and enter the URL address and Port number generated by

the oscilloscope ES file explorer, and connect (no need input account & password).

#### Chapter 13 Homepage Functions

5:14 🛓			15:15 🛓	•		•	? ■
ancel	FTP	Connect	<		192.168.2.12	9	
			Q Sea	rch			
URL	192.168.2.129			ownload 7/12 10:06			
Port	3721	_		lovies //06 06:31			
Account	Optional		AC 54 (1945)	CIM 7/05 06:18			
Password	Optional			opMarket 5/10 01:10			
Mode		Passive >		ackups 6/07 01:09			
Codec		Unicode(UTF-8) >		ictures 5/02 03:34			
Title	Optional			ndroid 6/02 01:29			
				serGuide 5/02 01:29			
				lusic 6/02 01:29			
				odcasts 6/02 01:29			
				ingtones 5/02 01:29			+
			My Files	Services	Recents	Transfer	Setting

Figure 12-15 1000Dphone ftp

# **Chapter 14 Remote Control**

This chapter contains the application of host computer, mobile remote control and SCPI commands in order to understand remote control functions of the 1000D Series oscilloscope.

- Host computer
- Mobile remote control
- SCPI

Chapter 14 Remote Control

# **14.1 Host Computer**

To control the instrument using the host computer software, you need to install the NI driver first, then the RemoteDisplay software is downloaded and installed. This software is only suitable for GPS Ltd 1000D Series oscilloscopes.

### 14.1.1 Installation of Host Computer Software

**Note:** The host computer software only supports Win7 or higher edition operating system. The computer needs to install NI-VISA driver first.

The host computer and needed NI-VISA driver can be downloaded from GPS Ltd offical website:

http://www.GPS Ltd.com

Download the host computer software on official website of GPS Ltd, open RemoteDisplaySetup.exe file, and complete the software installation.

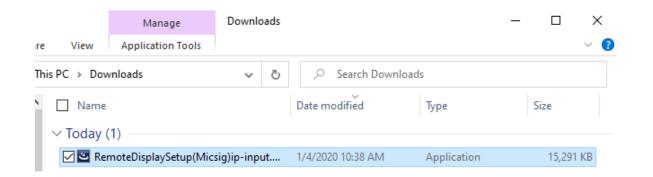


Figure 14-1 RemoteDisplay Software

## 14.1.2 Connection of Host Computer

USB connection: Connect USB Device to the computer and oscilloscope through USB data cable. After the computer recognizes the USB device, open the host computer, set the connection mode to USB we be and display the device information in the device information display box in the lower right corner. This indicates that the oscilloscope has been found. Click to connect to the selected oscilloscope.

WIFI connection: Under the oscilloscope settings  $\rightarrow$  WLAN menu, choose and connect the same WIFI with the computer to ensure that **the computer and the oscilloscope are in the same network**. Open the host computer, set the connection mode to Net Net USB, and display the device information in the device information display box in

#### Chapter 14 Remote Control

the lower right corner. This indicates that the oscilloscope has been found. Click to connect to the selected oscilloscope.

**Enter IP connection:** In case of network connection (WIFI or LAN), directly type oscilloscope IP to be connected in the oscilloscope device information display box in the lower right corner, and then click the oscilloscope connection status button, the host computer will be connected to the oscilloscope corresponding to the entered IP address.

## 14.1.3 Main Interface Introduction

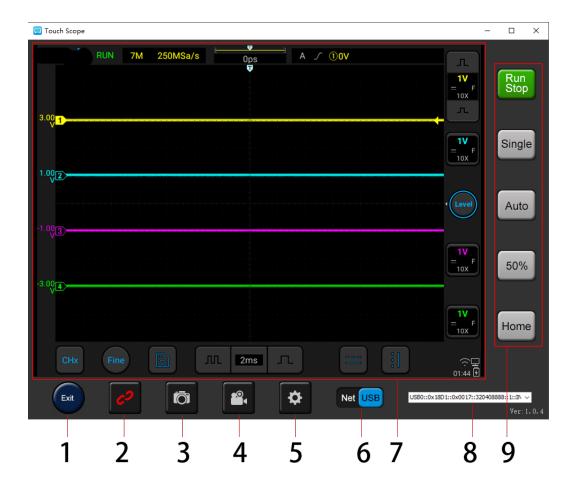


Figure 14-2 Host Computer Interface

Chapter 14 Remote Control

1. Host computer on/off button	Click to exit the host computer software
2. Oscilloscope connection status button	The button has two states:
	Green: Connect to selected oscilloscope when clicked
	Red: Disconnect from oscilloscope when clicked
3. Quick camera button	Click to take photo quickly. Pictures are 1000Dred in the local
	directory C:\Users\Public\Pictures
4. Video record button	Click to open or close video record function. Videos are 1000Dred
	in local directory C:\Users\Public\Videos
5. Host computer 1000Drage button	Set photo taking and video recording 1000Drage locations
6. Select oscilloscope connection	USB and WIFI connections are available
mode	

	Note: WIFI connection must ensure that oscilloscope and computer are in the same network
7. Host computer display area	Synchronous display with oscilloscope
8. Oscilloscope information display	Display oscilloscope model, connection mode, SN, IP and other information, select the oscilloscope to be connected
9. Host computer waveform control area	Waveform control area button has the same function with that button on the oscilloscope

## **14.1.4 Operation Interface Introduction**

The host computer and the oscilloscope are synchronously displayed, and the waveform operation mode and the menu opening and closing mode are the same as those on the oscilloscope; the left mouse button and the single finger operation mode are the same, and both of them can perform the operations of slide, click, drag, etc.

# 14.1.5 1000Drage and View of Pictures and Videos

Chapter 14 Remote Control

#### **1000Drage setting of pictures and videos:**

Open the host computer 1000Drage setting

below:



, set the 1000Drage location of pictures and videos, as shown in the figure

Setting		Х
Snap:	C:\Users\Public\Pictures	
Record:	C:\Users\Public\Videos	
	OK Cancel	

Figure 14-3 Host Computer 1000Drage Setting

Pictures are 1000Dred in the local directory C:\Users\Public\Pictures by default. We can also 1000Dre them under the

directory defined by ourselves according to our own needs. For example, we 1000Dre pictures in a "mini photo"

directory under E-drive disk. We can set the video 1000Drage location in the same way, then click OK.

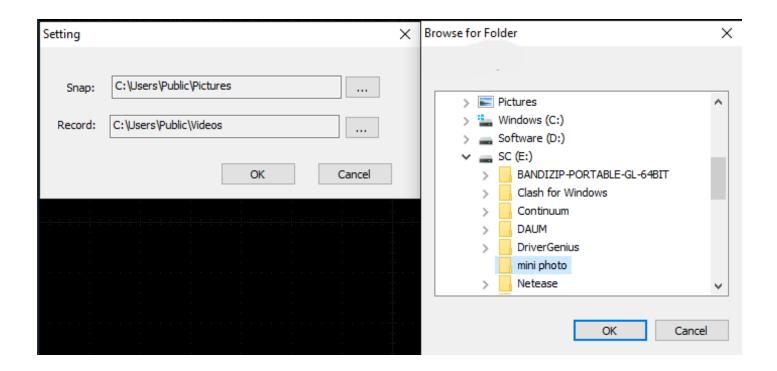


Figure 14-4 Change 1000Drage Directory

#### View pictures and videos:

Open picture (video) 1000Drage directory to view pictures (videos) 1000Dred on the host computer.

Chapter 14 Remote Control

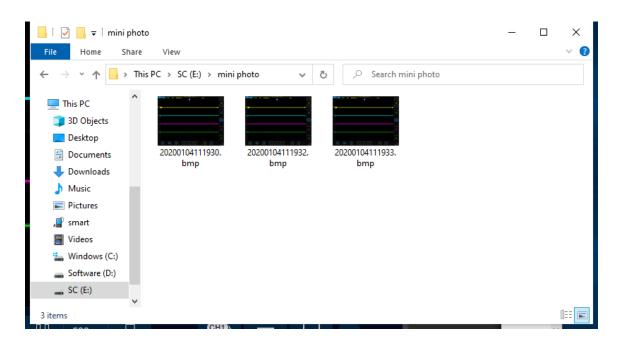


Figure 14-5 View Pictures

# 14.2 Mobile Remote Control

GPS Ltd 1000D Series oscilloscopes support remote control on mobile phone (android & iOS). You need to download

Android app from the official website of GPS Ltd (address: http://www.GPS Ltd.com) and install it. For iOS, go to

apple 1000Dre search Tablet Oscilloscope or GPS Ltd to get it.

After App is successfully connected, mobile device can be used to control the oscilloscope and display the

oscilloscope interface in a real time manner.



Figure 14-6 APP interface

#### Chapter 14 Remote Control



Figure 14-7 Successful Connection of APP

Android APP can be connected by two methods:

 Use oscilloscope portable hotspot: Mobile phone can be connected to the hotspot of oscilloscope. Enter the oscilloscope IP 192.168.45.1 in the IP box at the lower right corner of the screen to connect successfully for control; 2. Connect mobile phone and oscilloscope to the network segment under the same router: view the IP address of the oscilloscope, and enters such IP address in the lower right corner of the mobile phone to connect successfully.

The first connection method is recommended.

# 14.3 SCPI

1000D1000 support users to use SCPI (Standard Commands for Programmable Instruments) commands a computer via USB, LAN or Wi-Fi to program and control the digital oscilloscope.

For more information, refer to the programming guide for this product.

Chapter 15 Update and Upgrade Functions

# **Chapter 15 Update and Upgrade Functions**

This chapter describes the methods of software update and increasing the optional function. You are recommended to read this chapter carefully understand the upgrade functions of the 1000D Series oscilloscope.

- Software update
- Add optional functions

# **15.1 Software Update**

GPS Ltd often releases software updates for its products. To update your oscilloscope software, you can connect the

oscilloscope to WIFI for networking, and open the SystemUpgrade application to check and install update.





Figure 15-1 SystemUpgrade application

Chapter 15 Update and Upgrade Functions

 $\triangle$  Note: Please pay attention to keep the oscilloscope power more than 50% when installing updates or connect the oscilloscope to the adapter, so as to prevent the oscilloscope from becoming abnormal due to insufficient power for update.

To view the currently installed software and firmware, tap the "App 1000Dre" software in the "Home" page to display

the oscilloscope software and firmware information on the "About" screen. Please refer to 13.2 App 1000Dre.

# **15.2 Add Optional Functions**

Tap the "App 1000Dre" software in the "Home" page to display the installed and uninstalled decoded options on the

"About" screen. Please refer to 13.2 App 1000Dre.

UART(Uninstalled)		Frequ	ency Meter(Installed)	
_IN(Uninstalled)		Auto I	Range(Installed)	
SPI(Uninstalled)		High/	Low pass(Installed)	
CAN(Uninstalled)				
2C(Uninstalled)				
553B(Uninstalled)				
429(Uninstalled)				

Figure 15-2 Decode Functions Not Installed

If you need the optional function service, please contact GPS Ltd for license and enter the install option function at

the license bar.

## GPS-1000D Series Tablet Scope

Chapter 15 Update and Upgrade Functions

cence:	Install
	Frequency Meter(Installed)
	Auto Range(Installed)
	High/Low pass(Installed)
	UART(Installed)
	LIN(Installed)
	SPI(Installed)
	CAN(Installed)
	I2C(Installed)

Figure 15-3 Decode Functions Installed

# **Chapter 16 Reference**

This chapter contains the measurement category suitable for the oscilloscope and the environmental level of pollution degree supported. You are recommended to read this chapter carefully to understand the conditions of use of the 1000D Series oscilloscope.

- Measurement Category
- Pollution Degree

Chapter 16 Reference

# **16.1 Measurement Category**

#### **Oscilloscope measurement category**

1000D oscilloscopes are primarily used for measurements in Measurement Category I.

#### Measurement category definitions

Measurement category I is for measurements performed on circuits not directly connected to MAINS. Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the transient withstand capability of the equipment is made known to the user.

Measurement category II is for measurements performed on circuits directly connected to the low voltage installation. Examples are measurements on household appliances, portable tools and similar equipment.

Measurement category III is for measurements performed in the building installation. Examples are measurements on distribution boards, circuit-breakers, wiring (including cables, bus-bars, junction boxes, switches, socket-outlets)

in the fixed installation, and equipment for industrial use and some other equipment, for example, stationary motors with permanent connection to the fixed installation.

Measurement category IV is for measurements performed at the power source of the low-voltage installation. Examples are electricity meters and measurements on primary overcurrent protection devices and ripple control units.

## Transient withstand capability

 $\triangle$  Maximum input voltage of the analog input

Category I 300Vrms, 400Vpk.

# **16.2 Pollution Degree**

Pollution Degree	1000D Series oscilloscopes can operate in environments with pollution degree 2 (or
	pollution degree 1).

Chapter 16 Reference

Pollution Degree	Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The
Categories	pollution has no influence. For example: a clean room or air-conditioned office
	environment.
	Pollution degree 2: Normally only dry, non-conductive pollution occurs.
	Occasionally temporary conductivity caused by condensation may occur. For
	example: general indoor environment.
	Pollution degree 3: Conductive pollution, or dry, non-conductive pollution occurs
	which becomes conductive due to condensation. For example: sheltered outdoor
	environment.
	Pollution degree 4: Pollution that generates persistent conductivity through
	conductive dust, rain, or snow. For example: outdoor locations.

- 1. If the oscilloscope does not start up at power on, please follow steps below:
  - Check the power cord to verify whether it has been connected properly and whether the power supply is normal;
  - Check the power on/off buttons to ensure it has been pushed, and if you are using battery, check whether the battery is in good condition;
  - Check the Power-off lock on the side of oscilloscope;
  - Contact GPS Ltd if the problem persists, and we will provide service to you.
- 2. If acquired waveforms do not display on the screen when the signal source is connected, please follow the steps below:
  - Check whether the probe is connected correctly in the BNC socket;
  - Check whether the probe is connected correctly in the signal source;

- Check whether the trigger type is correctly selected;
- Check whether trigger conditions are set correctly
- Check whether signal source is working properly;
- Check whether the channel is turned on;
- Check whether the vertical scale factor is set correctly;
- Check whether the instrument is in single-sequence waiting state for trigger
- Tap resample signal.
- 3. If the measured voltage amplitude is 10 times greater or smaller than the actual value:
  - Check whether the set attenuation factor of the channel is consistent with the attenuation factor of the actually used probe.
- 4. There is a waveform display, but cannot be stable:

- Check the trigger source on the trigger type menu to ensure that it is consistent with the actually used signal channel;
- Check the trigger type: edge trigger is adopted for general signal, and video trigger mode for video signal.
   Only the correct trigger mode is used, the waveform can be displayed stably;
- Check signal source noise. Set the trigger coupling mode to be high-frequency rejection or low-frequency rejection to filter out high frequency or low frequency noise interference
- 5. A waveform is displayed but inconsistent with the input waveform:
  - Check whether the coupling mode setting in the channel menu is correct.
- 6. If there is no display after pressing Stop button:
  - Check whether the trigger mode is "Normal", and whether the trigger level is beyond the scope of the waveform. Center the trigger level and set the trigger mode as "Auto".
  - Check whether the picture is displayed in full screen, and if so, exit the display.
- 7. If the display becomes slower after setting average times of sampling:
- 344

- If the average times are above 32, it is normal for the general speed to become slow.
- You can reduce the average times.

## 8. Staircase waveform is displayed:

- This phenomenon is normal because the horizontal time base is too low, and the horizontal time base may be increased to raise the horizontal resolution, and then improve the display;
- The display type may be "line". The connection between sampling points may lead to the display of staircase waveform. This problem can be solved by setting the display type as "point" display mode.

### 9. There is persistence of vision in waveform display:

- This phenomenon is normal because the persistence time may be set too long, and the waveform persistence shows persistence of vision;
- The reason may be that sampling mode is set to envelope of sampling, and the sampling mode can be modified to normal waveform for normal display

- 10. During measurement, the measured value is displayed as -----:
  - This phenomenon is normal. When the channel waveform displays beyond the waveform display area, the measured value is displayed as -----. If the channel vertical sensitivity or vertical position is adjusted, the measured value can be displayed correctly;
  - This phenomenon is normal. When there is no full-cycle waveform in the waveform display area, the measured value may be displayed as -----. If the time base is adjusted, the measured value will be displayed correctly.
  - This phenomenon is normal, and the measured value of the FFT waveform is displayed as -----.
- 11. CSV files cannot be selected when loading reference:
  - CSV files are not the supported format that can be loaded into reference channels.
- 12. Tap the button during the use of oscilloscope, there is no beep sound:
  - Check whether the sound volume setting is correct.
- 13. Oscilloscope backlight has low brightness:

- Check whether the backlight settings are correct.
- 14. A waveform being moved changes abruptly:
  - Check whether the picture is displayed in full screen.

## **15.** Turn off the channel at Auto state:

• This phenomenon is normal. At Auto state, the channel with an amplitude less than 10mV will be turned off.

#### 16. Function buttons are pressed without response:

• Check whether the picture is displayed in full screen.

# **Chapter 18 Services and Support**

**Service Commitments :** GPS Ltd guarantees that the products are manufactured and tested according to national standards or enterprise standards, no unqualified products will leave our factory and the first-class cu1000Dmer services are provided for all sold products. During the warranty period, in case the product is verified by GPS Ltd to have deficiencies, GPS Ltd will conduct free maintenance for the user. The detailed warranty clauses can be referred to the product warranty card or obtained by contacting the official after-sales cu1000Dmer service of GPS Ltd.

In accordance with the relevant provisions of after-sale service of industrial products and the enterprise's own capacities, GPS Ltd commit as follows:

**Repair Commitments :** GPS Ltd commits to use the original factory parts for products returned by the user for repair (under warranty or not) and the commissioning and testing standards are identical with new products. GPS Ltd the obligation to inform the cu1000Dmer, but without any other obligations for non-product defects or products

with decreased performance not for objective reasons.

348

Chapter 18 Services and Support

Service Time Commitments : GPS Ltd will give a reply of the time and cost for repair within 2 working days after

receiving the product returned by the user for repair. After the reply is confirmed, the repair period for a general

fault is 5 working days and shall not exceed 10 working days for any special fault.

#### **Contact us**

GENERAL POLYTRONIC SYSTEMS LTD. 14 REGENTS STREET, LONDON NW10 5LG, UK TEL: 0044 (0) 20 8960 96 88 FAX: 0044 (0) 20 8964 36 00 E-mail: sales@gpslimited.com www.gpslimited.com

# Annex

# **Annex A: Maintenance and Care of Oscilloscope**

## **General maintenance**

Do not put or leave the instrument in a place where the LCD display will be exposed to direct sunlight for long period.

**Caution:** To avoid damage to the oscilloscope or probes, do not expose them to sprays, liquids, or solvents.

### **Clean oscilloscope**

Examine the oscilloscope and probes as often as operating conditions require. To clean the exterior surface, perform the following steps:

• Use a soft cloth to remove floating dust on the outside of the oscilloscope and probes. Take care to avoid scratching the touch screen while cleaning.

Annex

- Use a soft cloth dampened with water to clean the oscilloscope while doing this please keep the power off. Wipe with a mild detergent and water. Do not use any corrosive chemical cleaning agent, in order to avoid damaging the oscilloscope or probe.
- Clean the ventilation hole with a soft brush to keep it unimpeded. Do not use any corrosive chemical cleaning agent, so as to avoid damage to the oscilloscope motherboard.
- If the fan needs to be cleaned, please consult the after-sales service personnel, so as to avoid damage to the oscilloscope.

# ⚠ Warning

Make sure the instrument is dry before recharging, to avoid electrical short circuit or personal injury caused by moisture.

## 1000Dre oscilloscope

The lithium battery needs to be charged before 1000Dring the oscilloscope for a long period.

# **Battery charge**

Upon delivery, the lithium battery may not be charged. It takes 6 hours to be fully charged (the oscilloscope is recommended to turn off to save the charging time). When running on battery power, the battery level indicator in the lower right corner of the screen will indicate the battery usage.

**Caution:** In order to avoid charging battery from overheating, do not use beyond the permitted environmental temperature value given in the technical specification.

# **Annex B: Accessories**

#### **Standard accessories**

- 1) 4 pcs or 2 pcs for 10X standard probes (incl. grounding nut, grounding crocodile clip, standard rubber plug)
- 2) Power adapter (12V DC, 4A)
- 3) Power cord
- 4) 1000D calibration certificate
- 5) 1000D packing list

Annex

## **Optional accessories**

- 1) Oscilloscope suitcase/handbag
- 2) Battery
- 3) High voltage probe
- 4) Differential probe
- 5) Current probe

This manual is subject to change without notice.

The contents of this manual are considered correct. If the user finds any error or omission, please contact

GPS Ltd.

The company will assume no responsibility for accident or hazard caused by the improper operation of the user.

The copyright of this manual shall belong to GPS Ltd. Any organization or individual may not duplicate, copy

or excerpt the contents without GPS Ltd's authorization. GPS Ltd reserves the right to claim against such actions.